 
 


1-36

 
Верх / Top / Yläpuoli

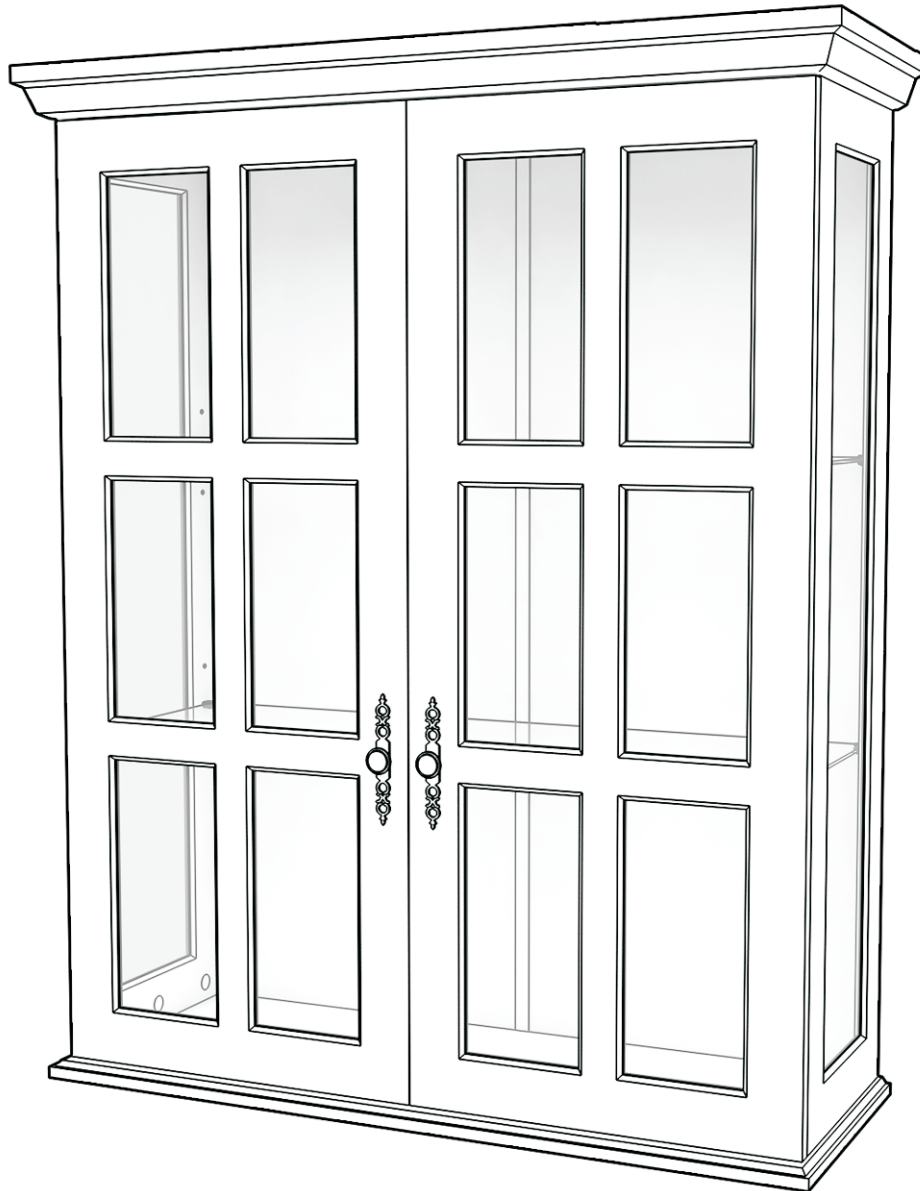


- RU** Инструкция по сборке
- EN** Assembly instruction
- FI** Koontaohje



1006
36



1004
8

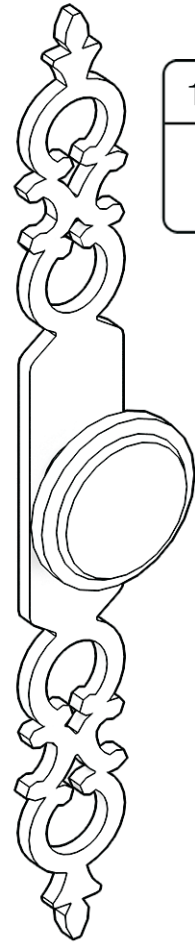 

1070
2



 
1096
12




1097
12




1038
30

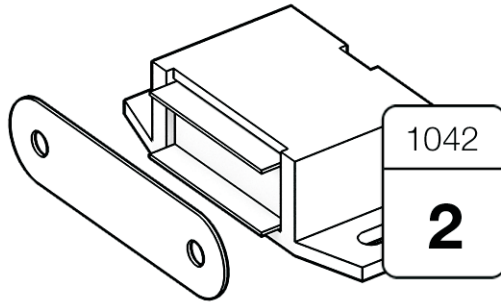


1042
2

 


1100
8

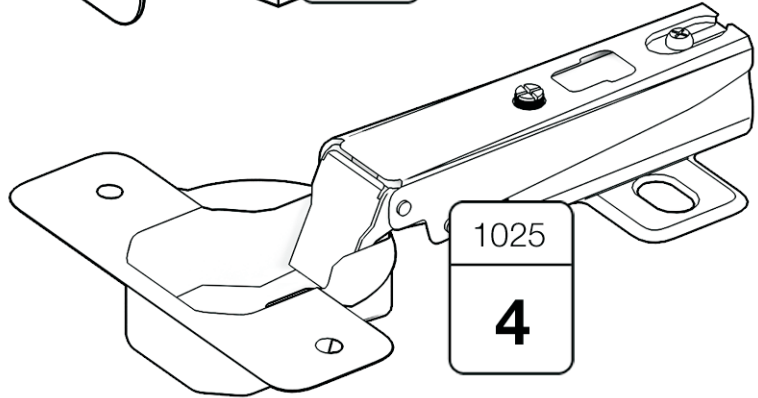 


1025
4

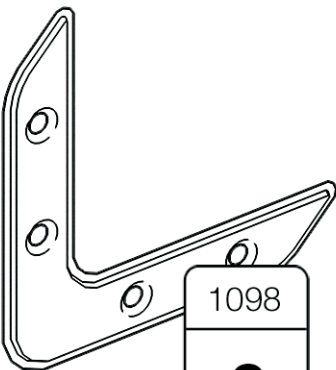 


1098
2

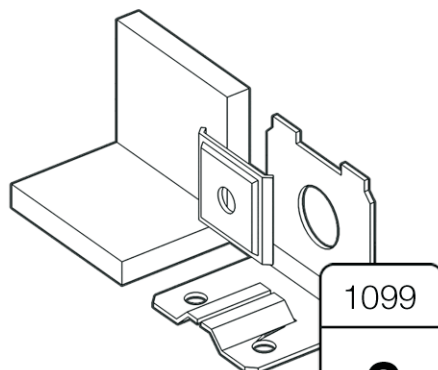 


1099
2

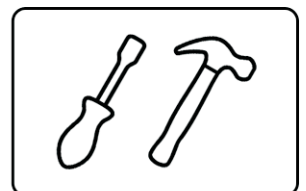 


1


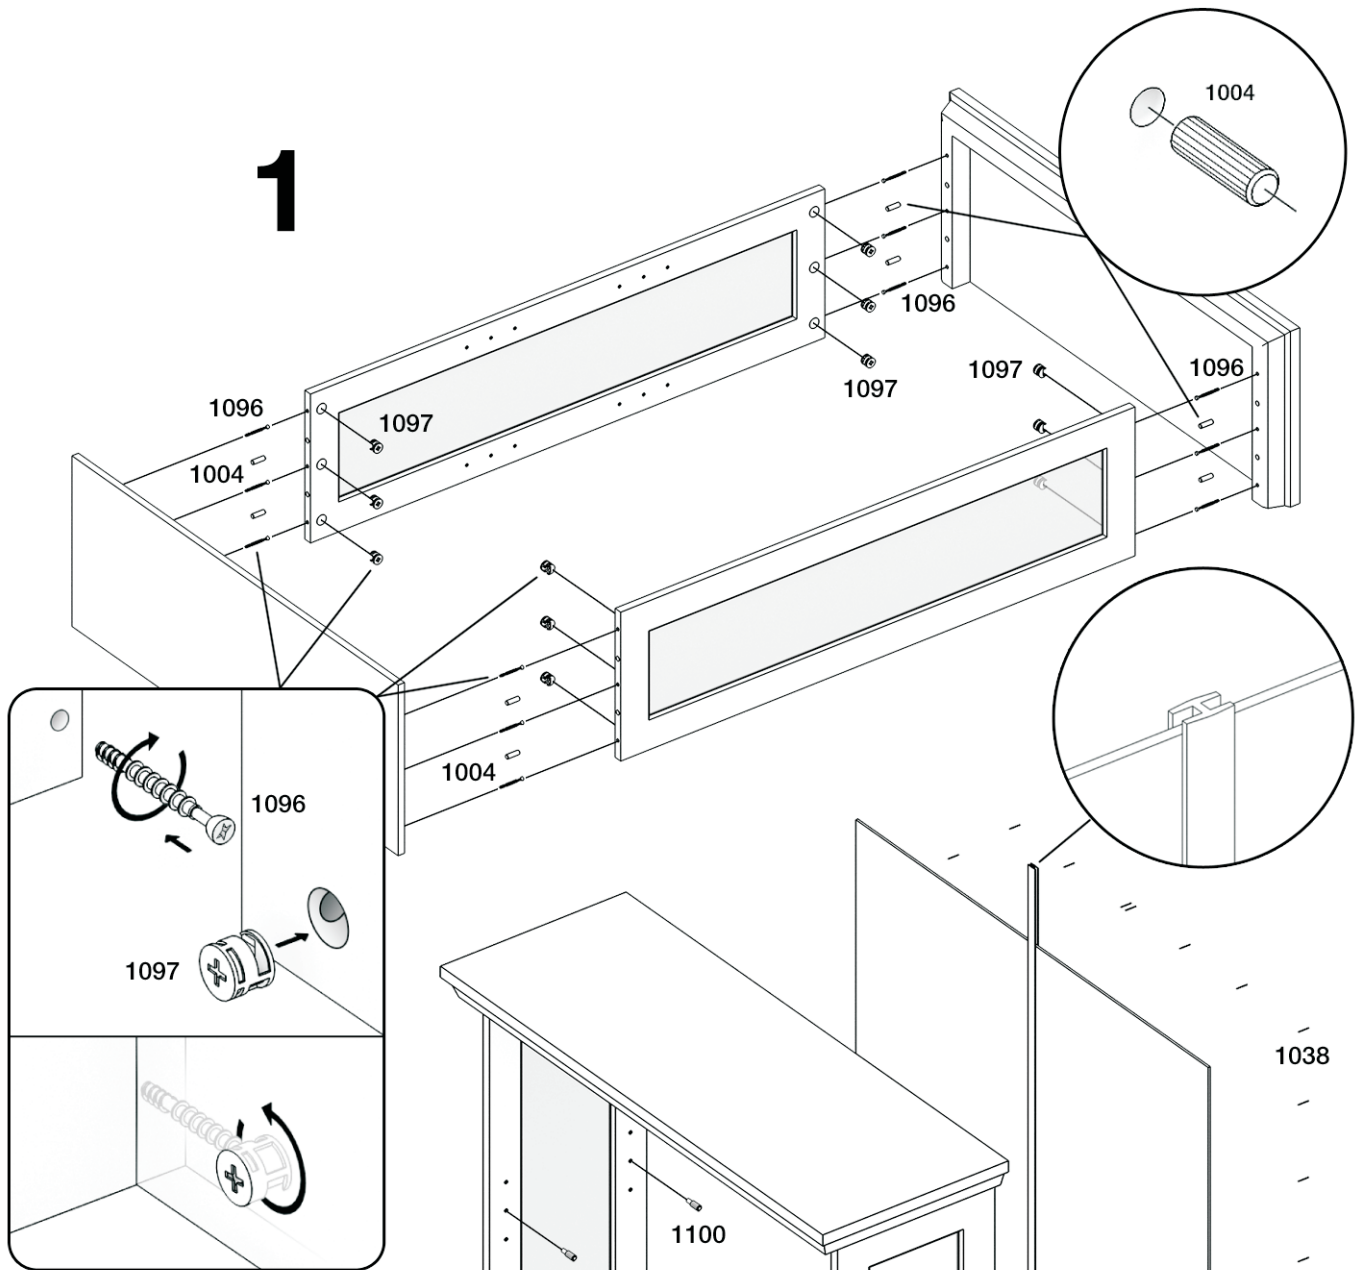 


2


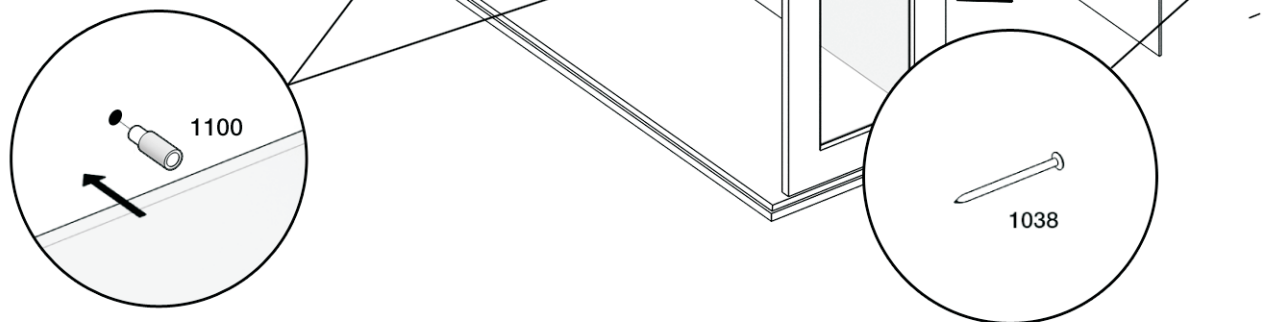 


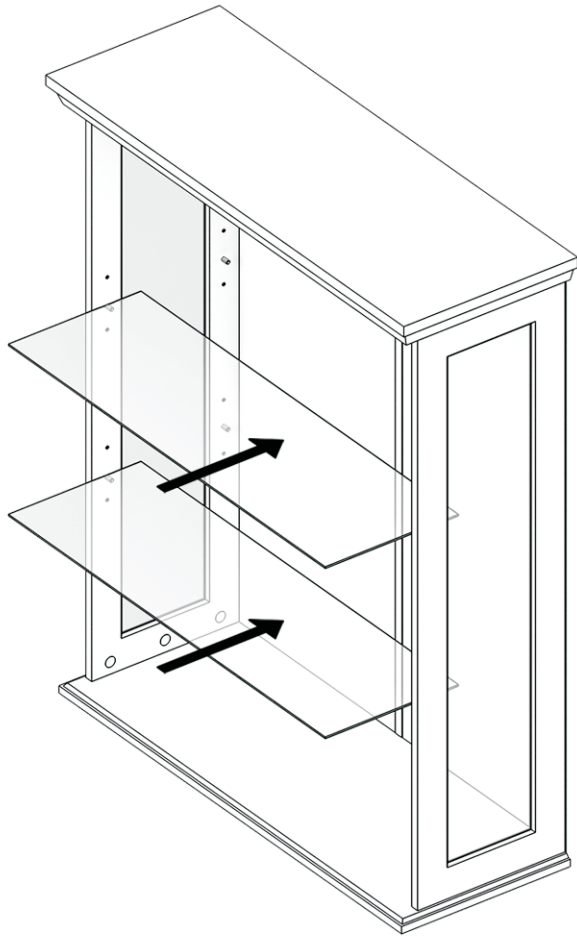 

3

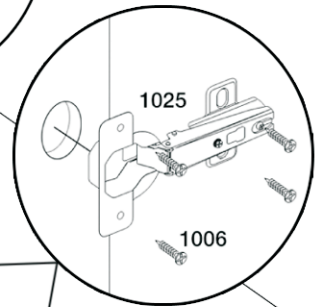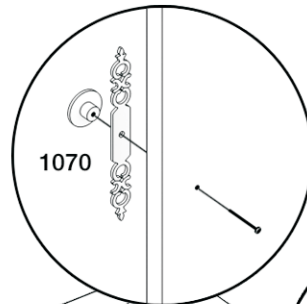  

4

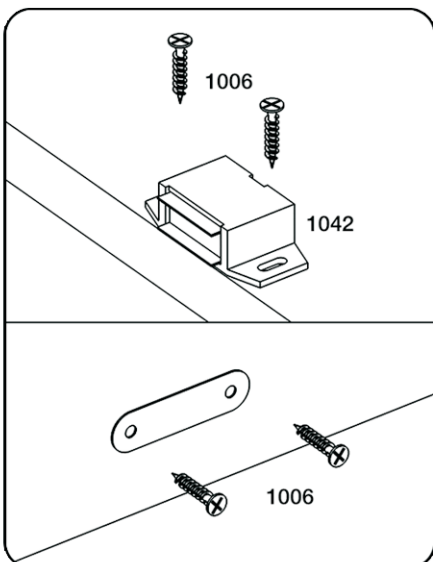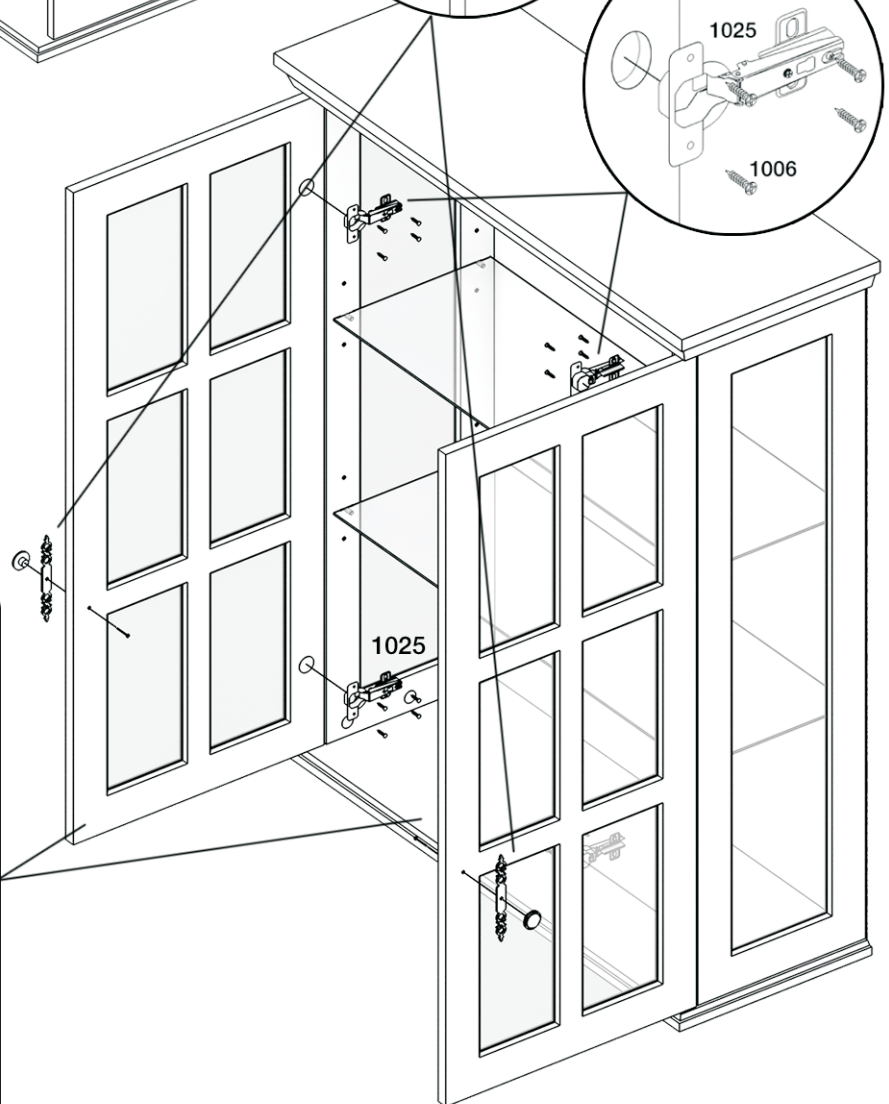  

5

