 


2-55

2-61, 2-64, 2-67, 2-68

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Низ / Bottom / Alapuoli

 
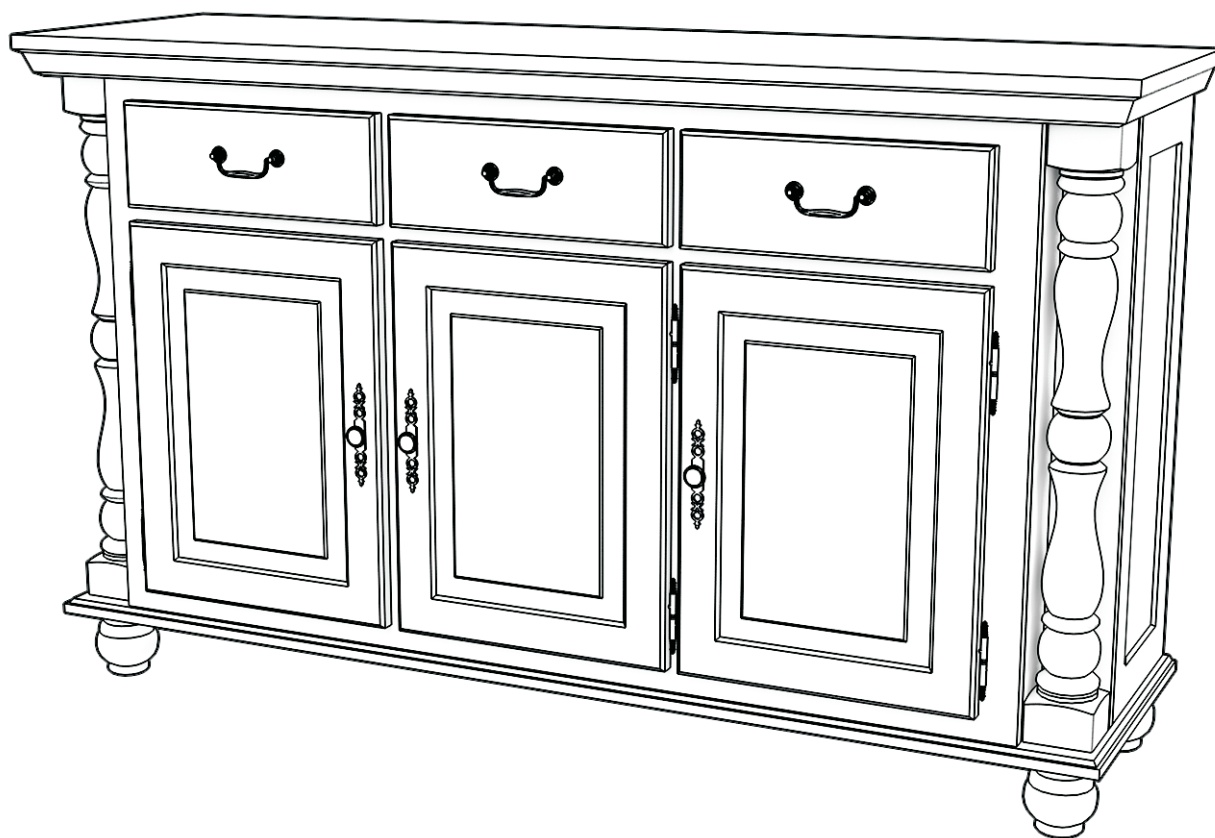 


 
 
RU Инструкция по сборке

 
EN Assembly instruction

FI Koontaohje

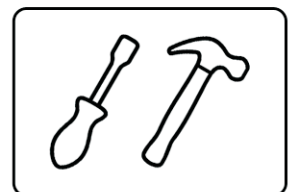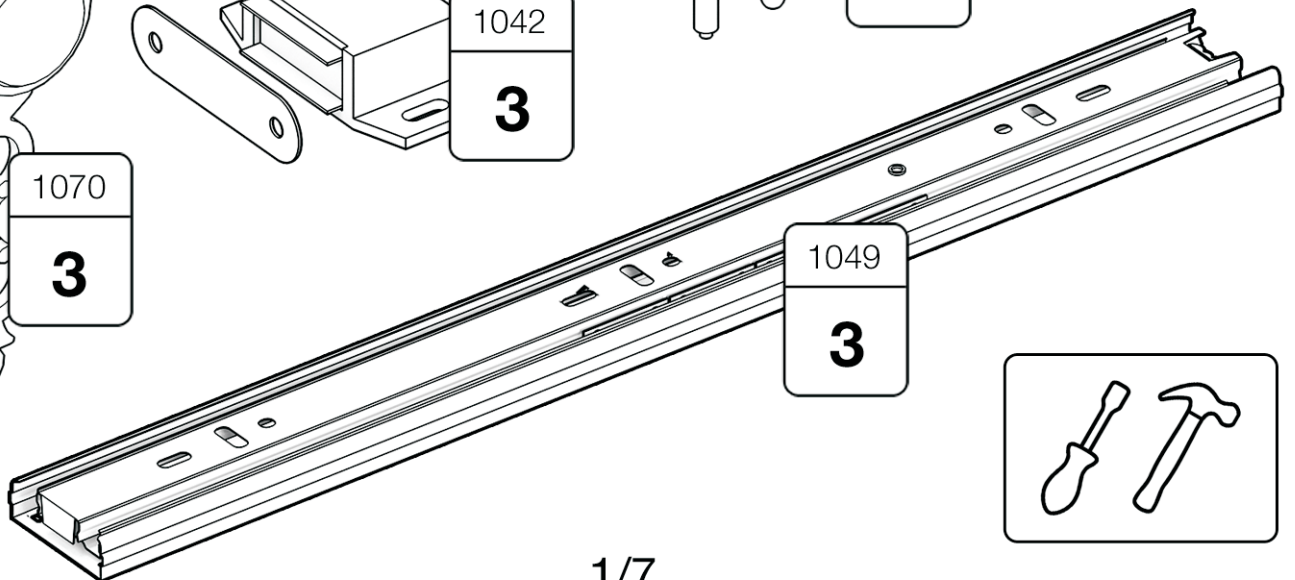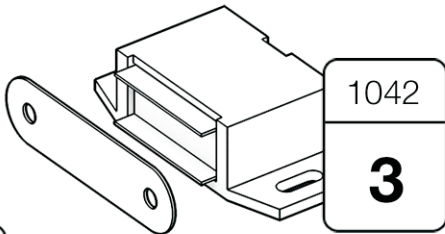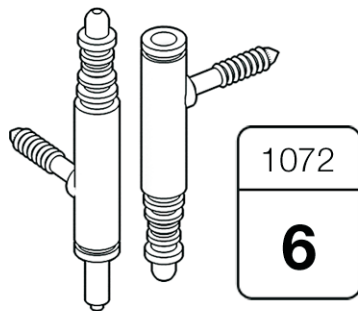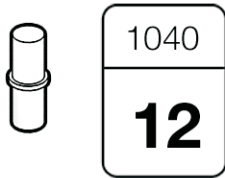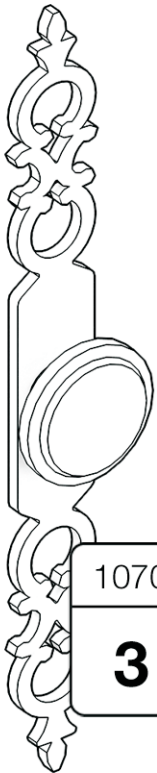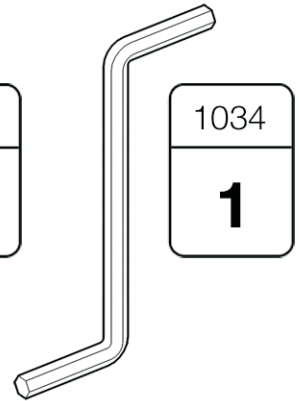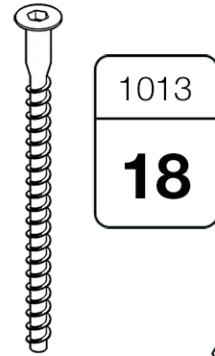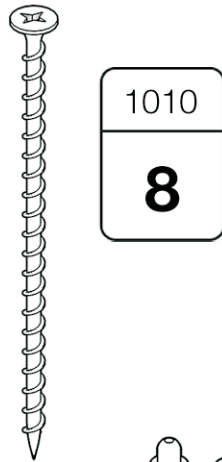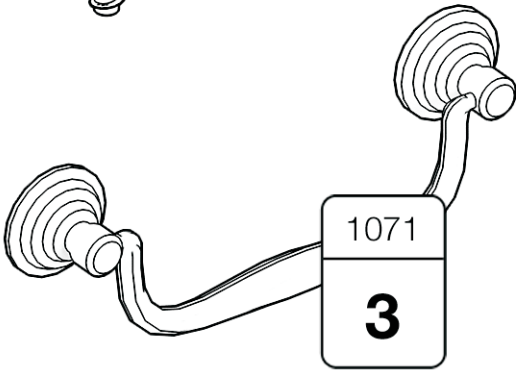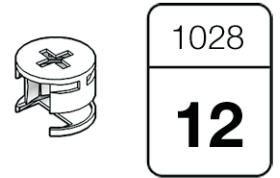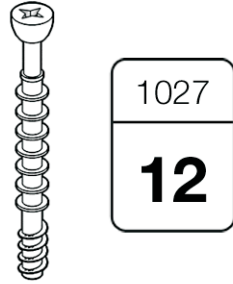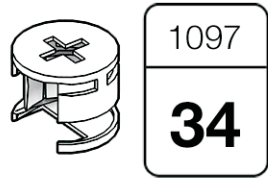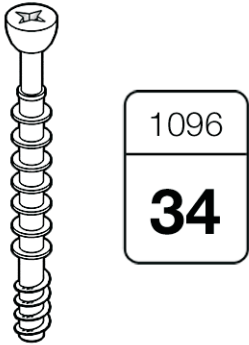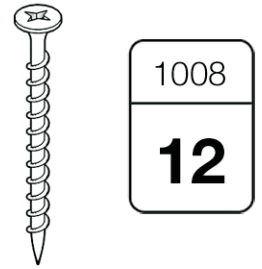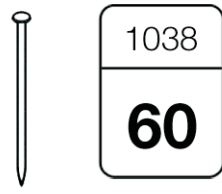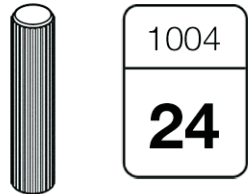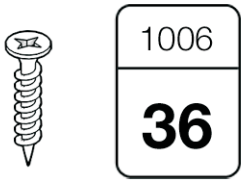


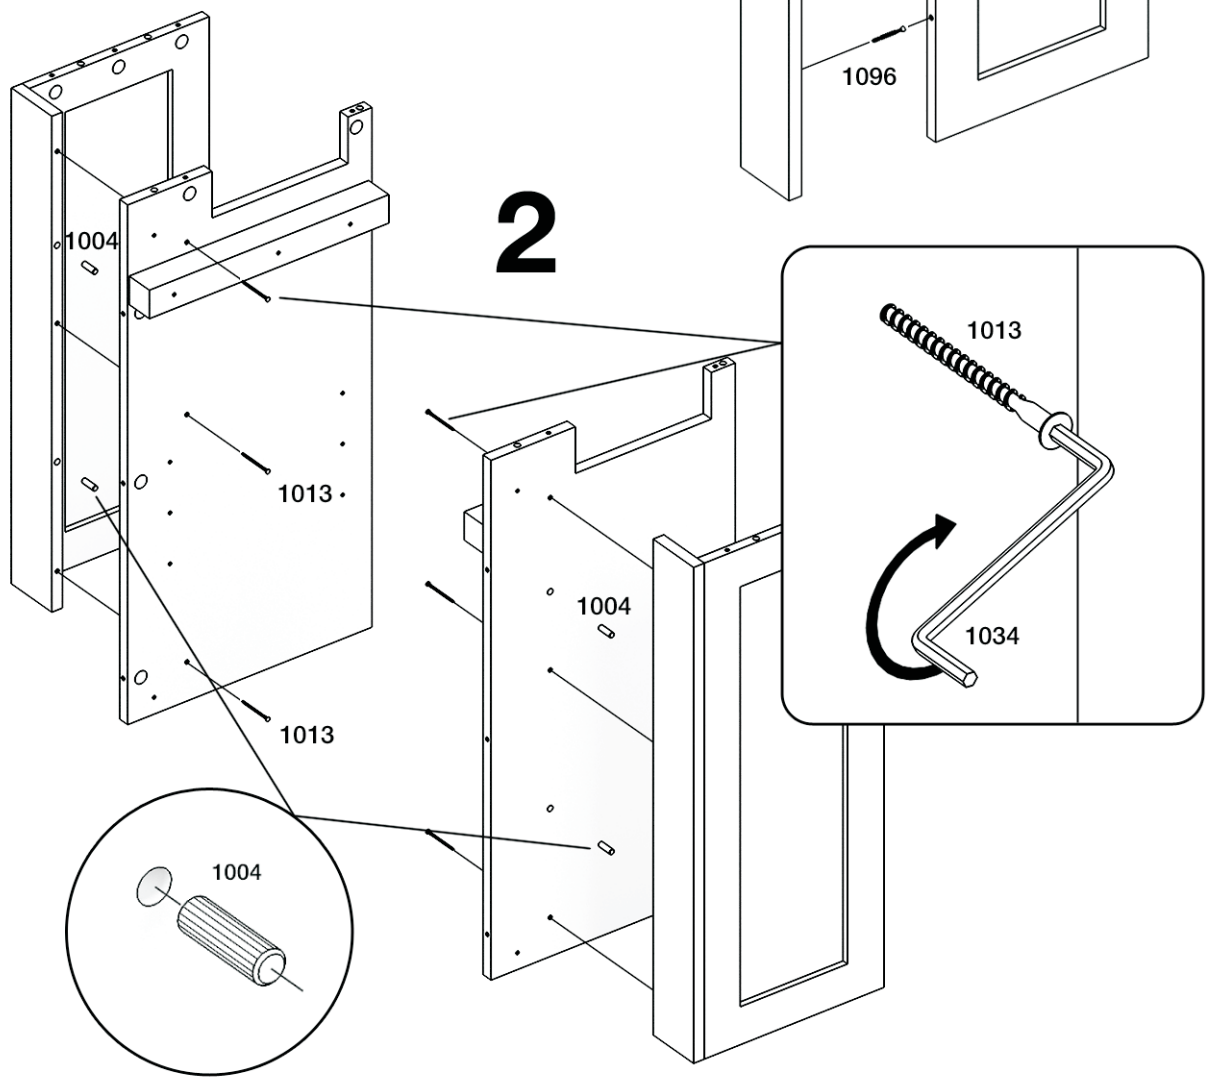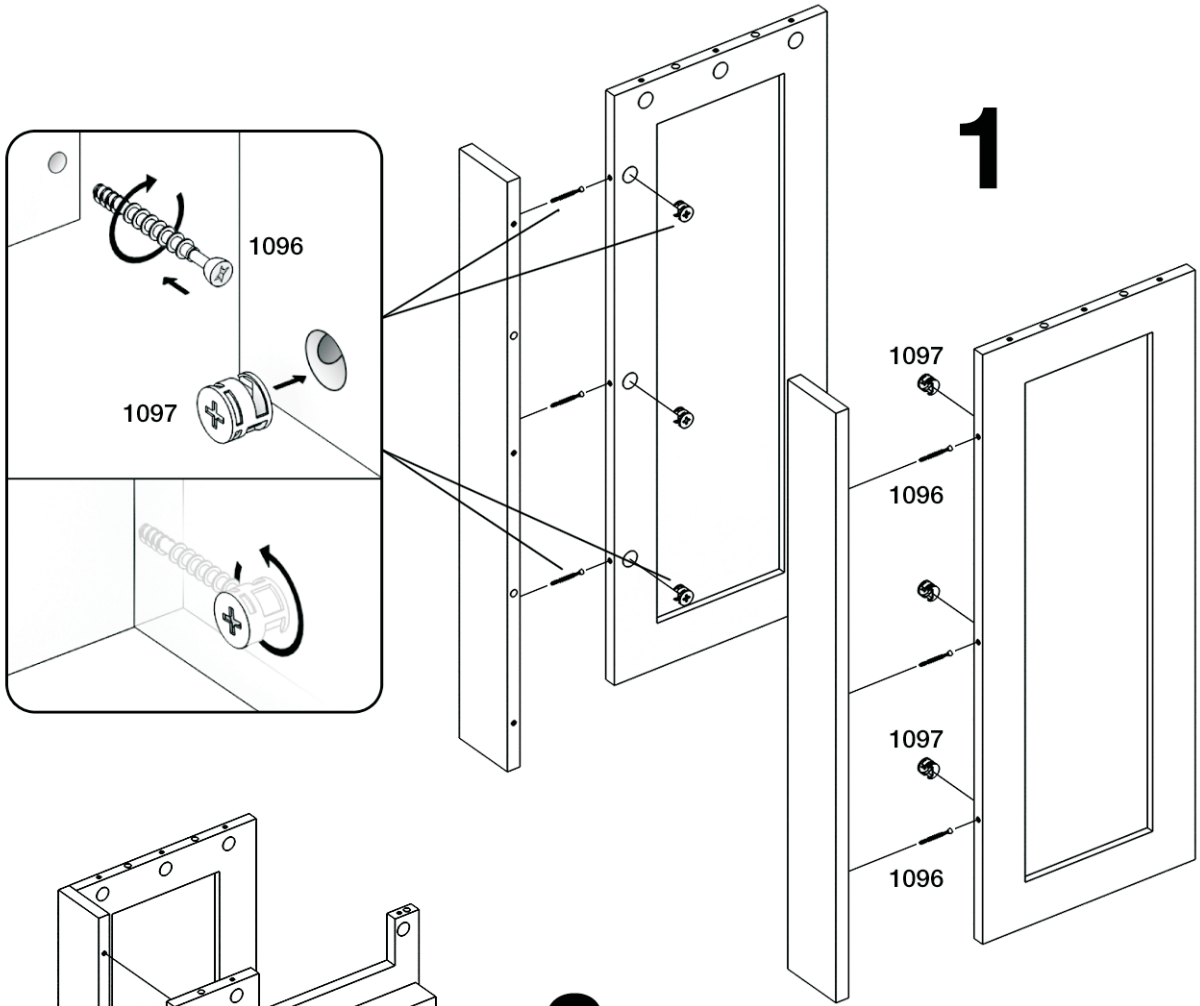

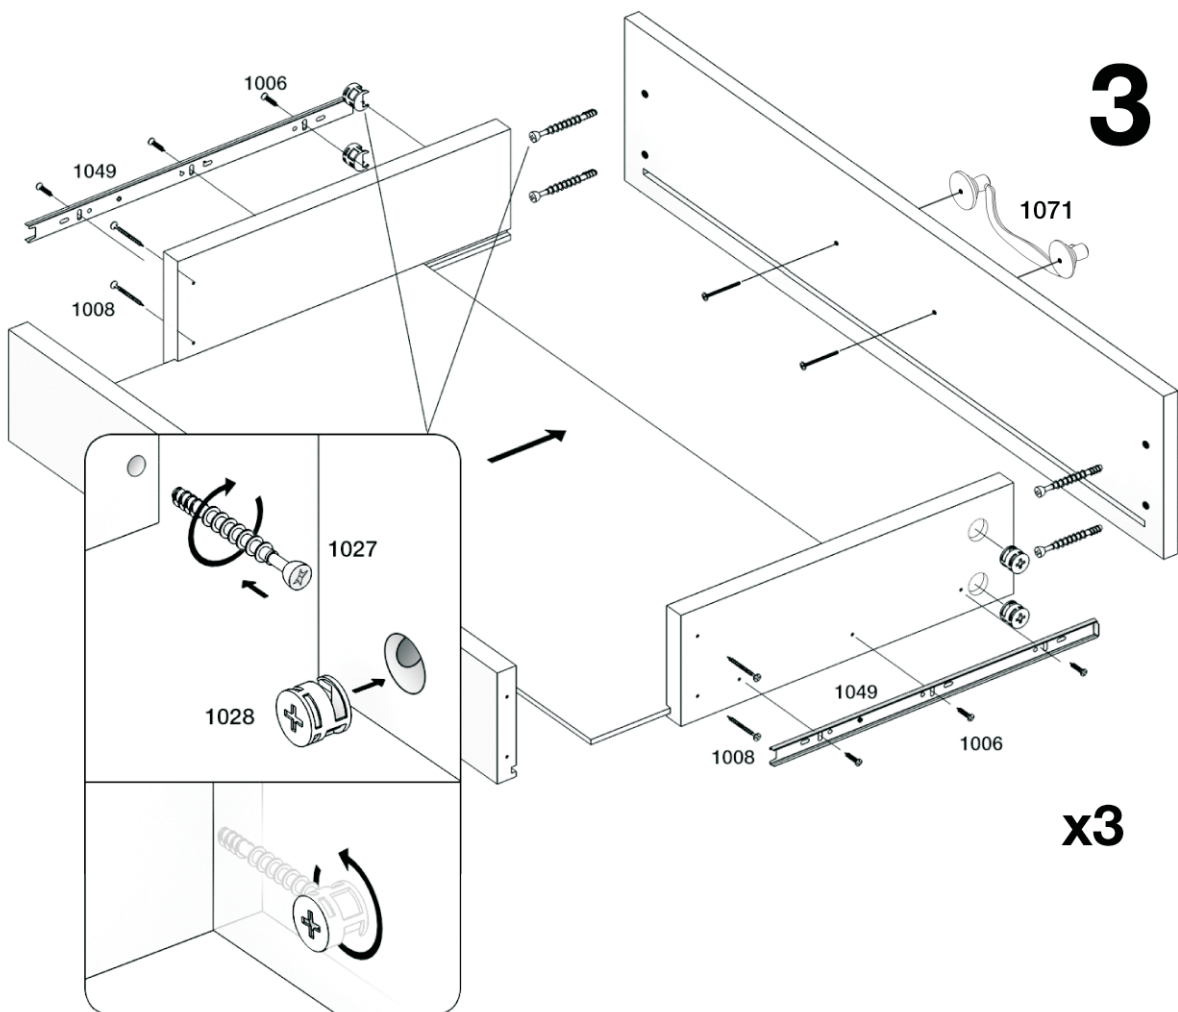
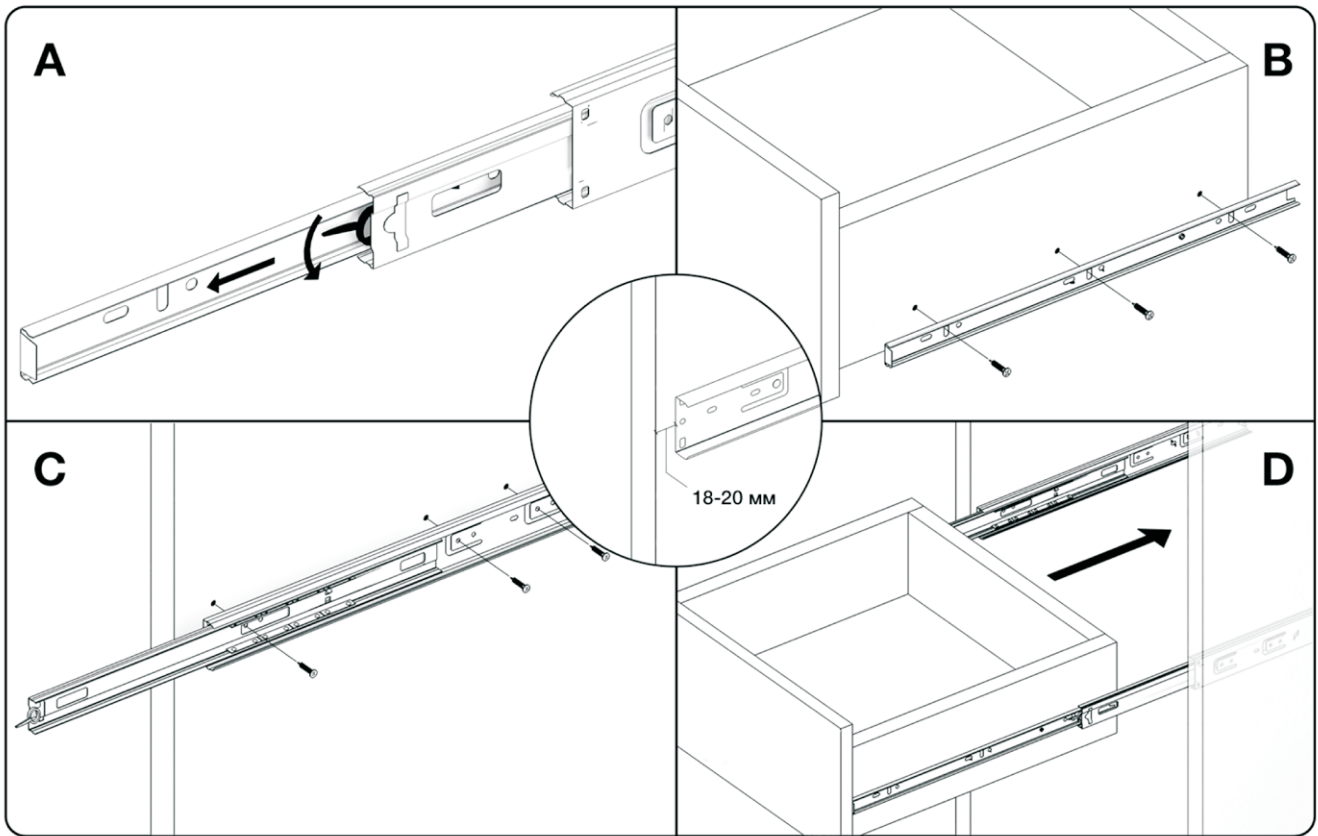


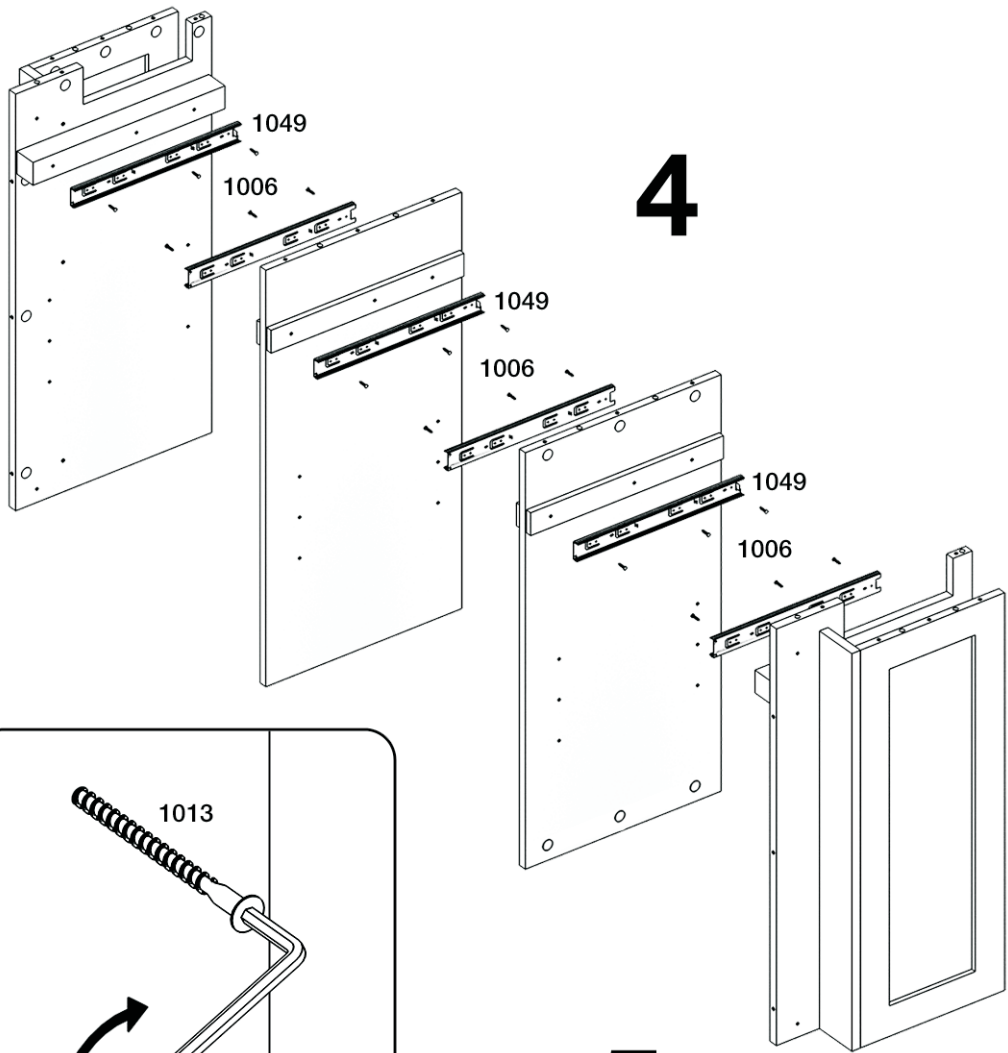


4

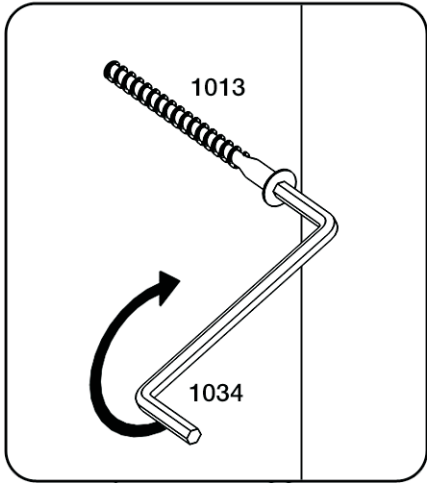 


5

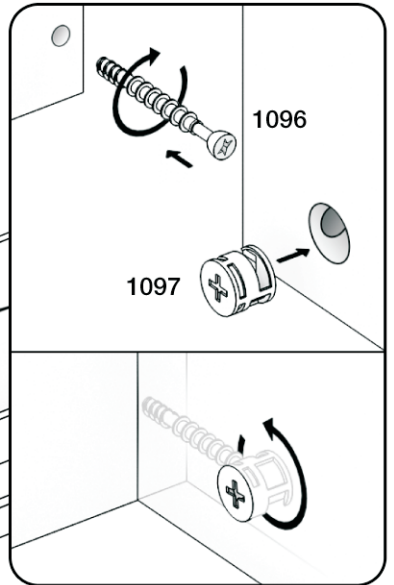 
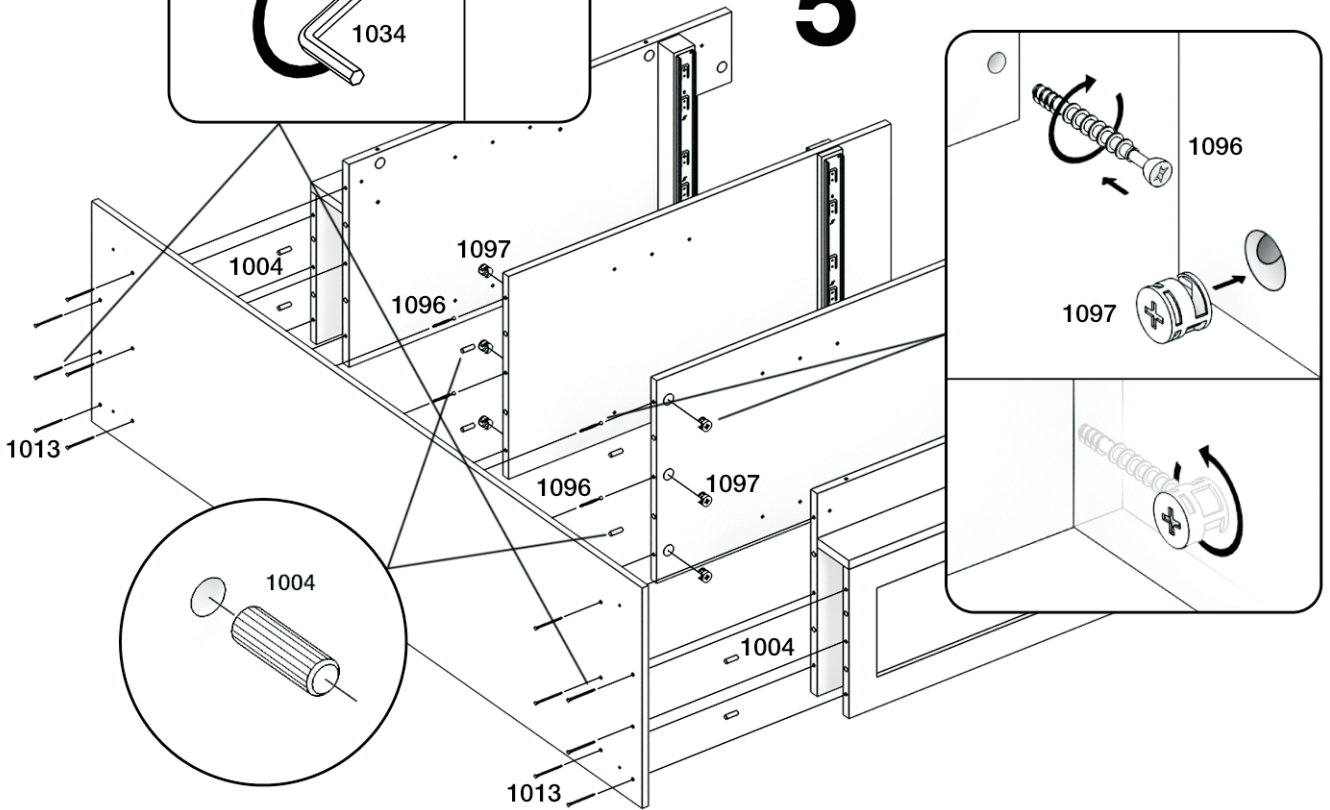 


6

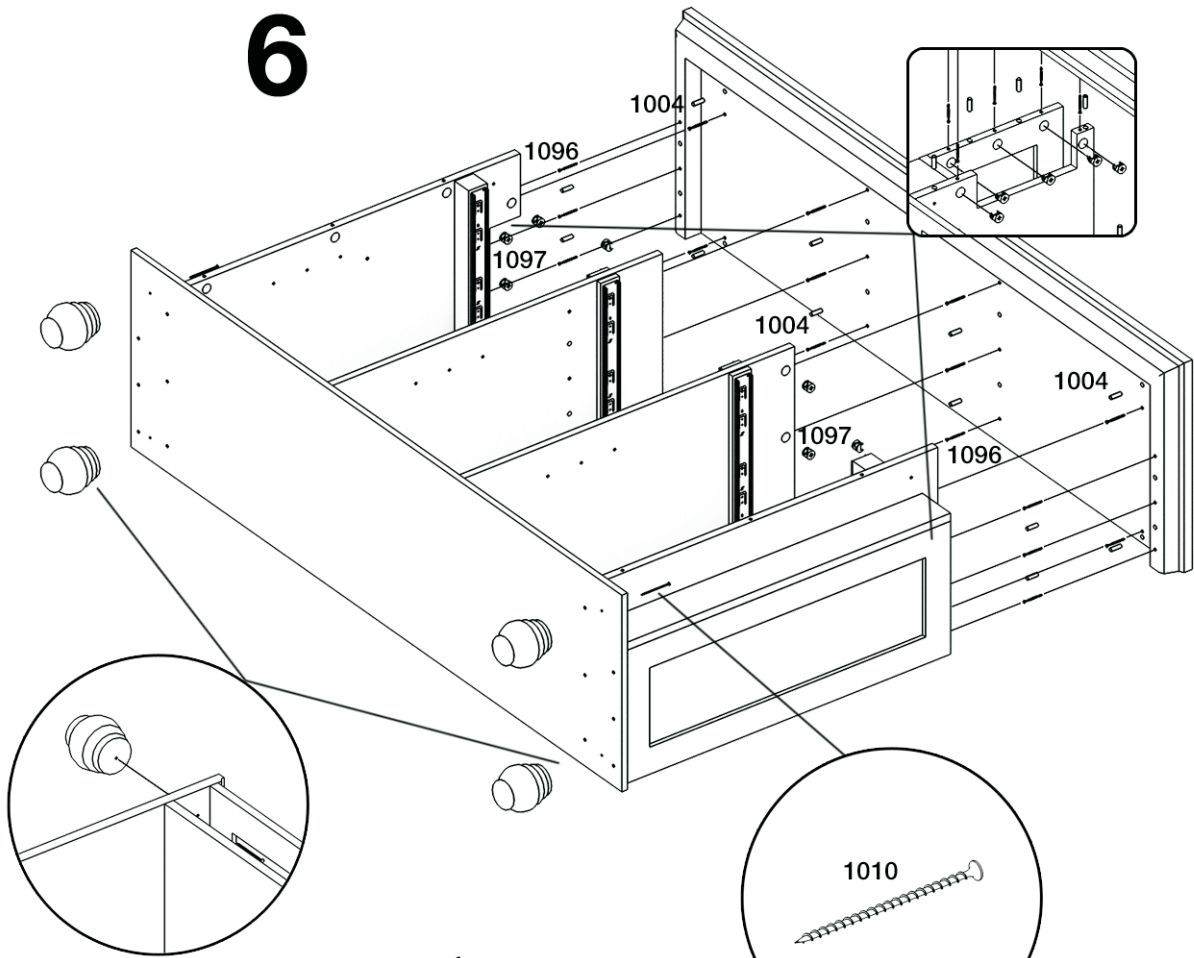 

7

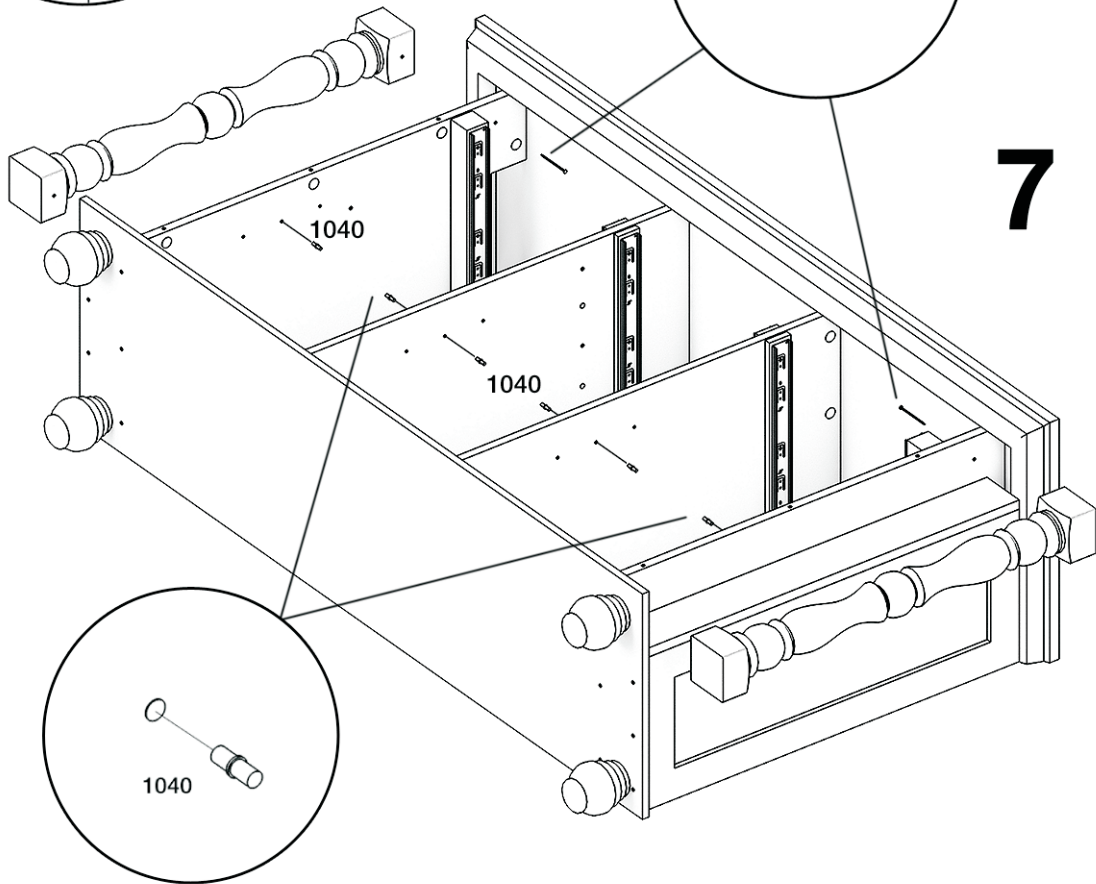 

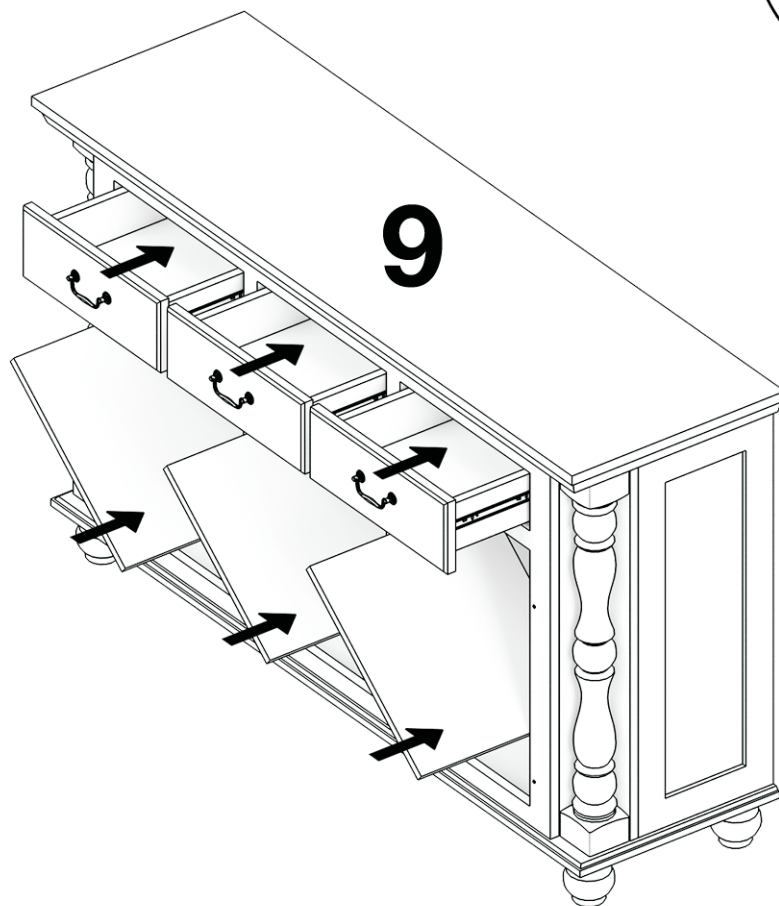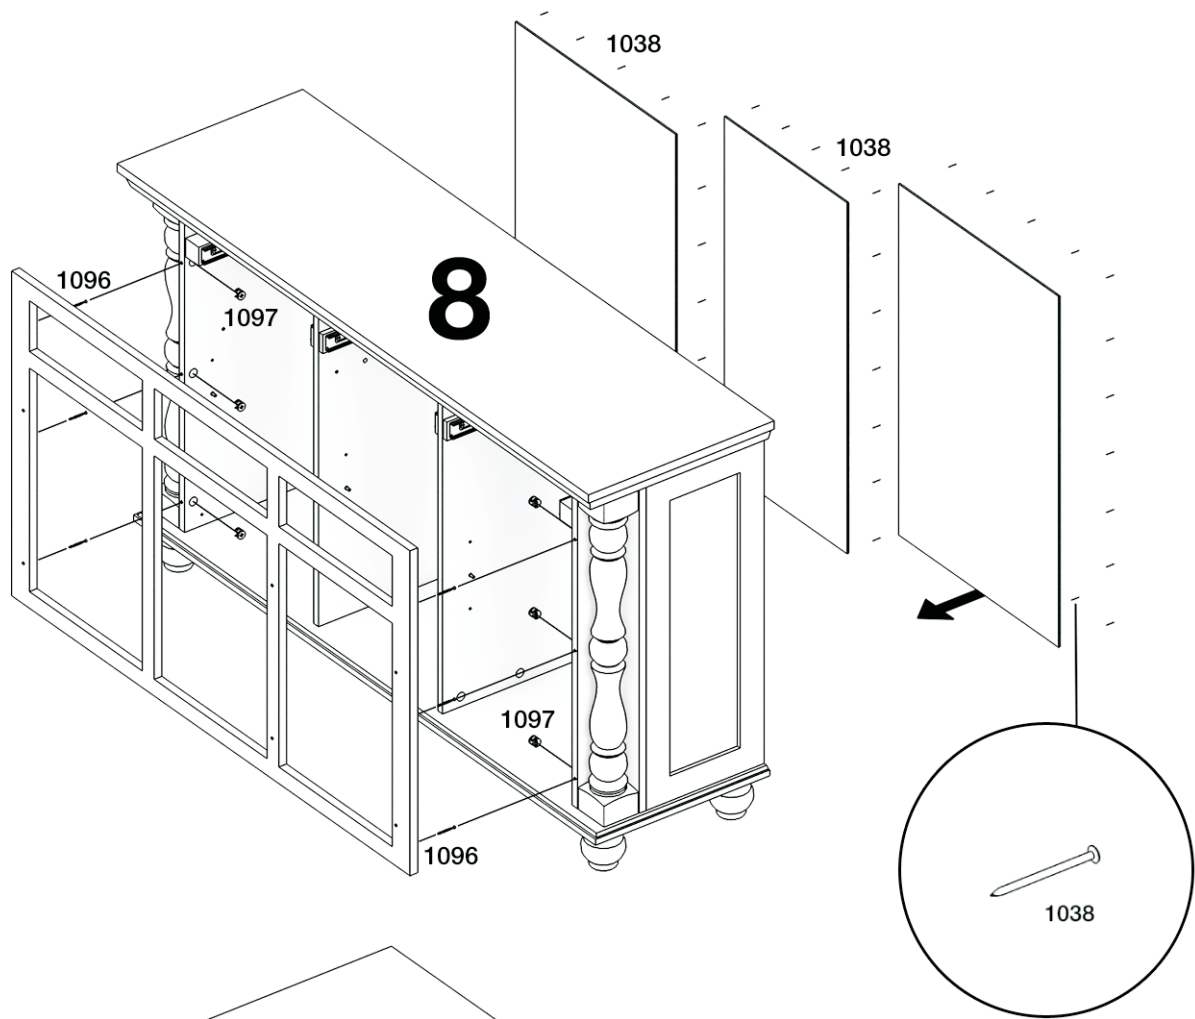  

10

