 
 


ДАНИЯ

 
Шкаф книжный 1-створчатый

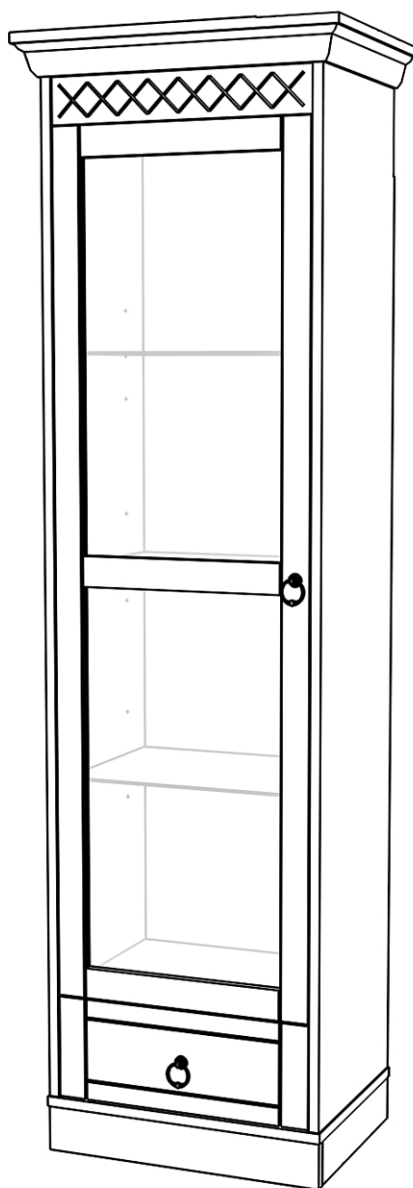

- RU** Инструкция по сборке
- EN** Assembly instruction
- FI** Koontaohje




1006
30



1004
18



 1038
38




1096
30



1097
30



 1027
4

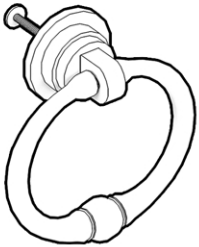

1020
2



 
1008
4




1028
4




1100
12

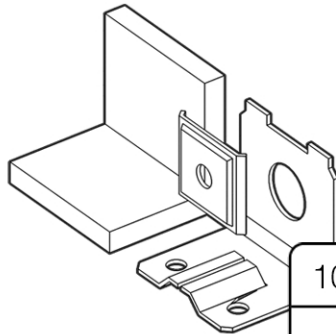


1099
1

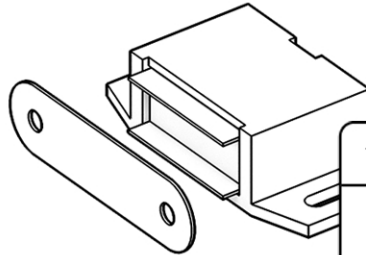 


1042
1


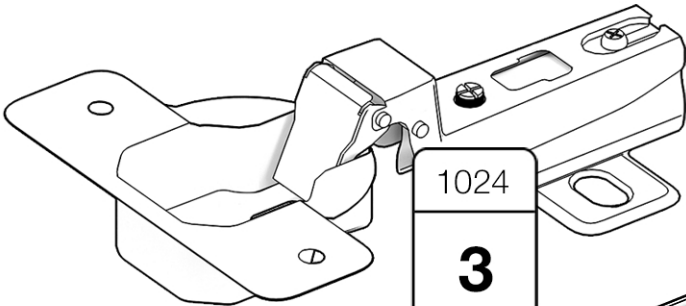 



1024
3

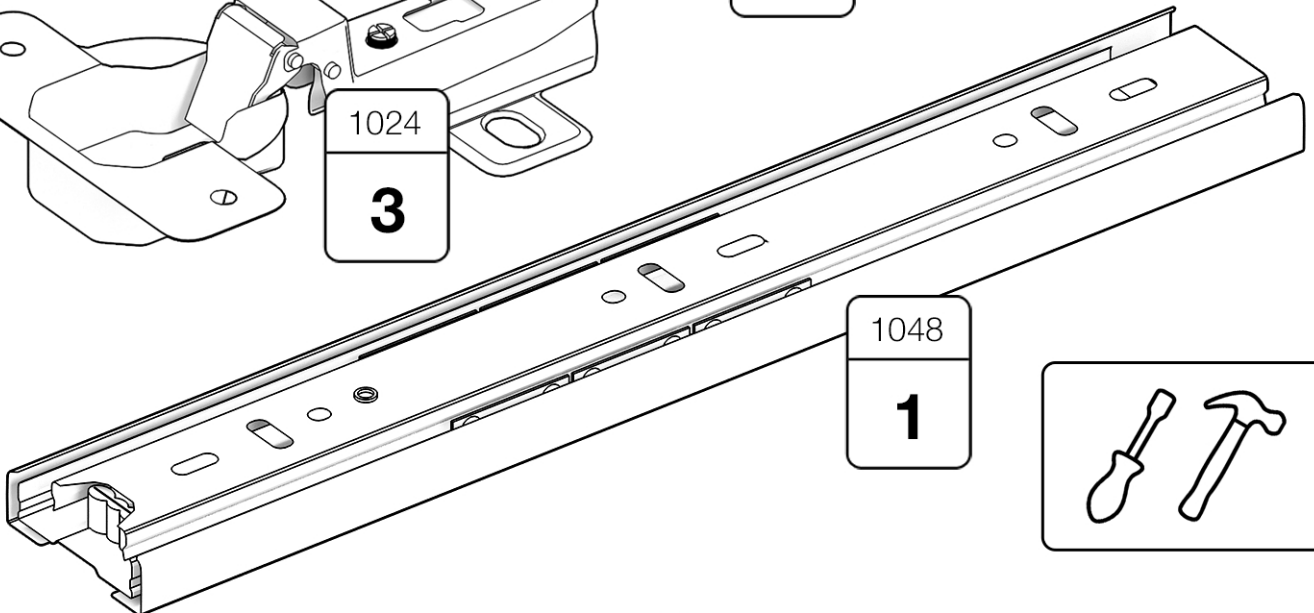 



1048
1

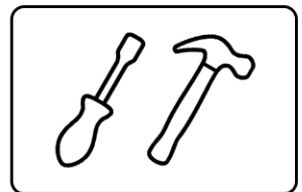 

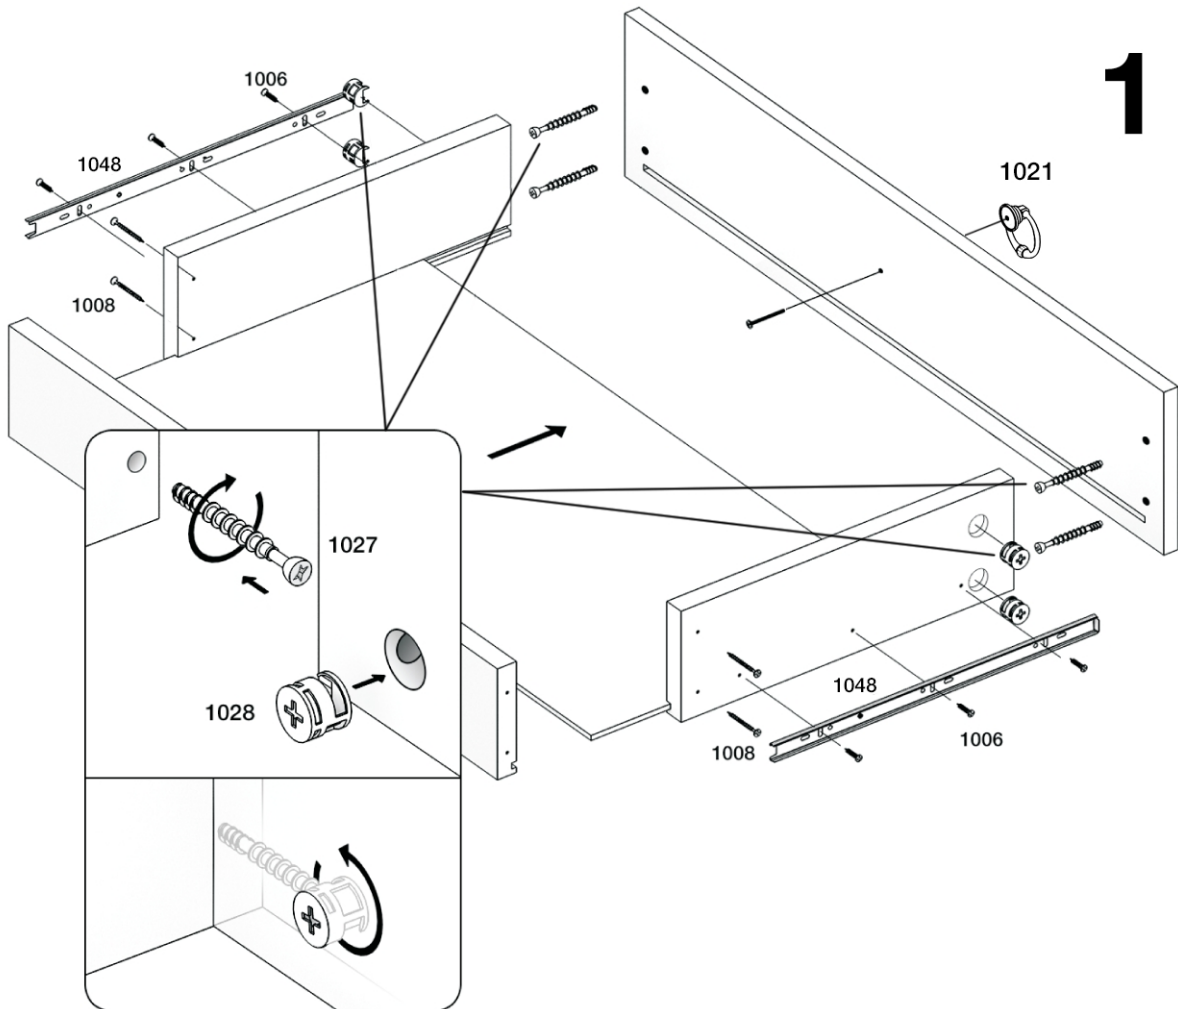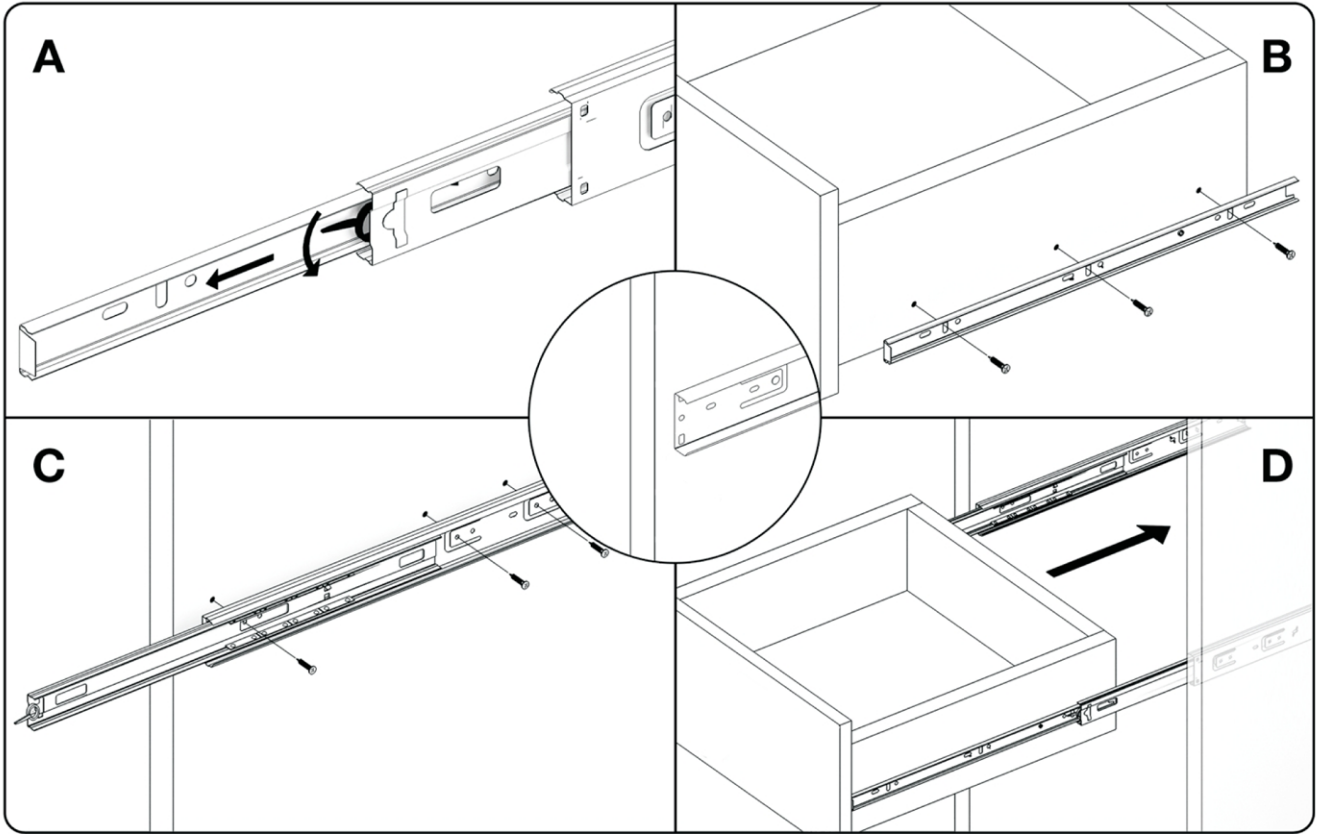  

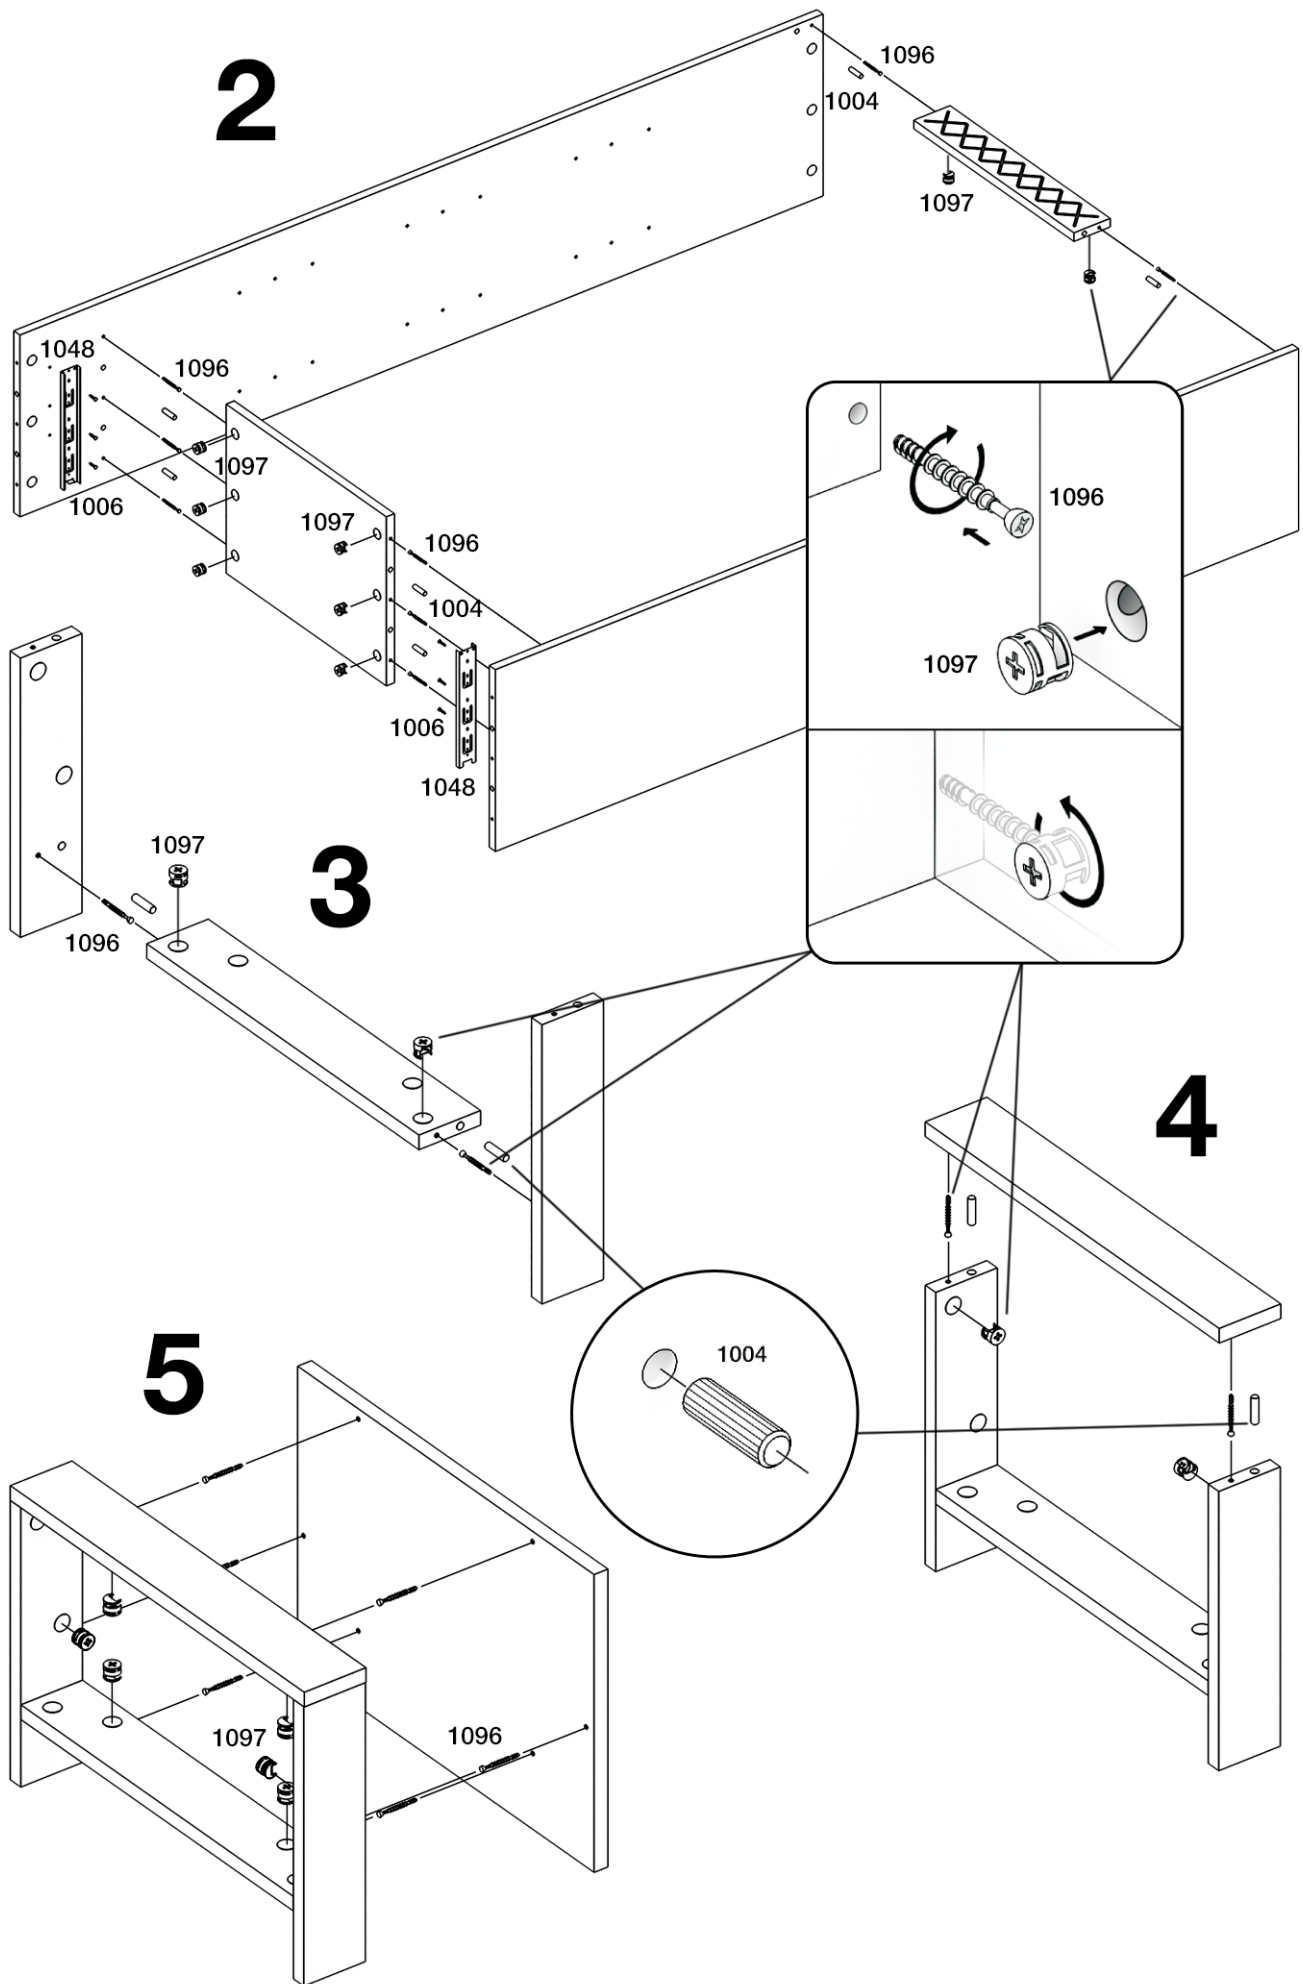 

6

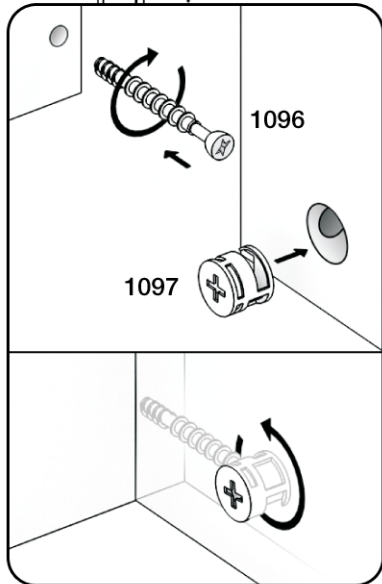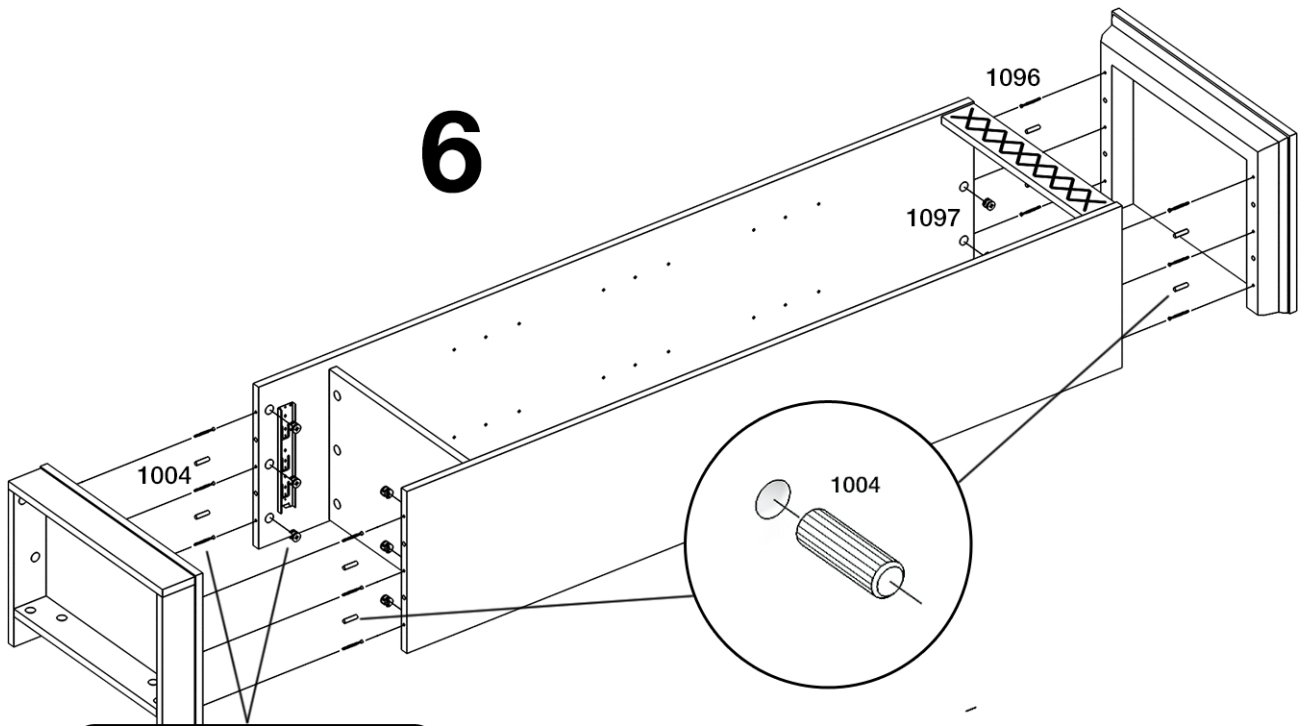  

7

