


Ари-Прованс

Стеллаж №3

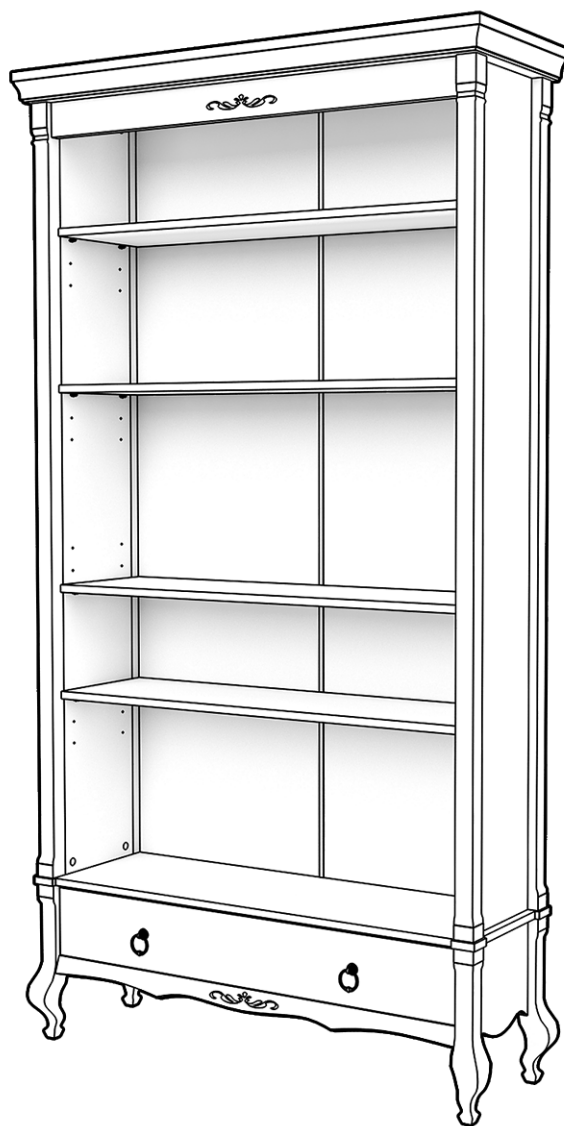


 **TIMBERICA**


RU Инструкция по сборке

EN Assembly instruction


FI Koontaohje




1006
14



1008
4



1004
12




1096
24



1097
24




1038
40

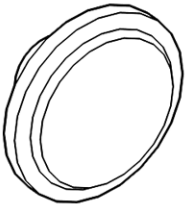



1074
2







1040
16


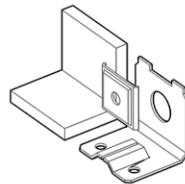





1099
2

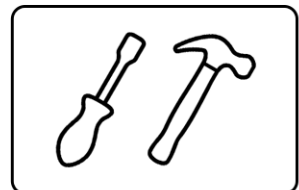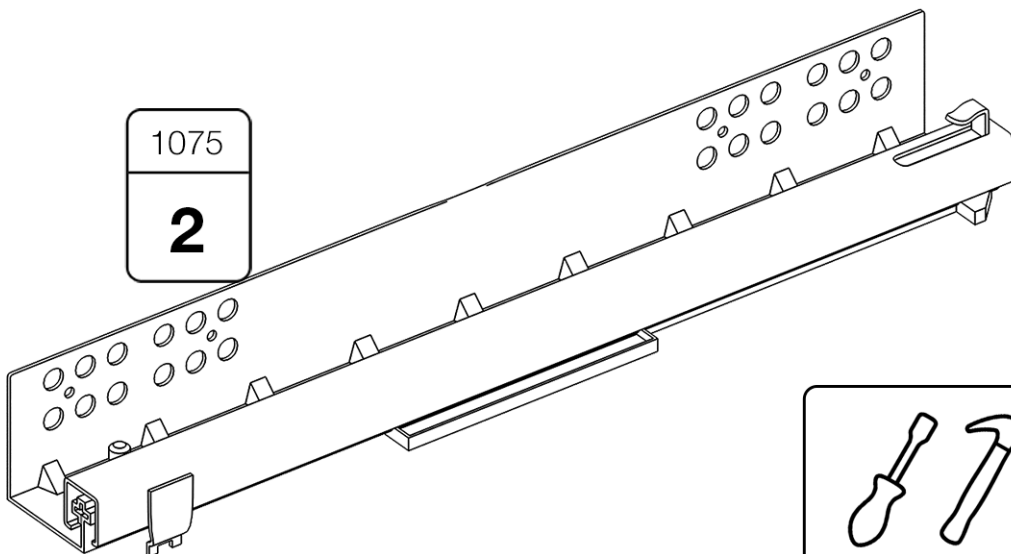


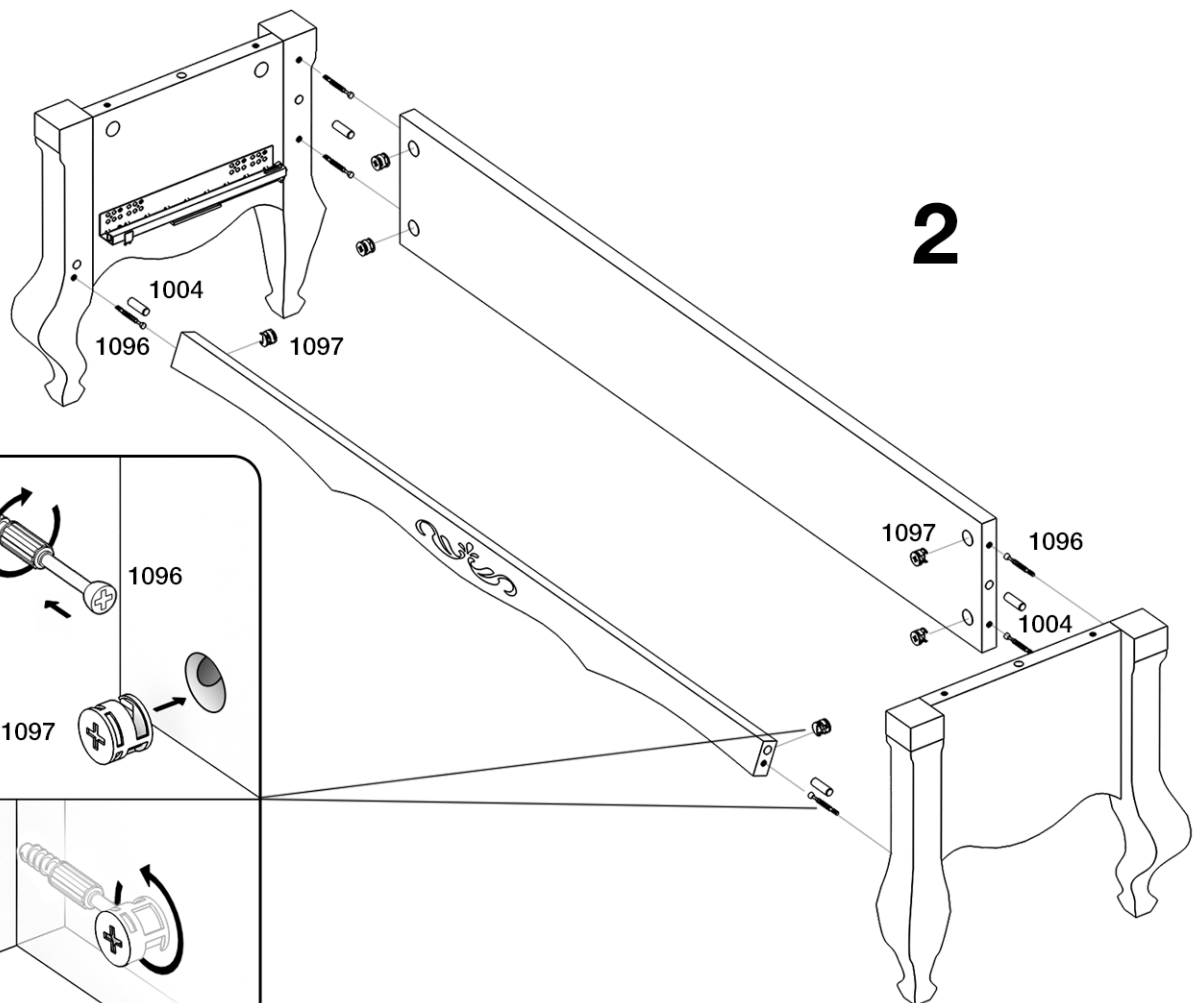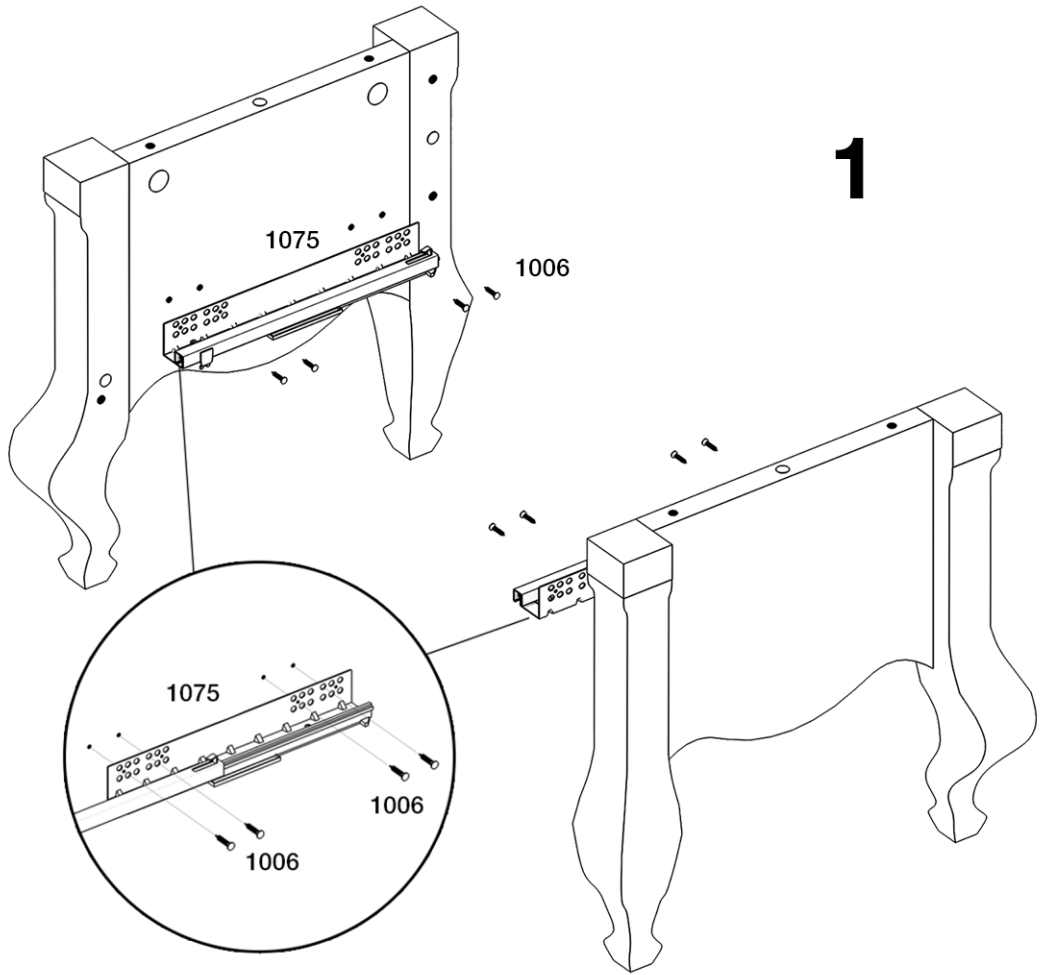

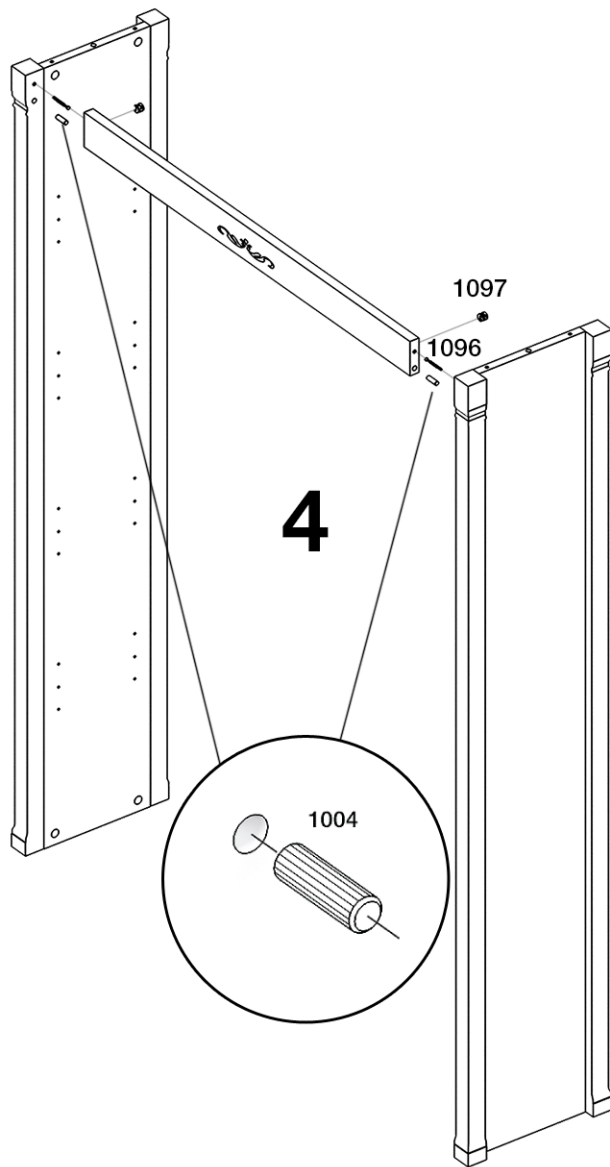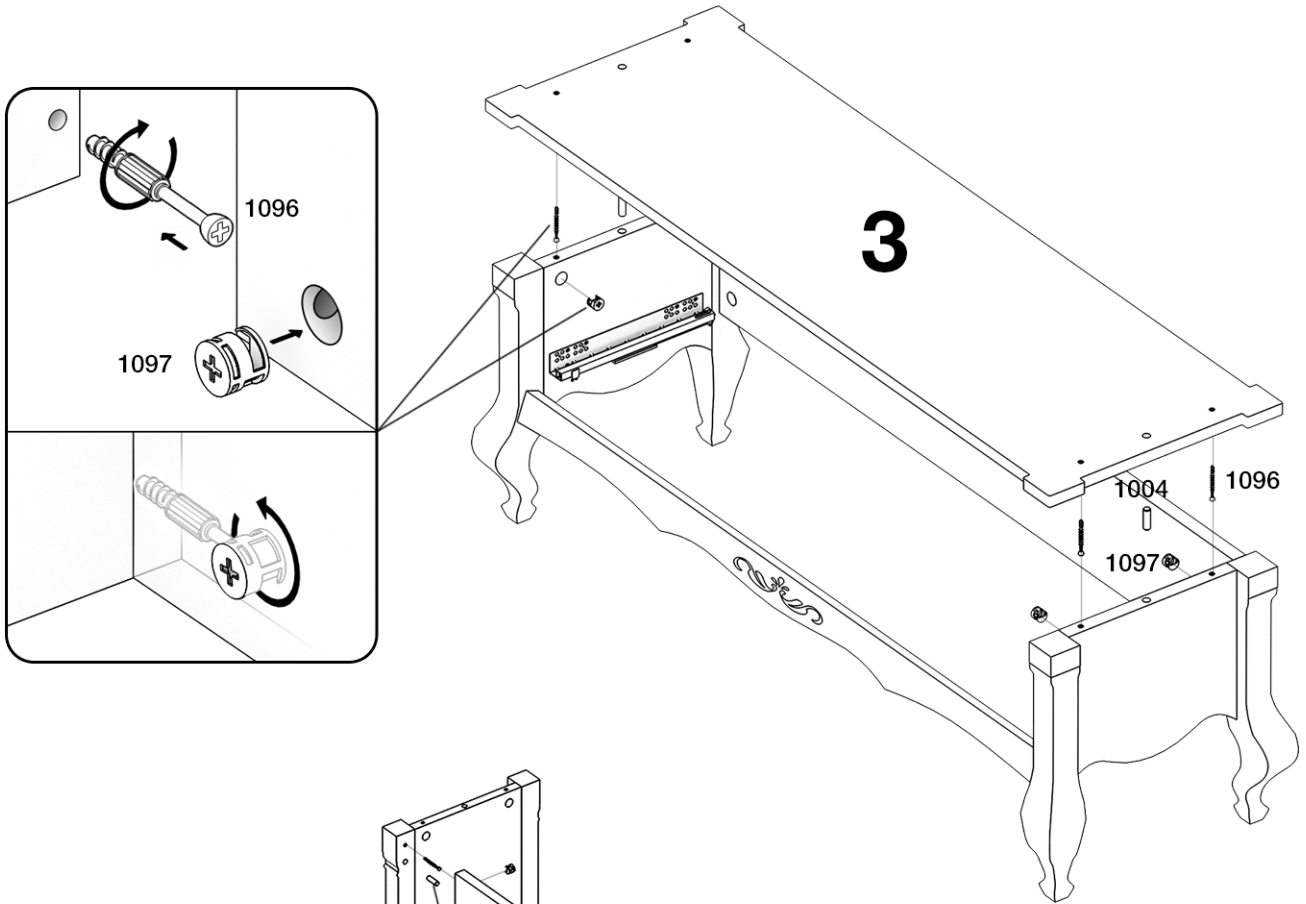


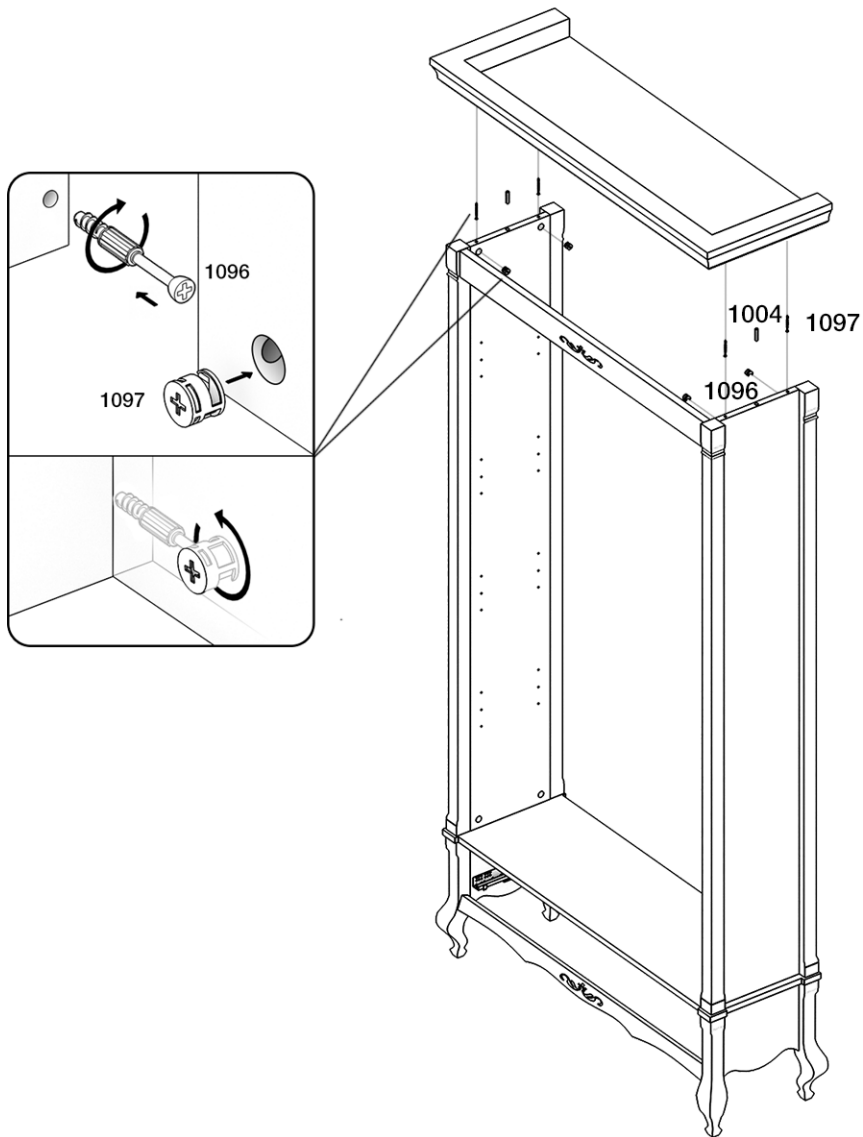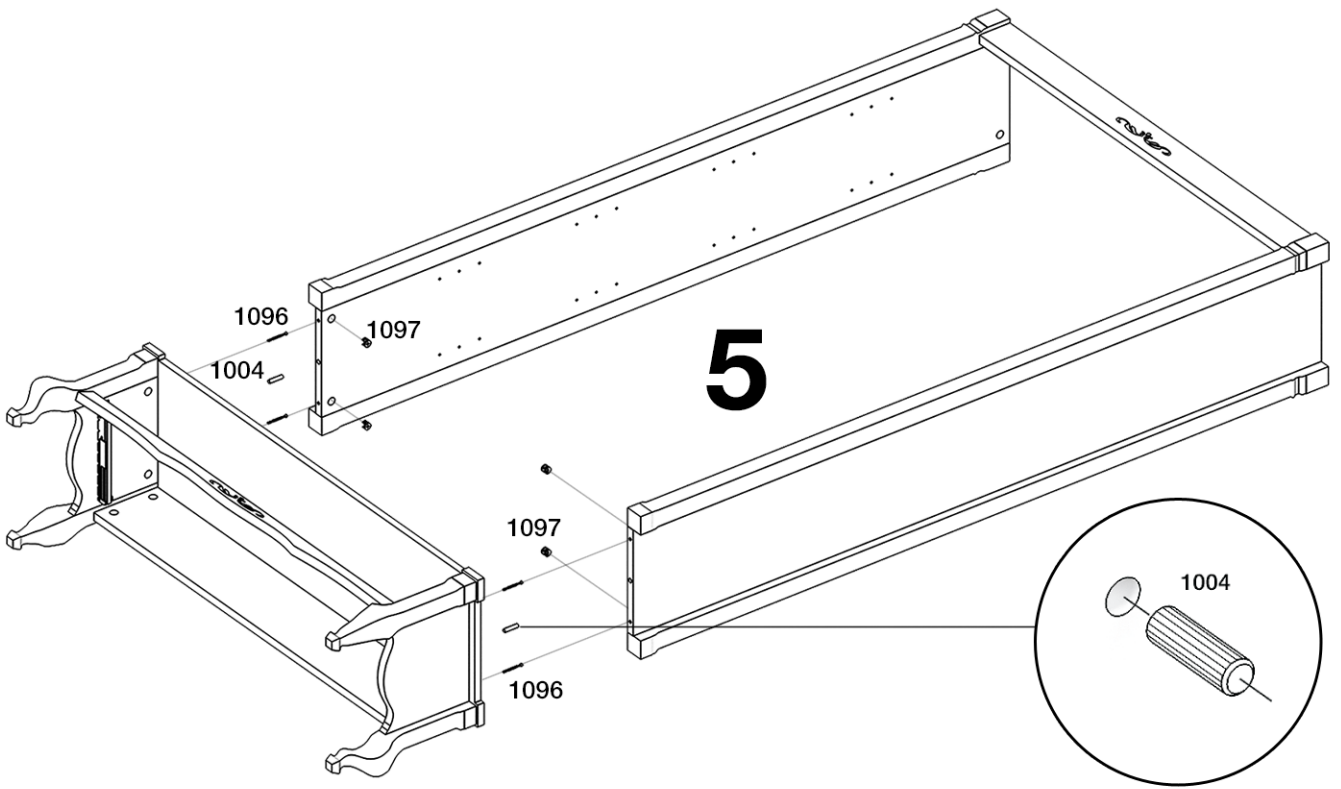

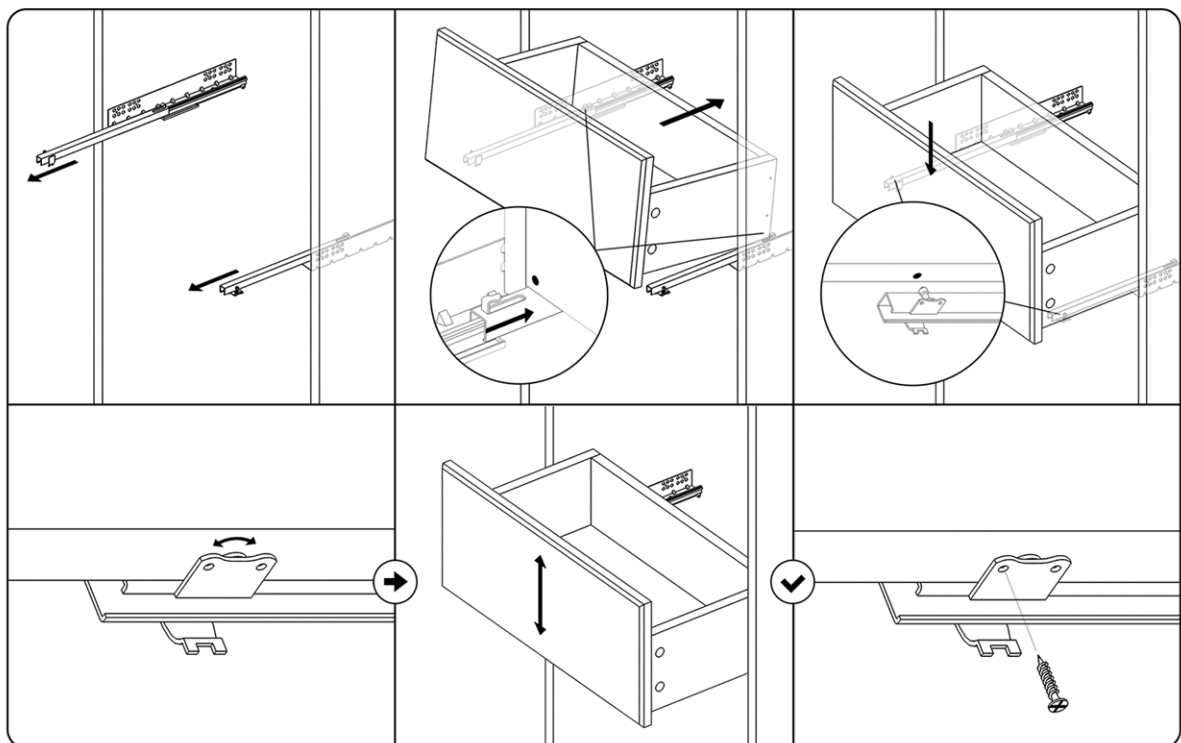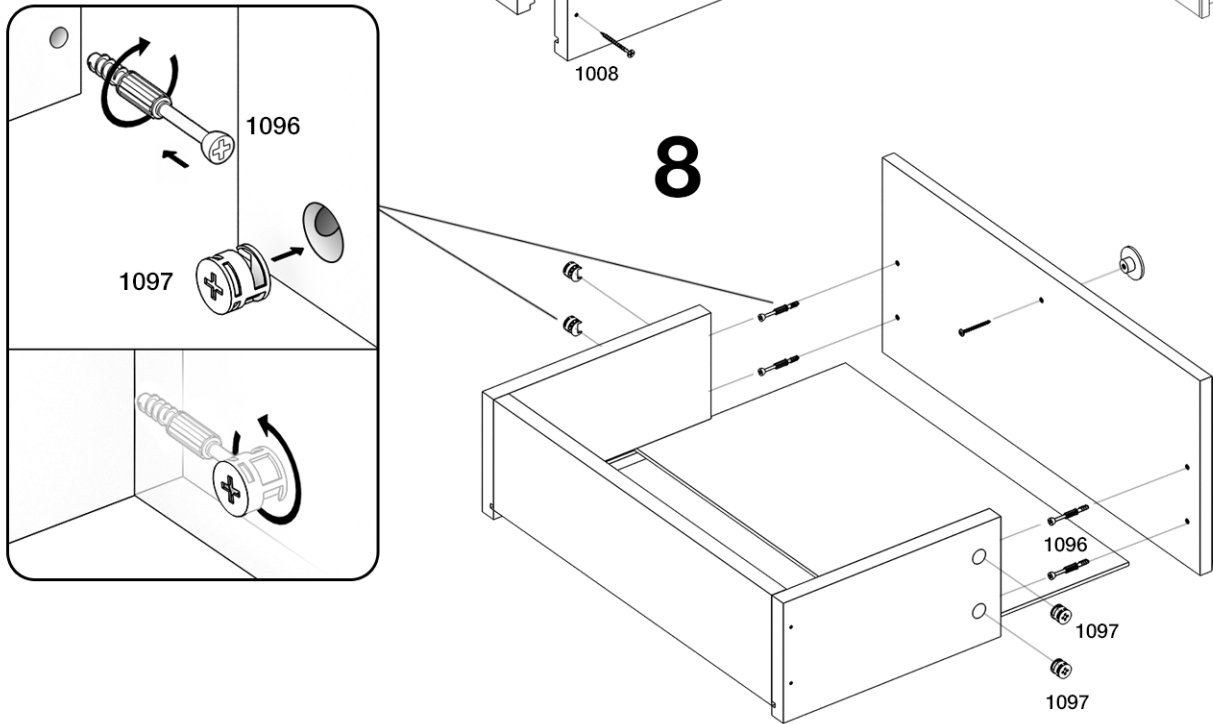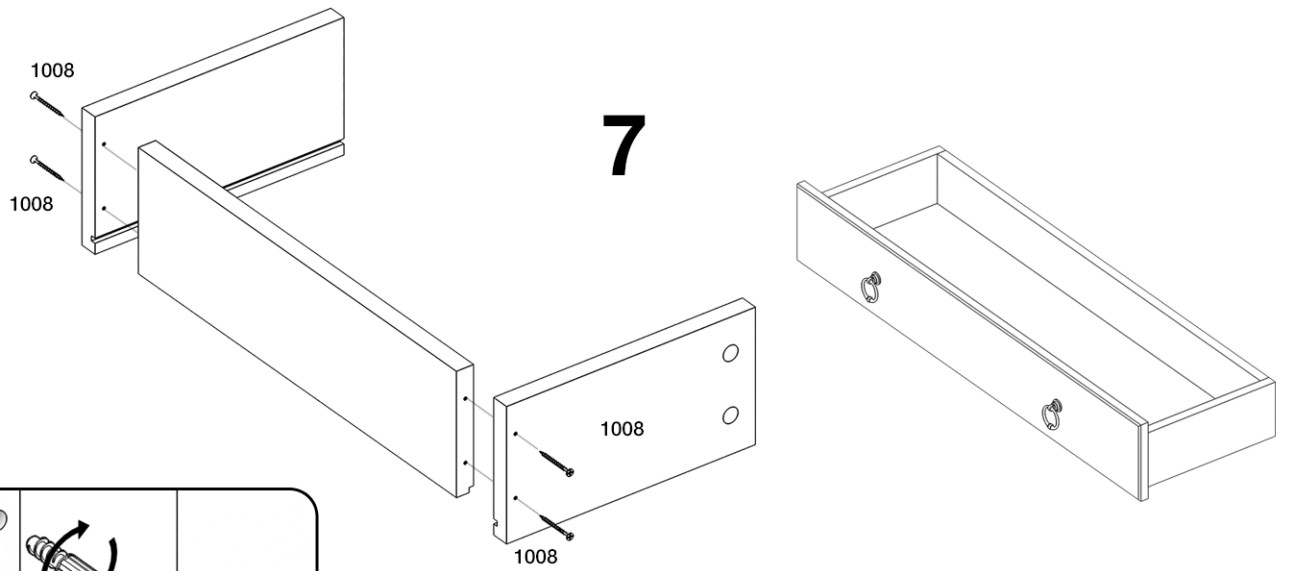

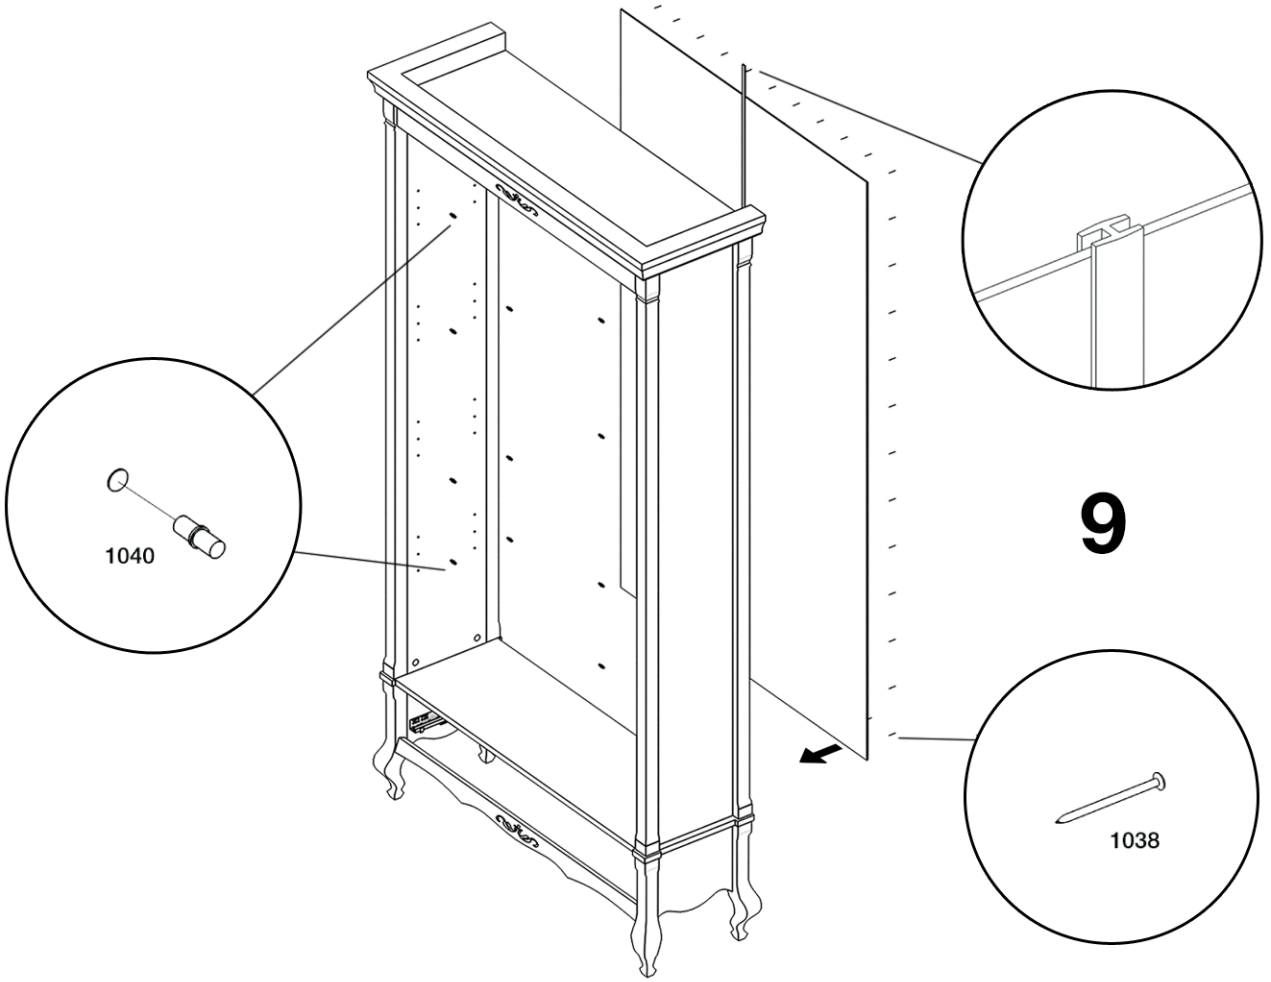

10

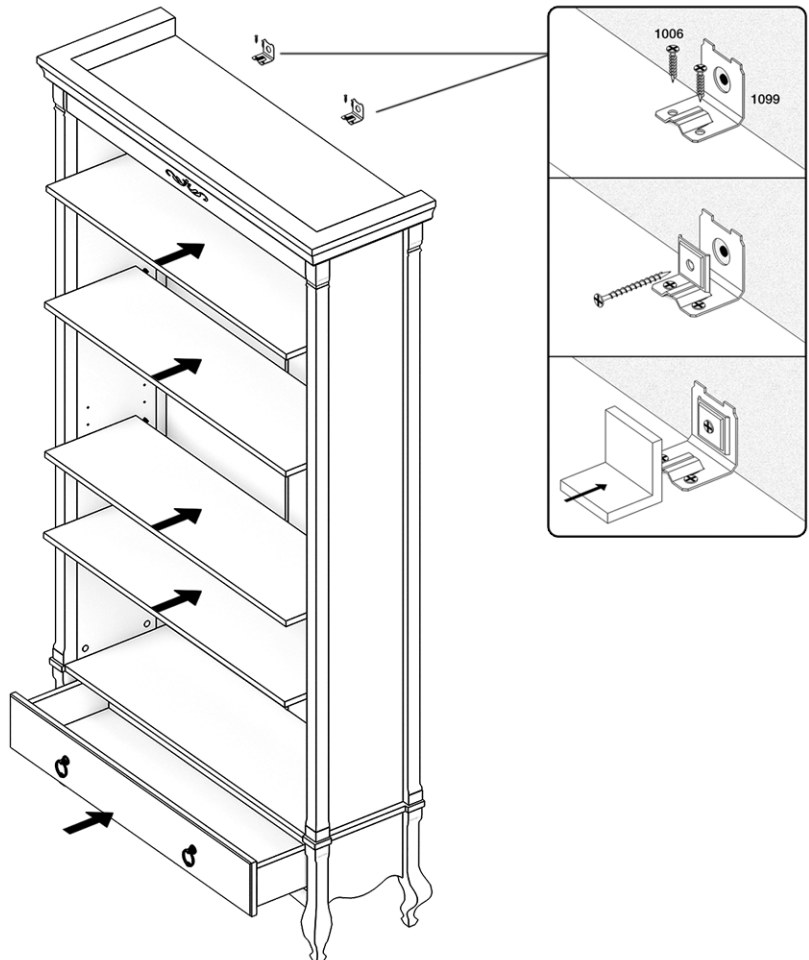

6/6

