

Ари-Прованс

Комод №7




 **TIMBERICA**

RU Инструкция по сборке

EN Assembly instruction

FI Koontaohje




1006
20



1008
8




1004
6



1096
20




1097
20



1038
22



1074
4

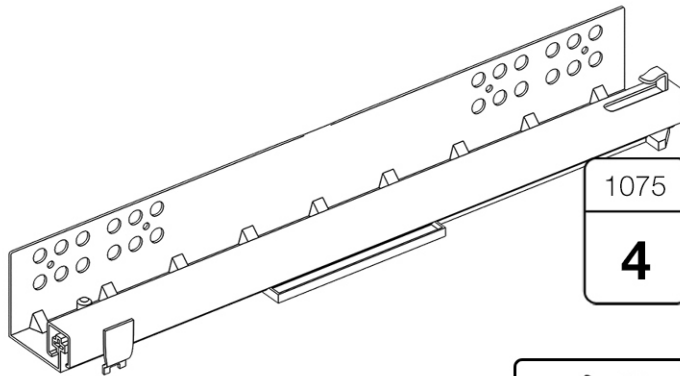

1075
4

