


# АЙНО

Комод №13

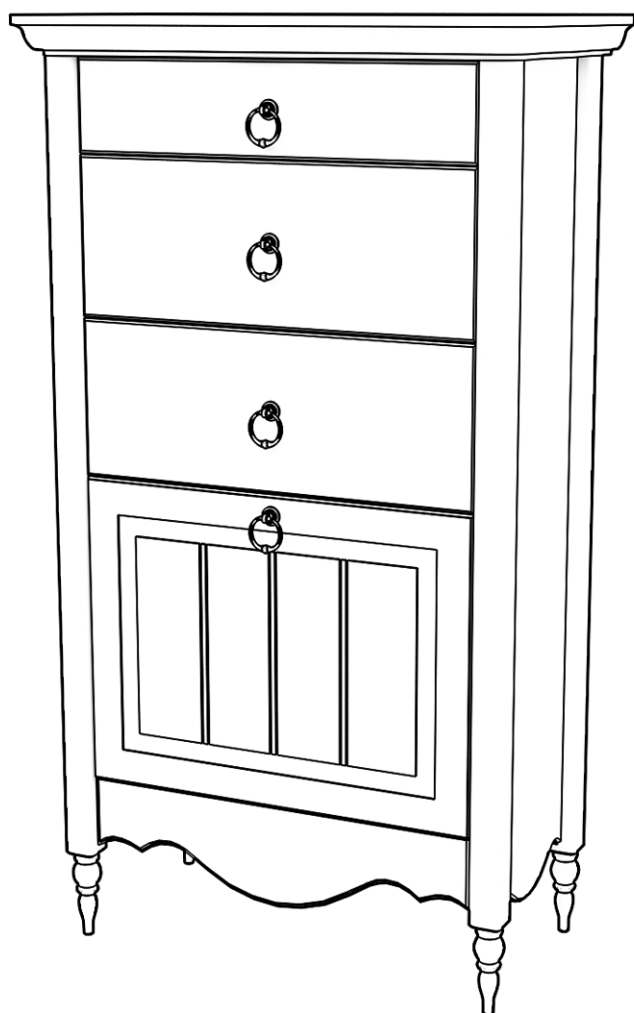


 **TIMBERICA**

**RU** Инструкция по сборке

**EN** Assembly instruction


**FI** Koontaohje



1006  
**48**



1008  
**16**



1004  
**4**




1096  
**26**



1097  
**8**




1028  
**18**

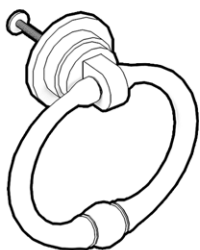


1020  
**4**





1038  
**20**

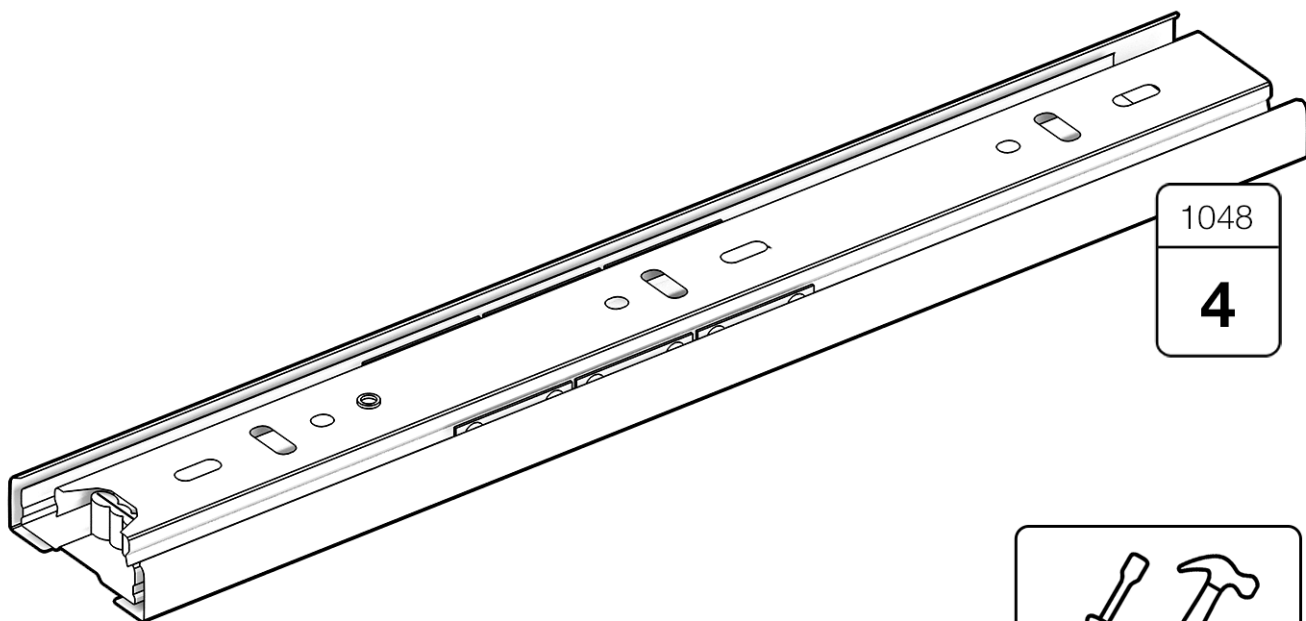


1048  
**4**

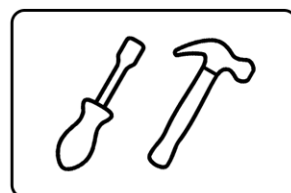


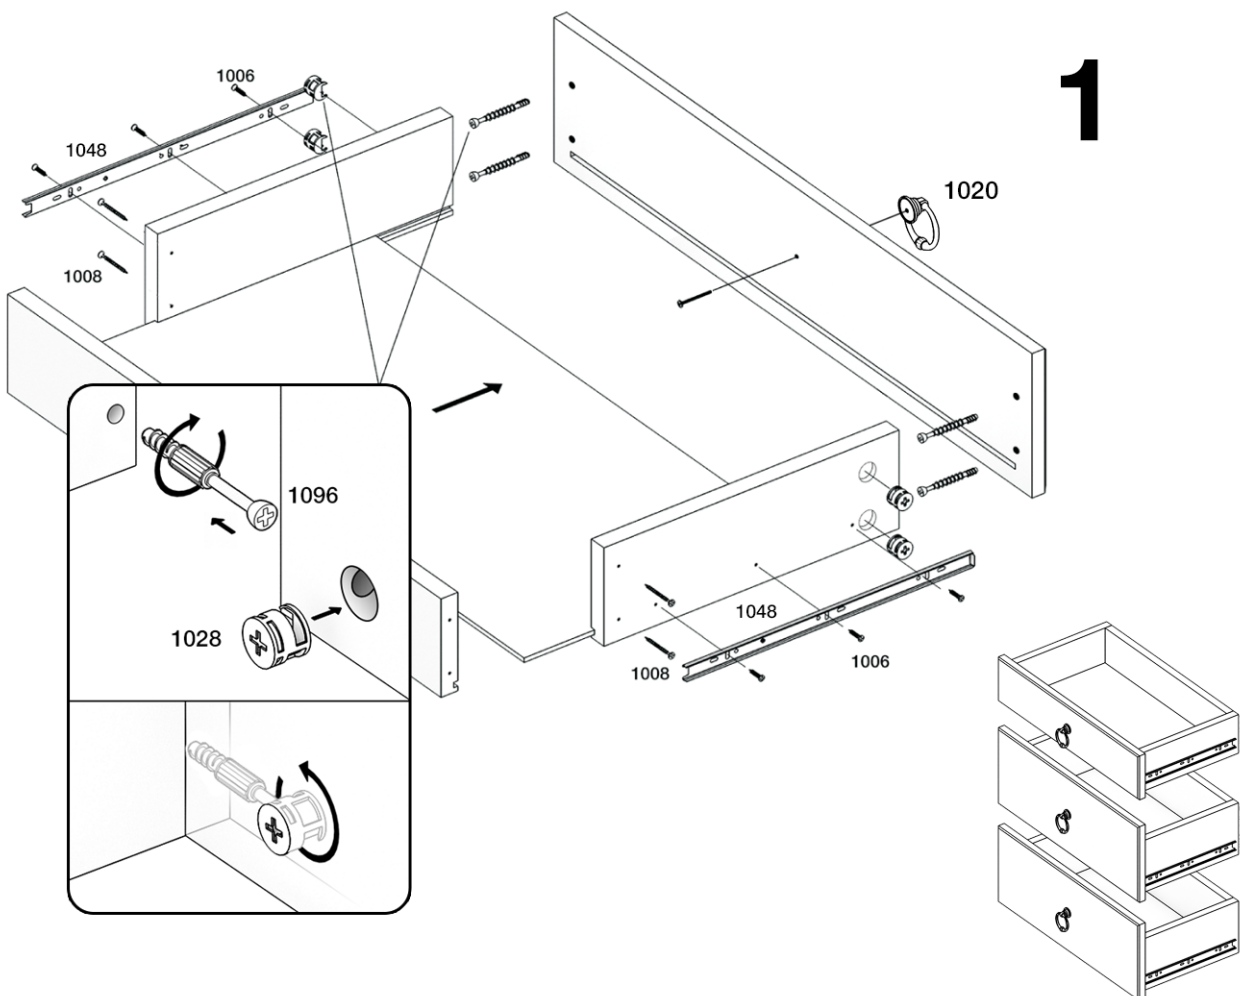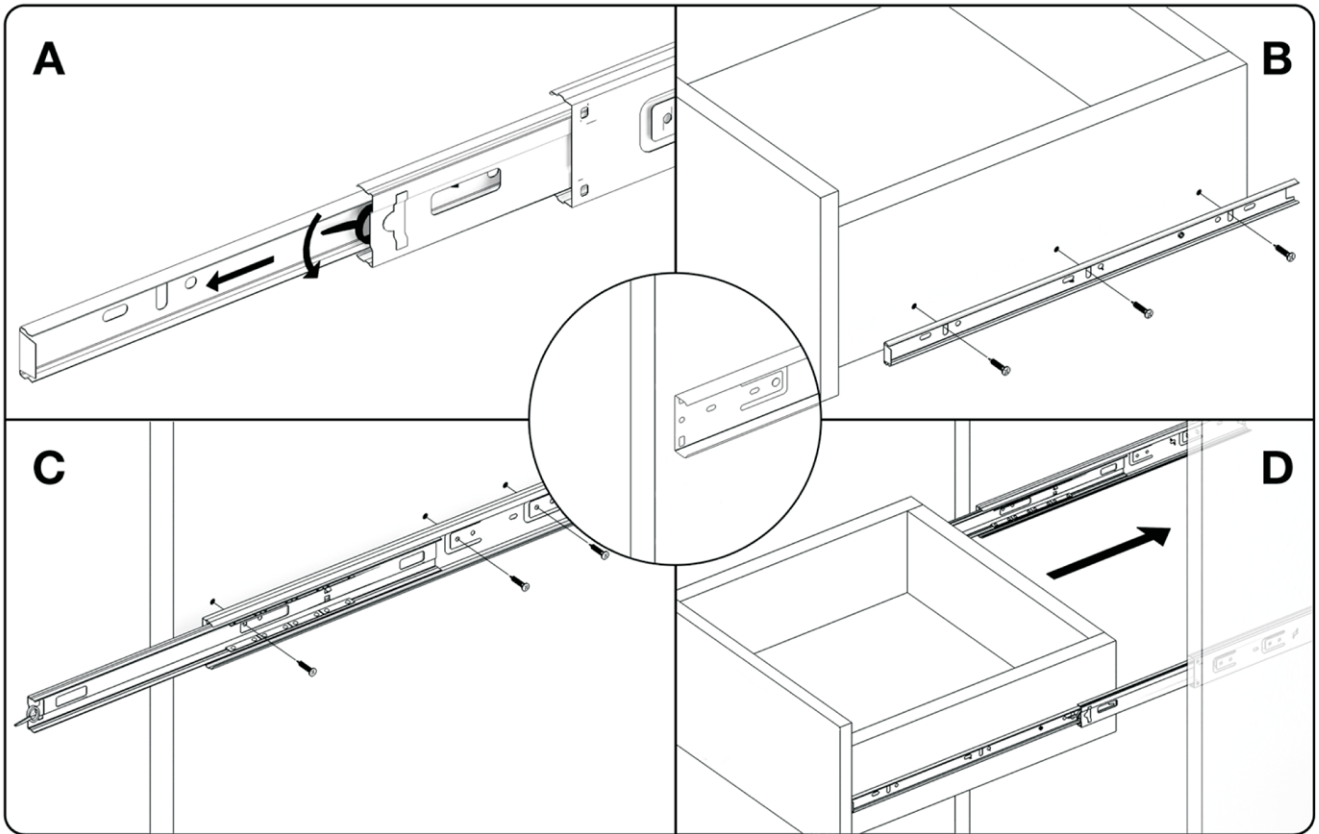


# 2

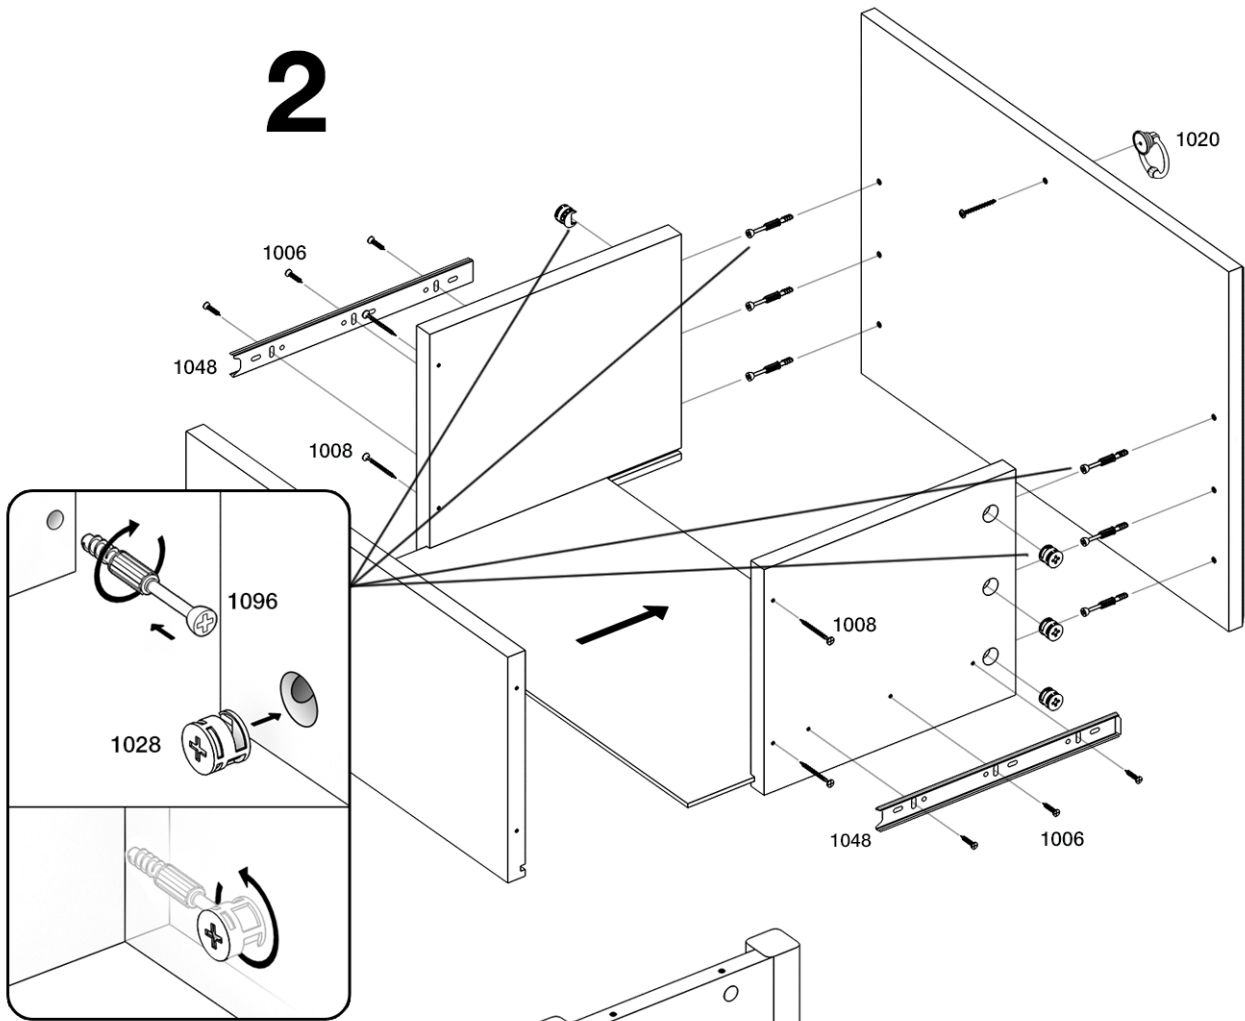

# 3

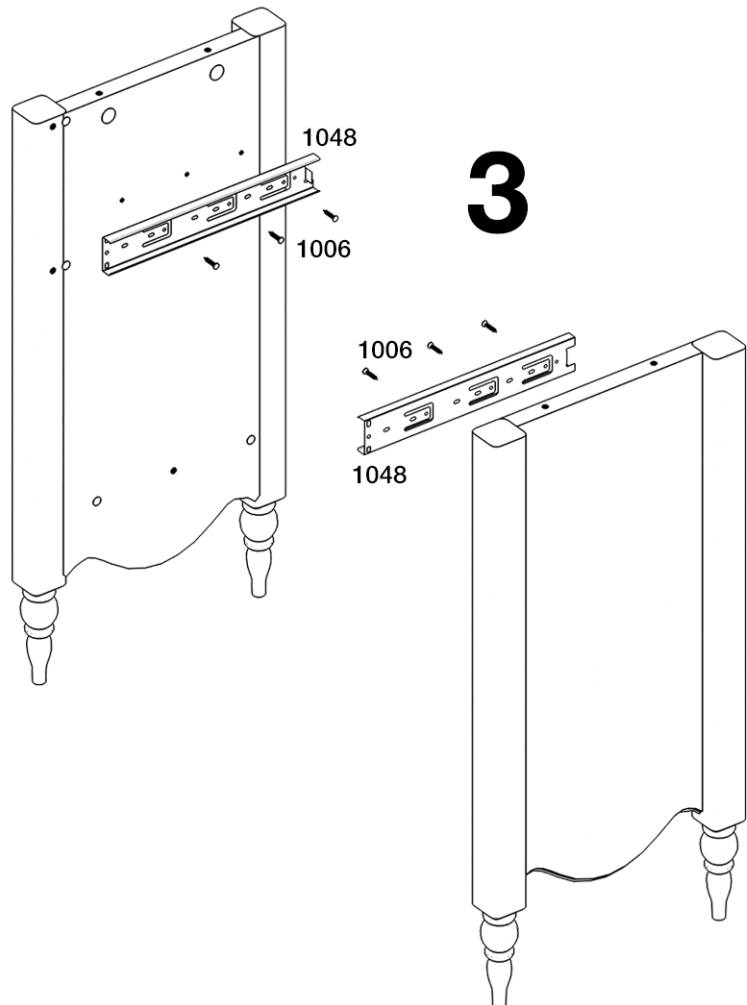

# 4

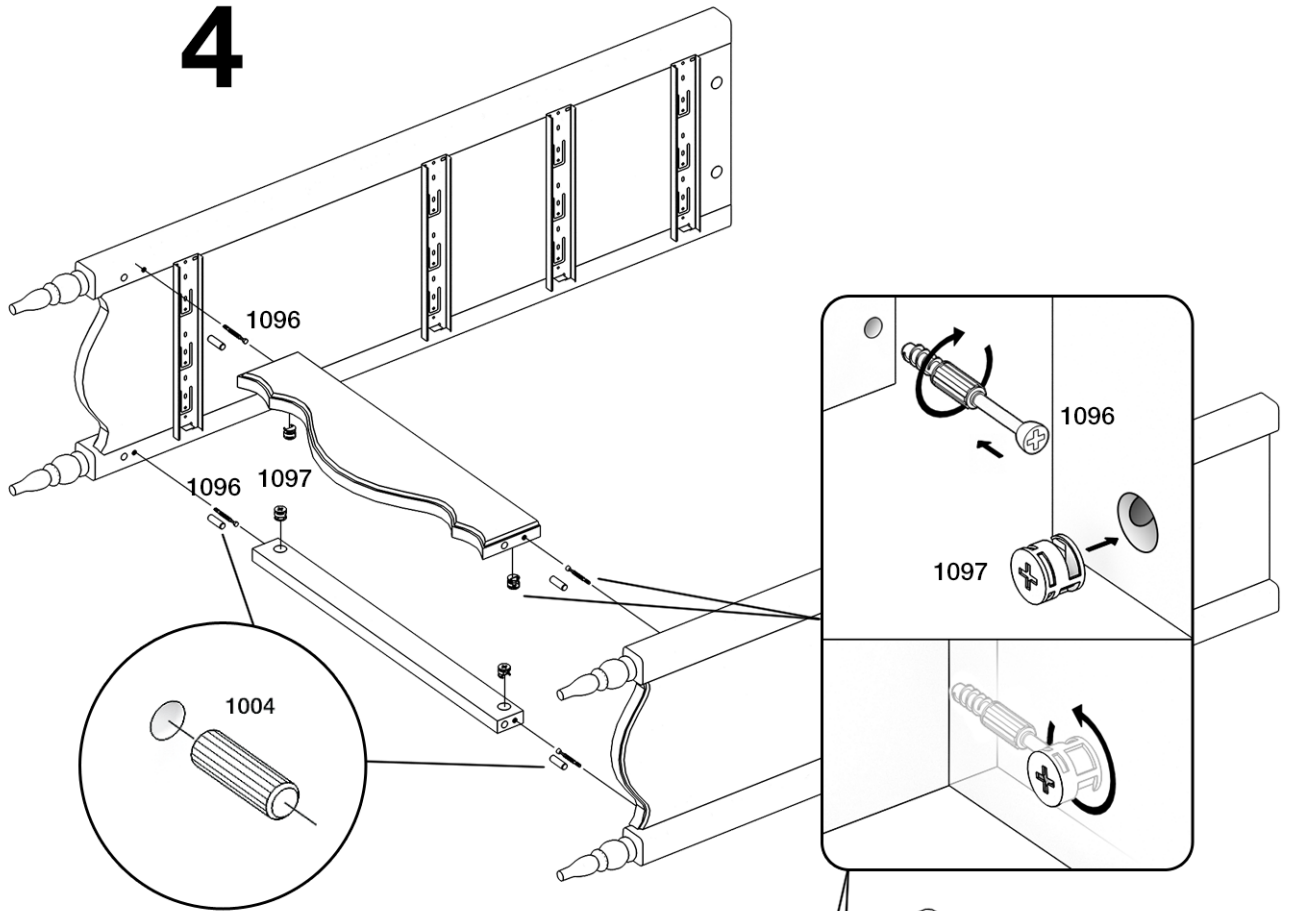

# 5

