


Ари-Прованс

Шкаф 3-створчатый №3

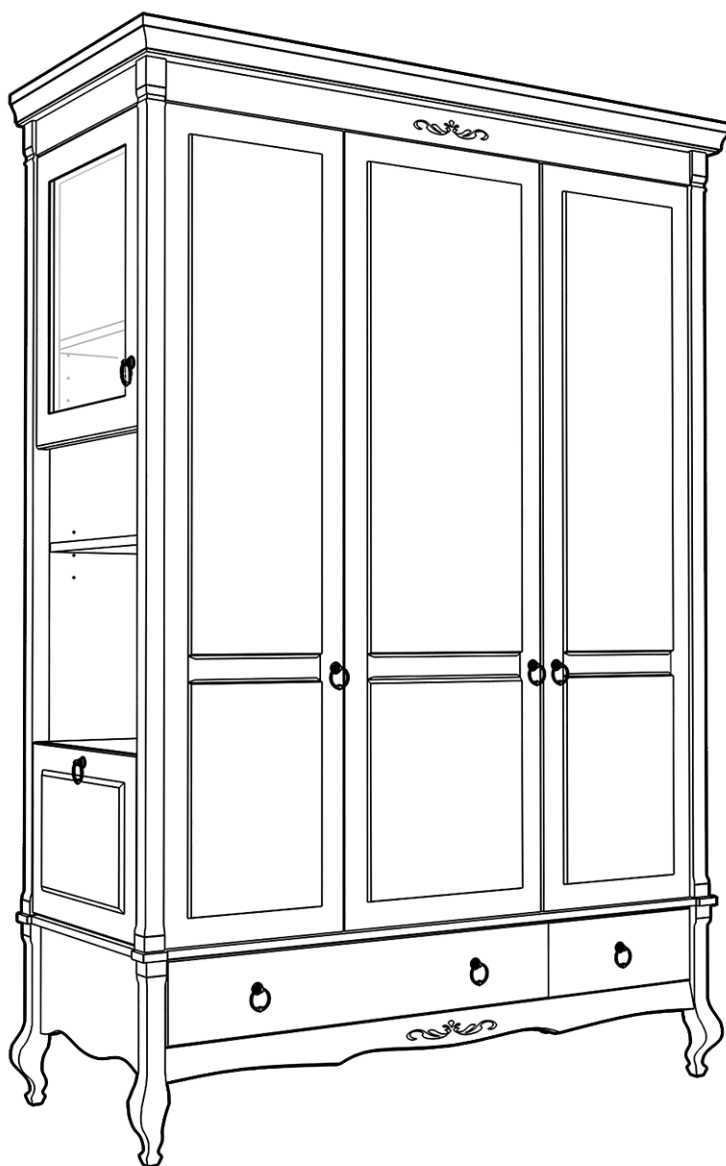


 **TIMBERICA**

RU Инструкция по сборке

EN Assembly instruction


FI Koontaohje




1006
92



1008
12



1004
31




1096
63



1097
63




1038
50

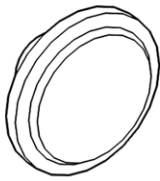


1074
8




1040
32

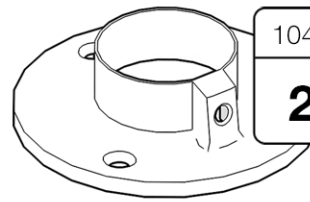


1047
2

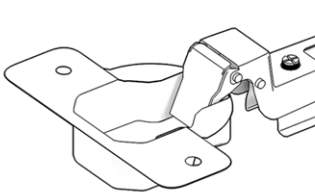


1024
5

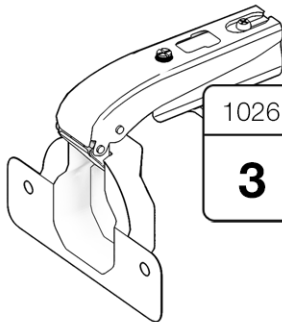


1026
3

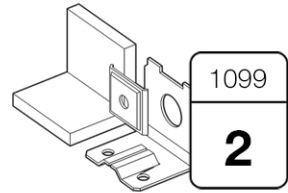


1099
2

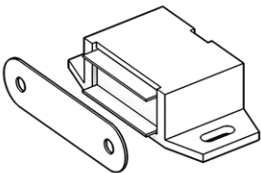


1042
3

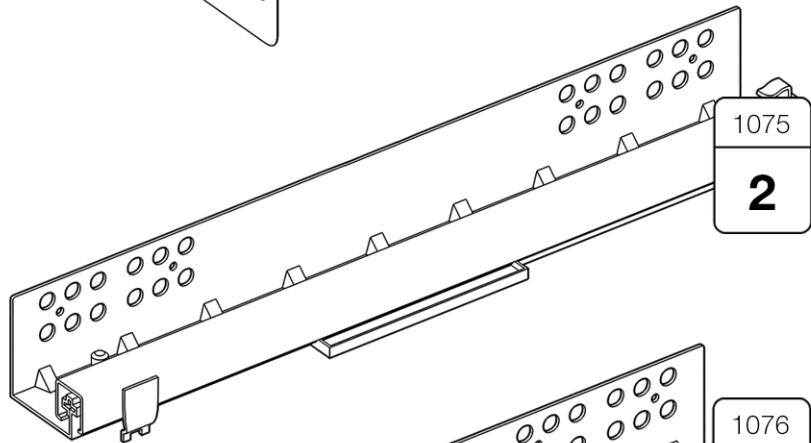


1075
2





1039
8

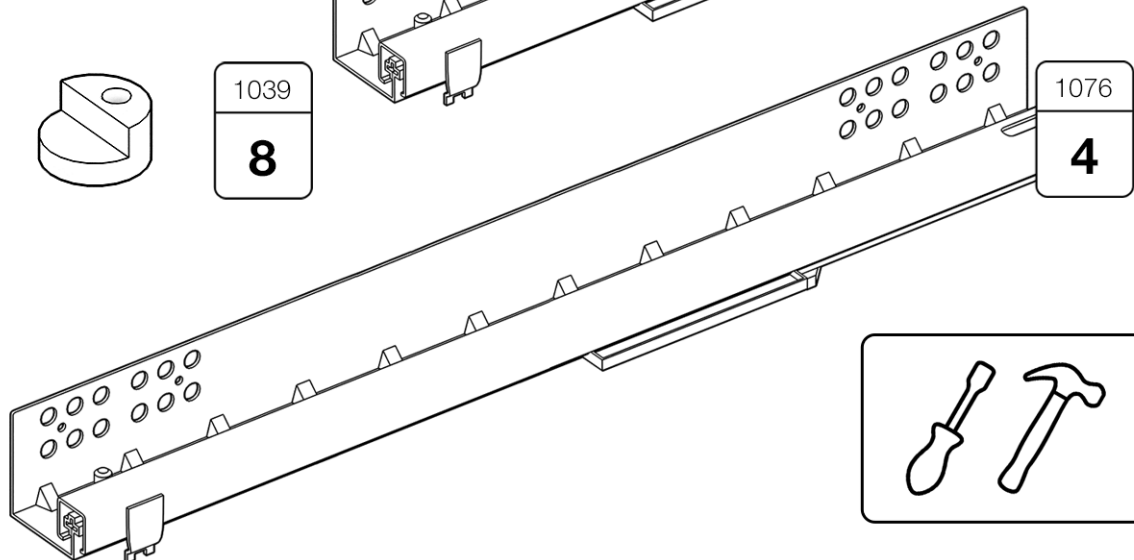


1076
4

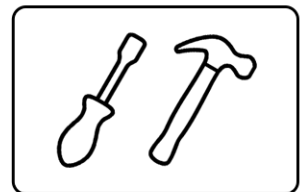


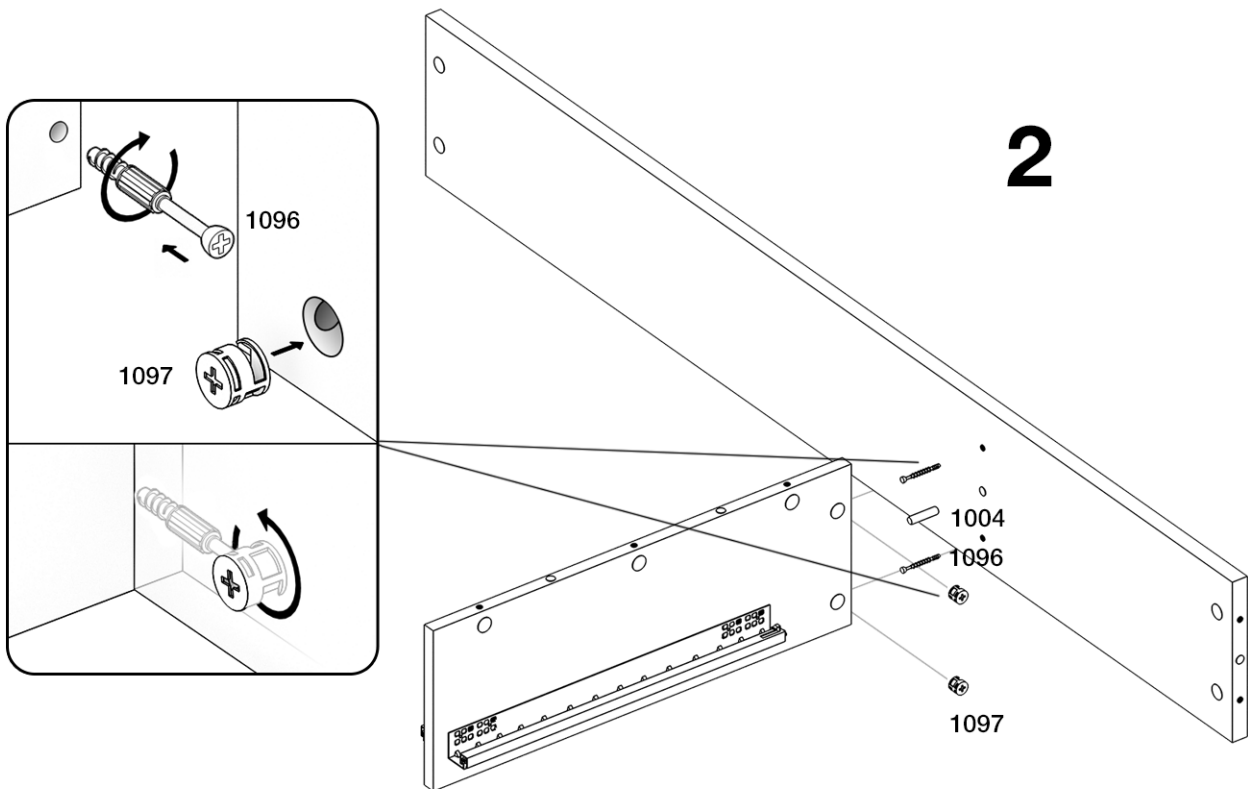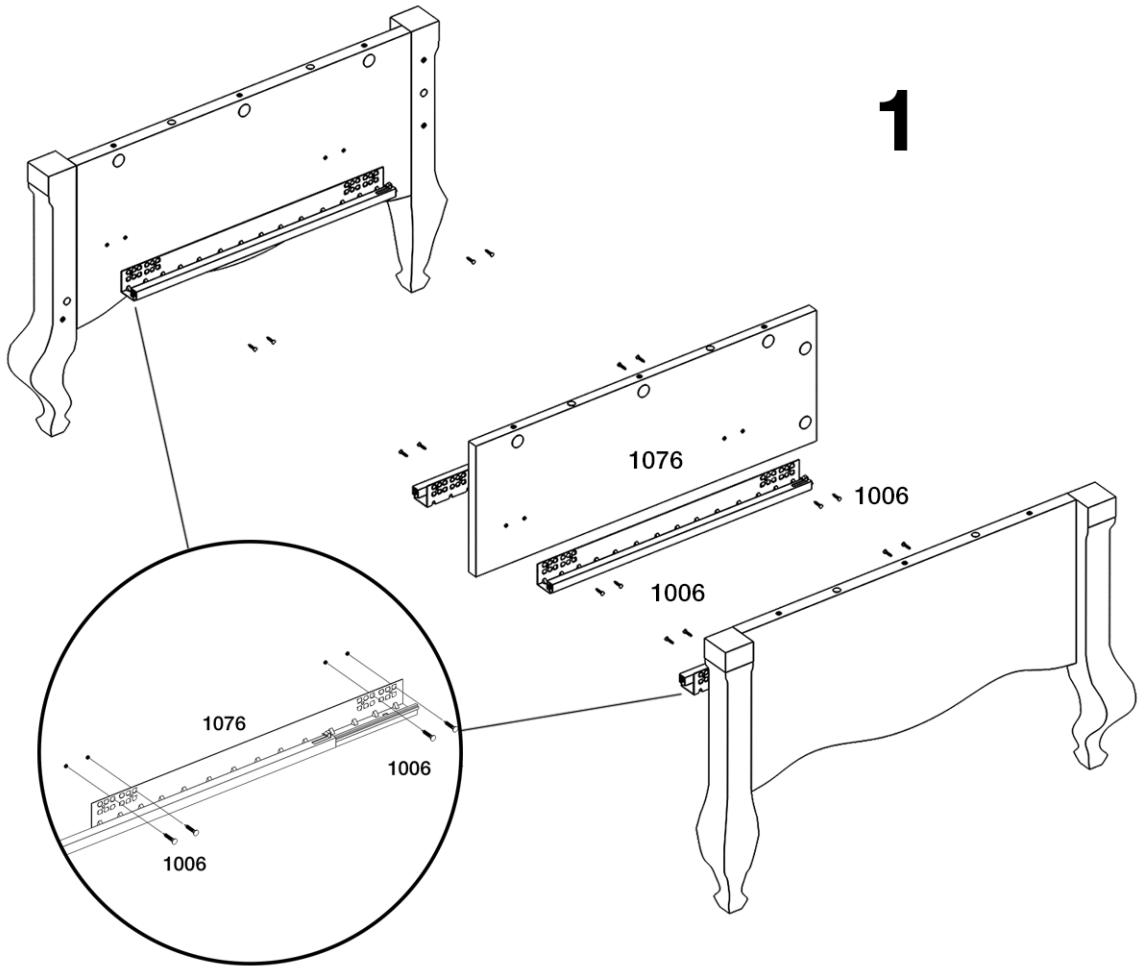




3

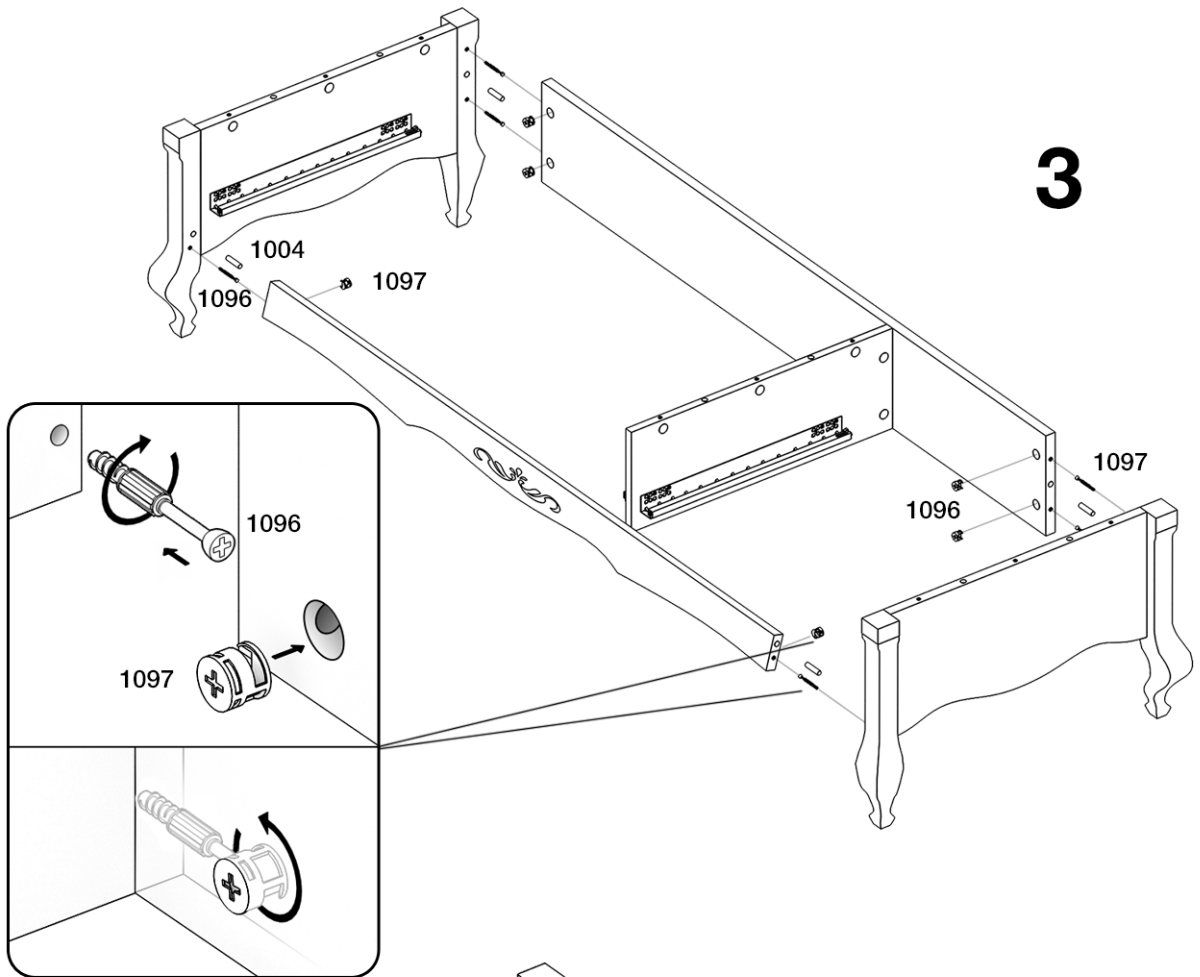

4


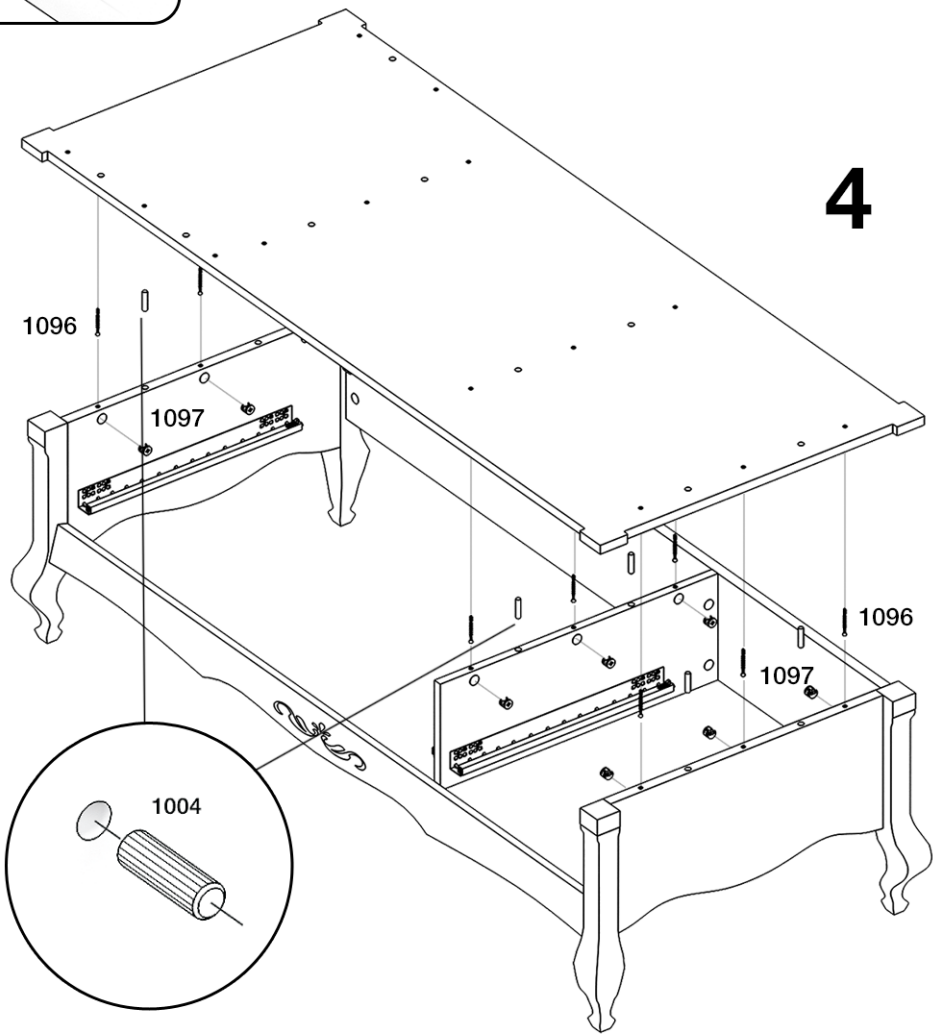


5

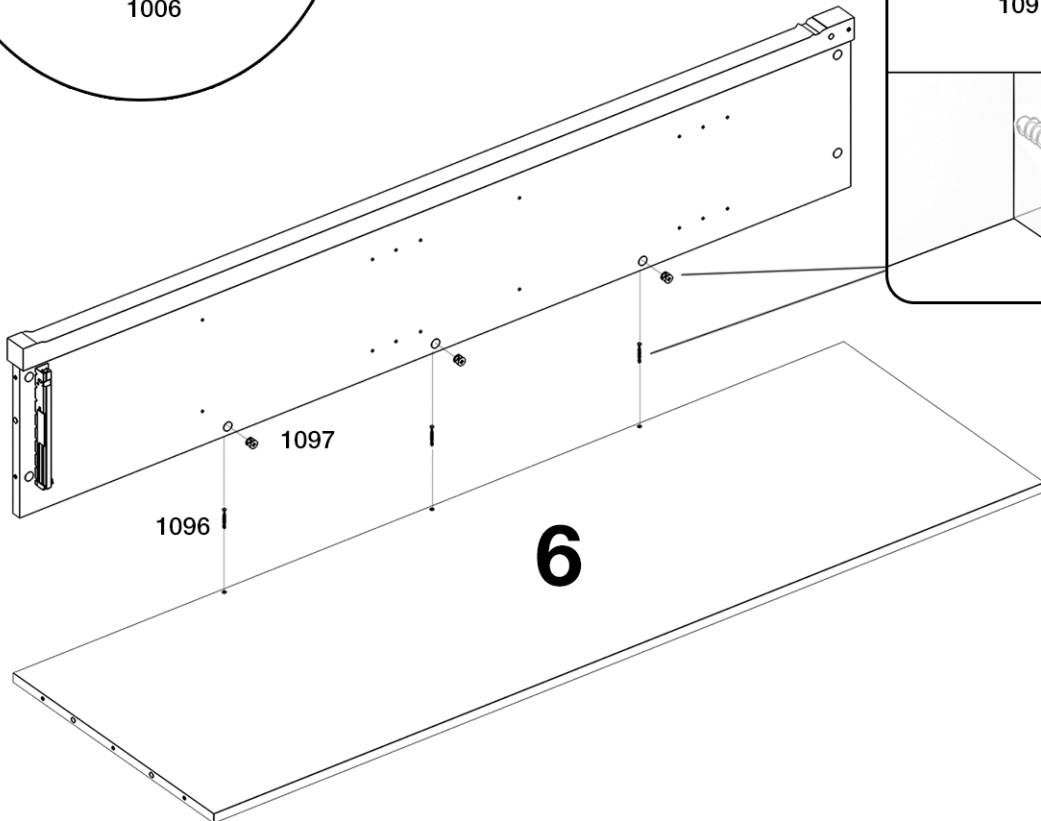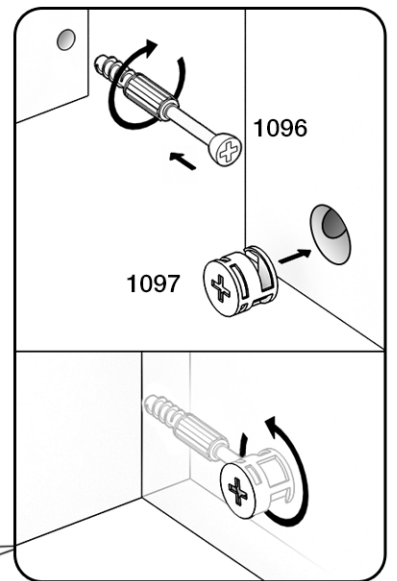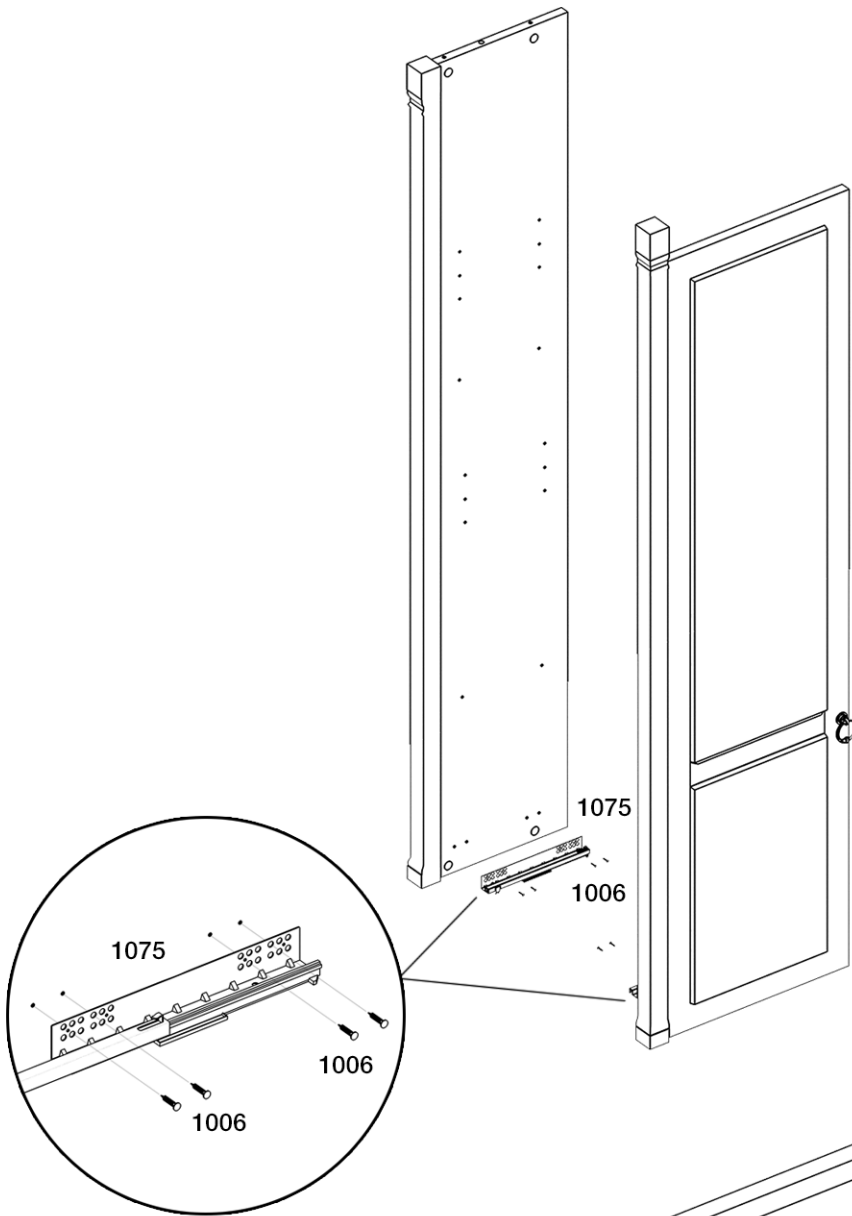




6


7

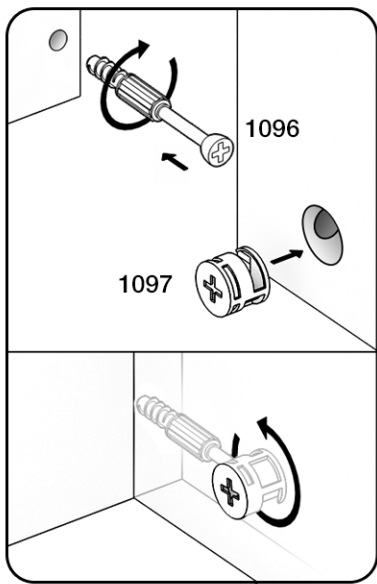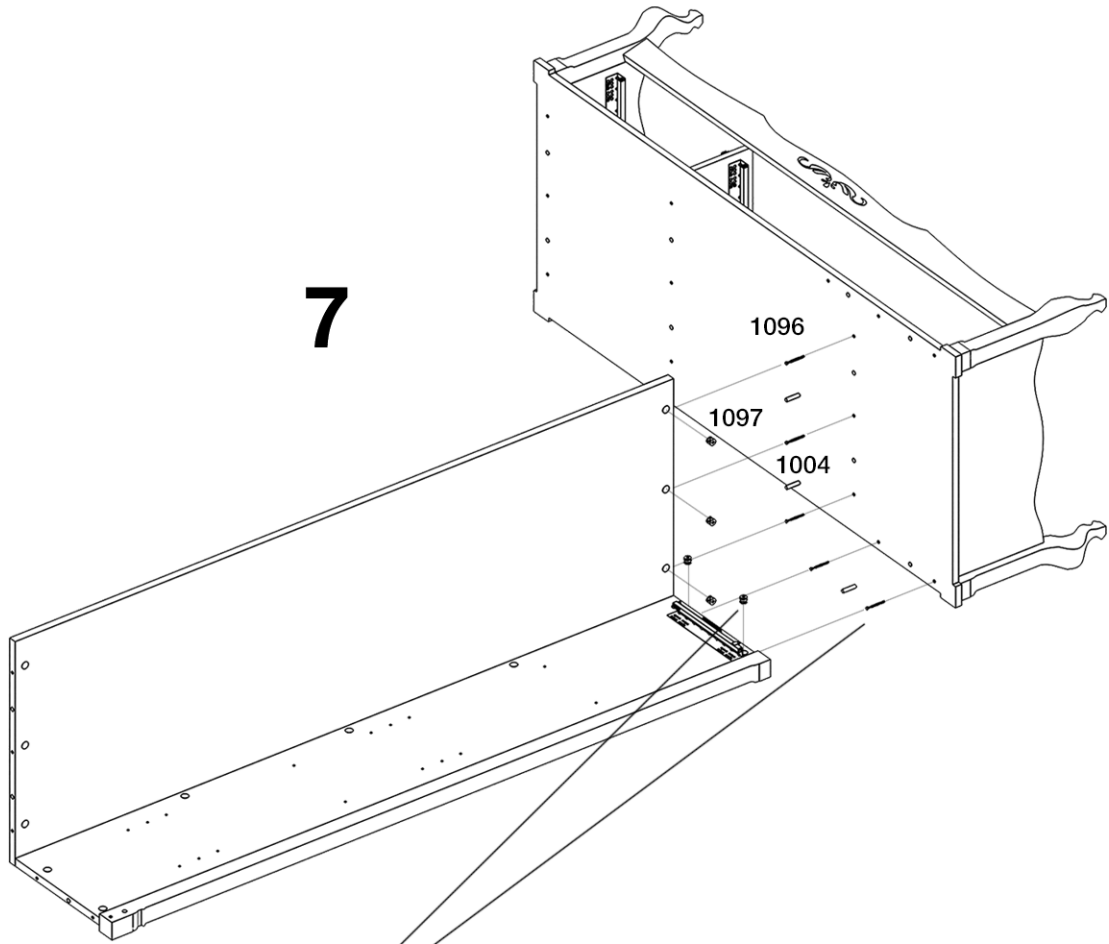


8

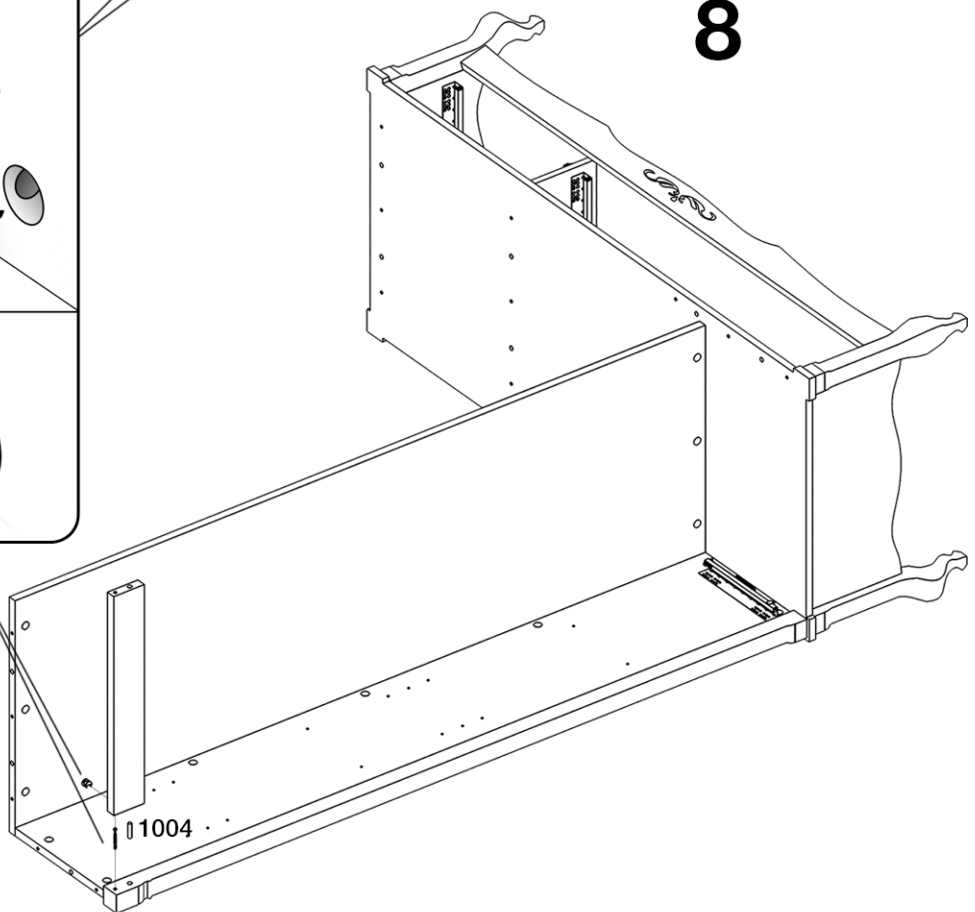

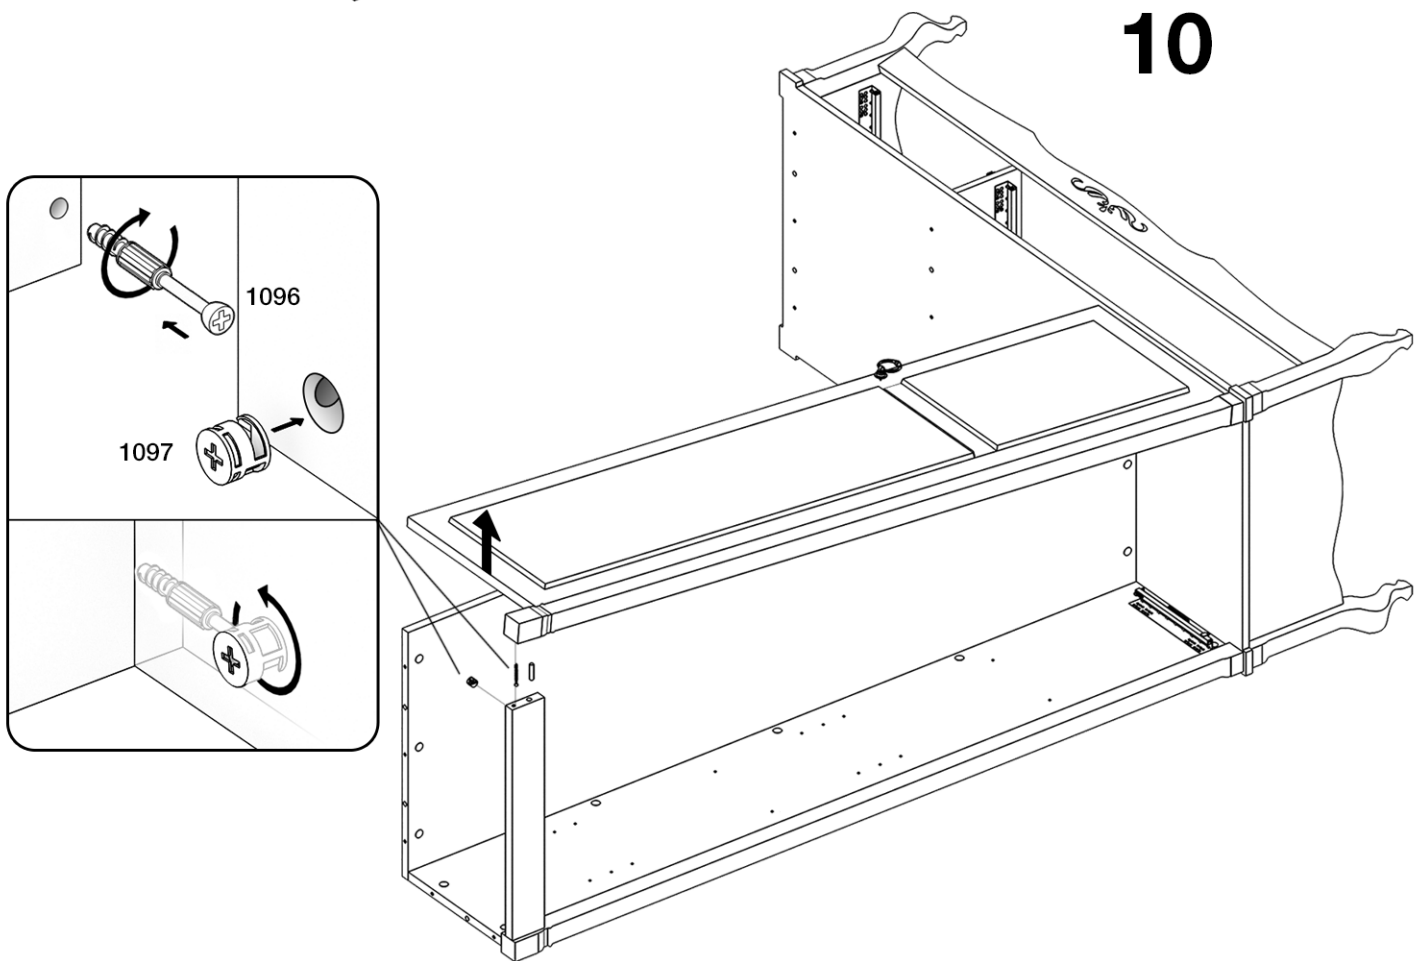
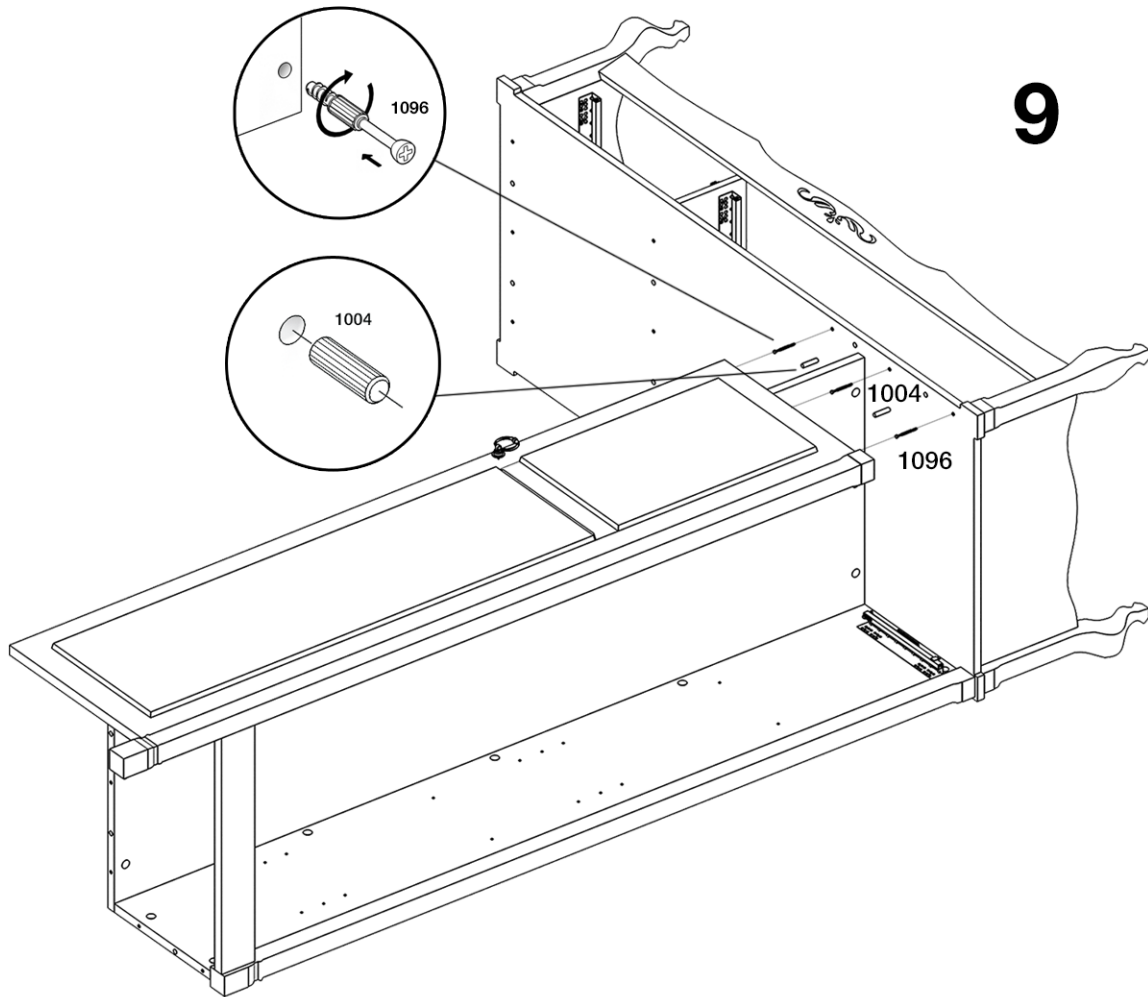


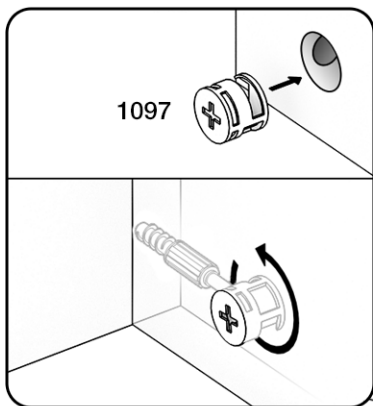



11

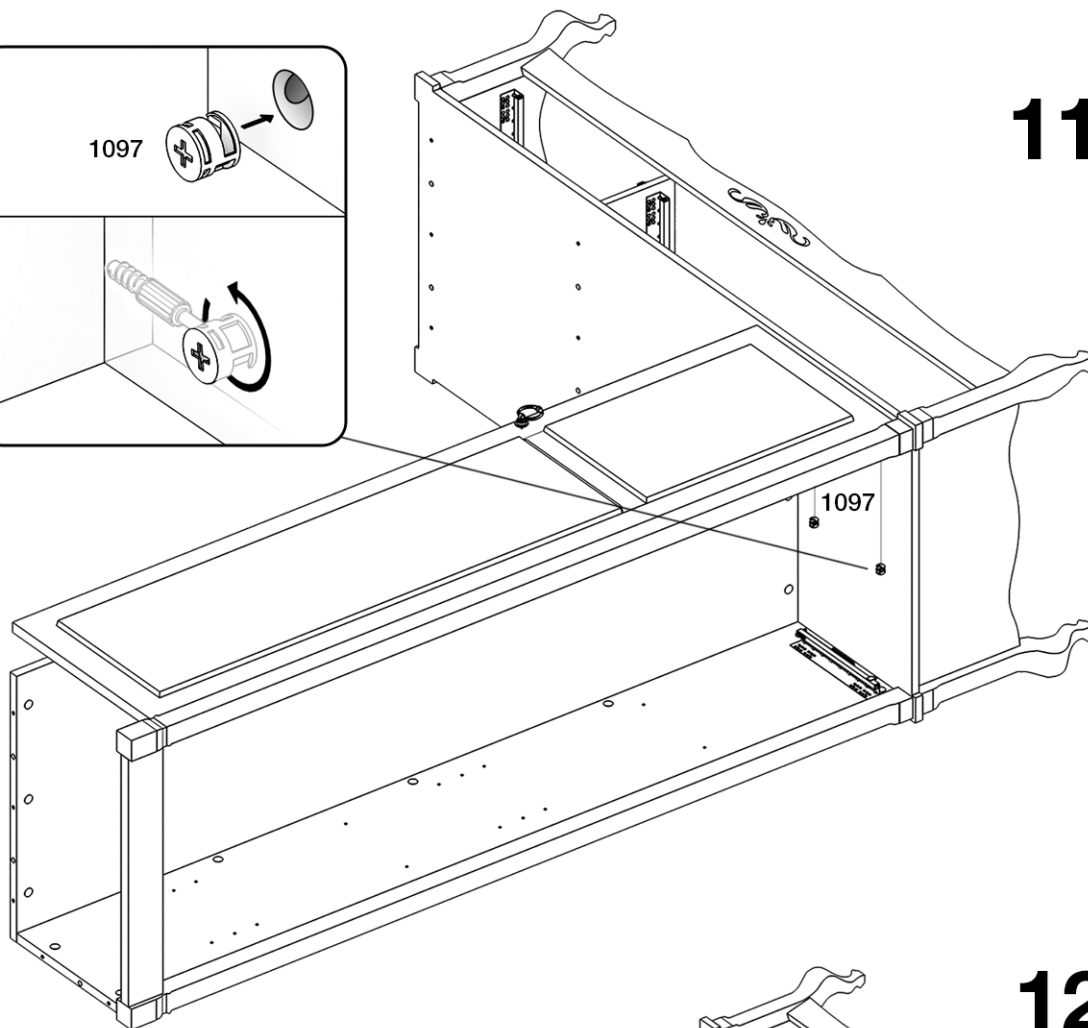


12

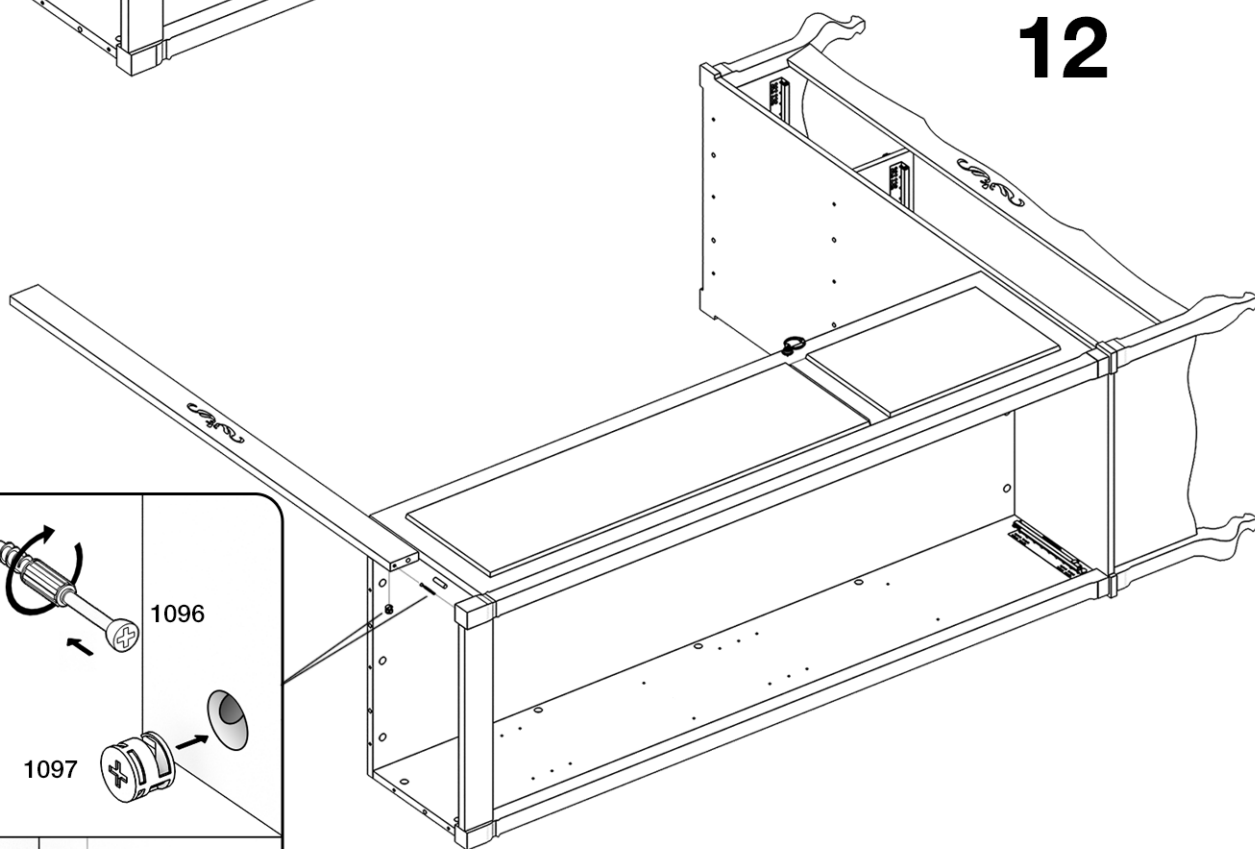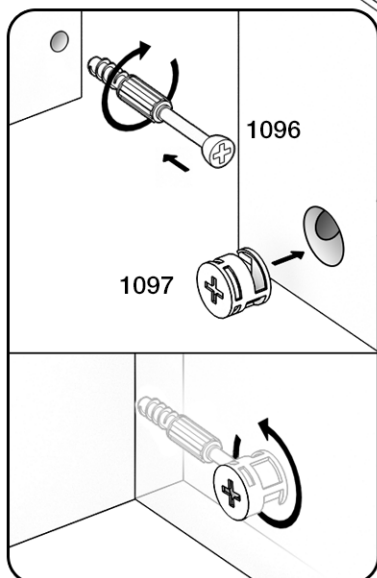




13

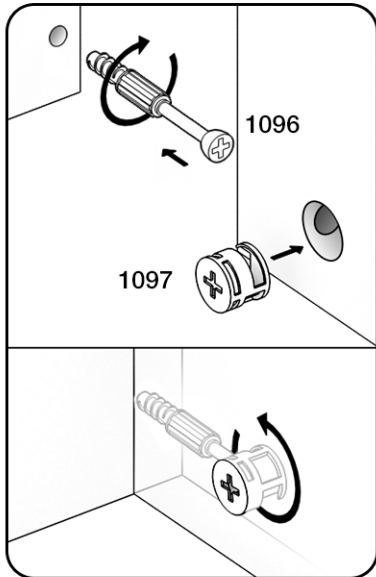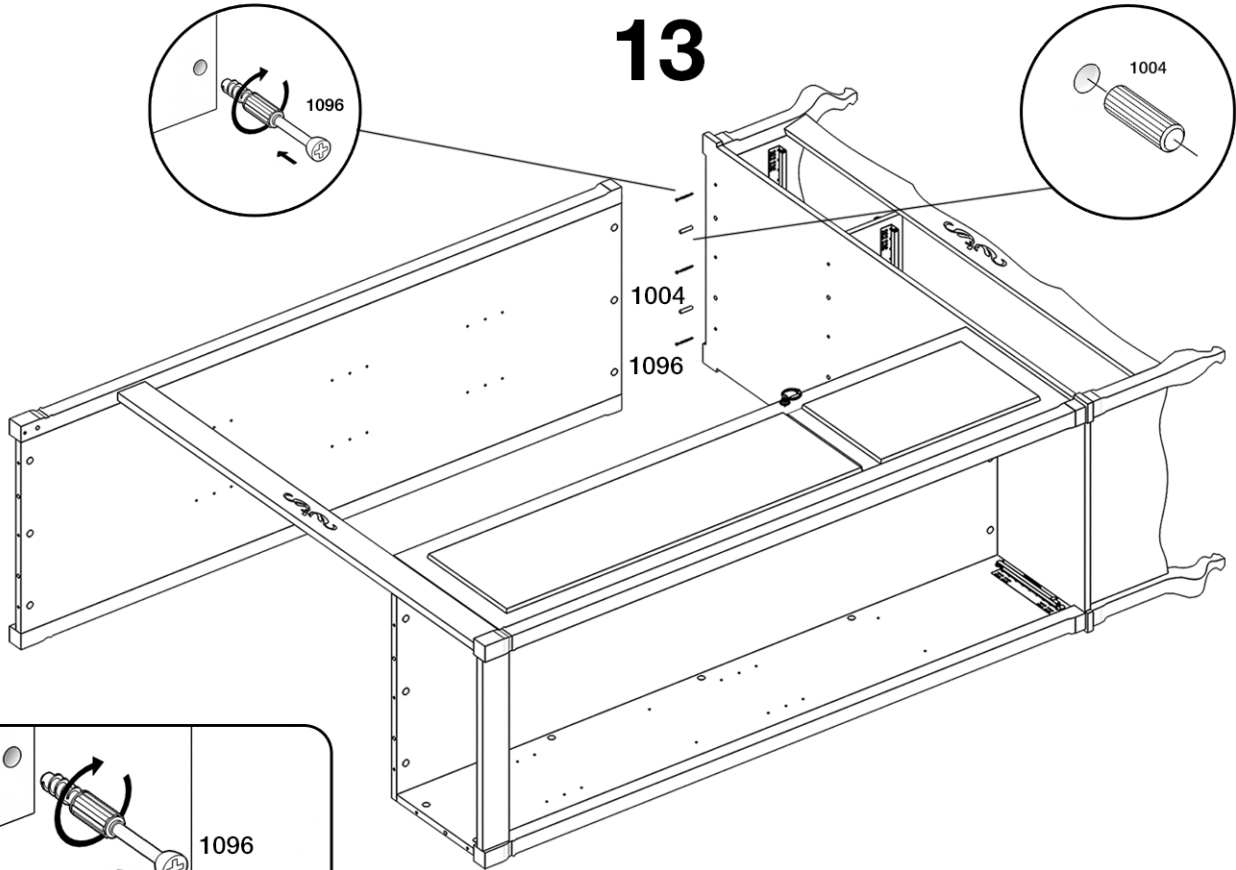


14

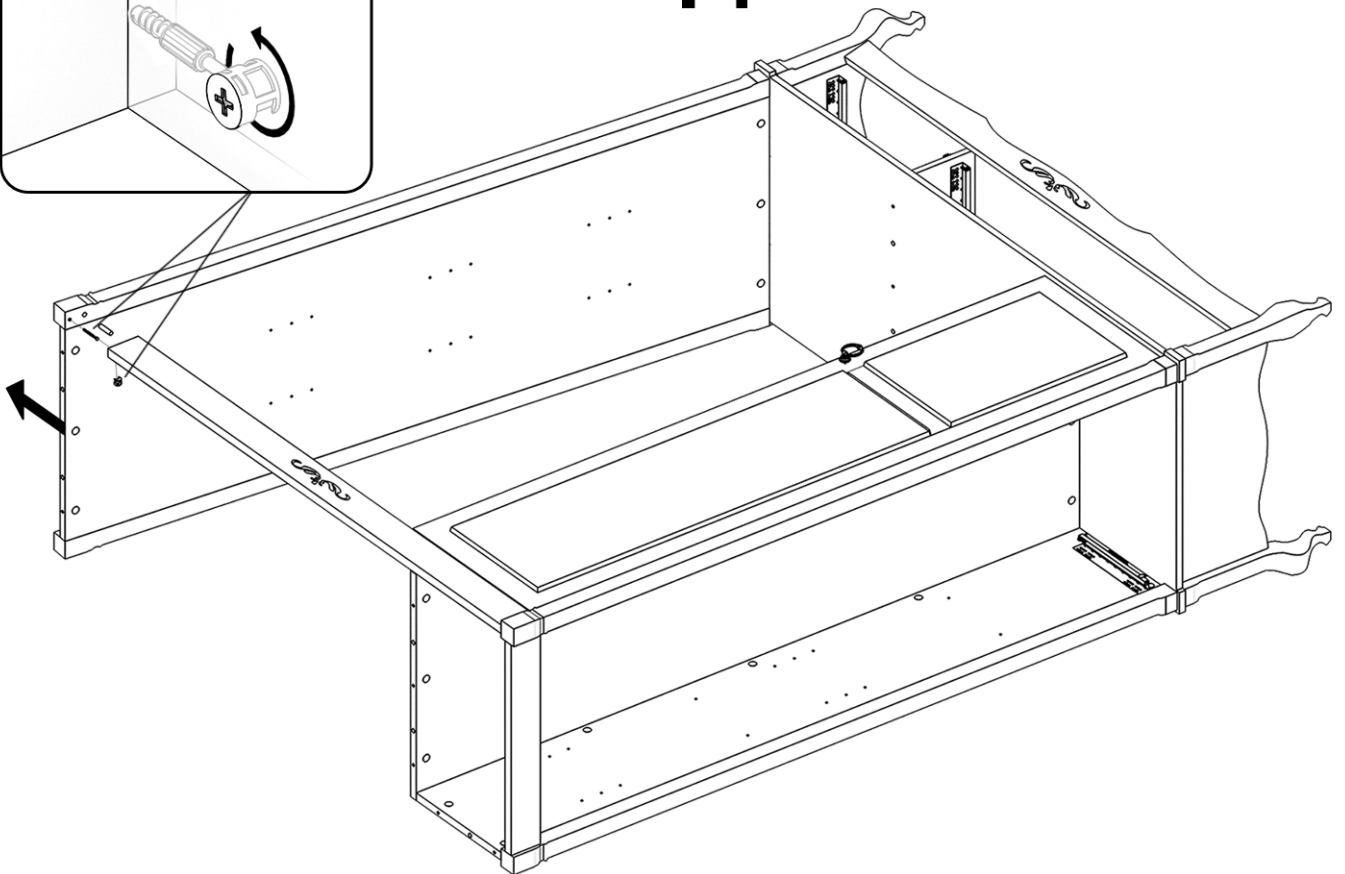


15

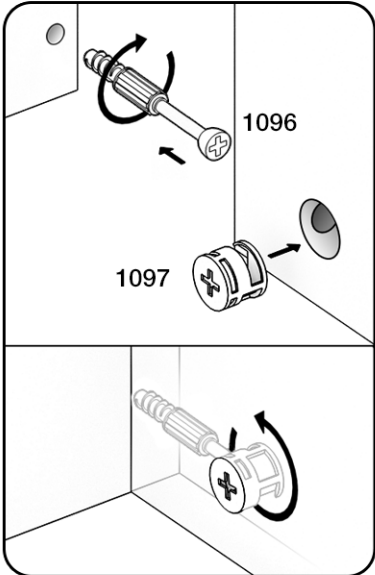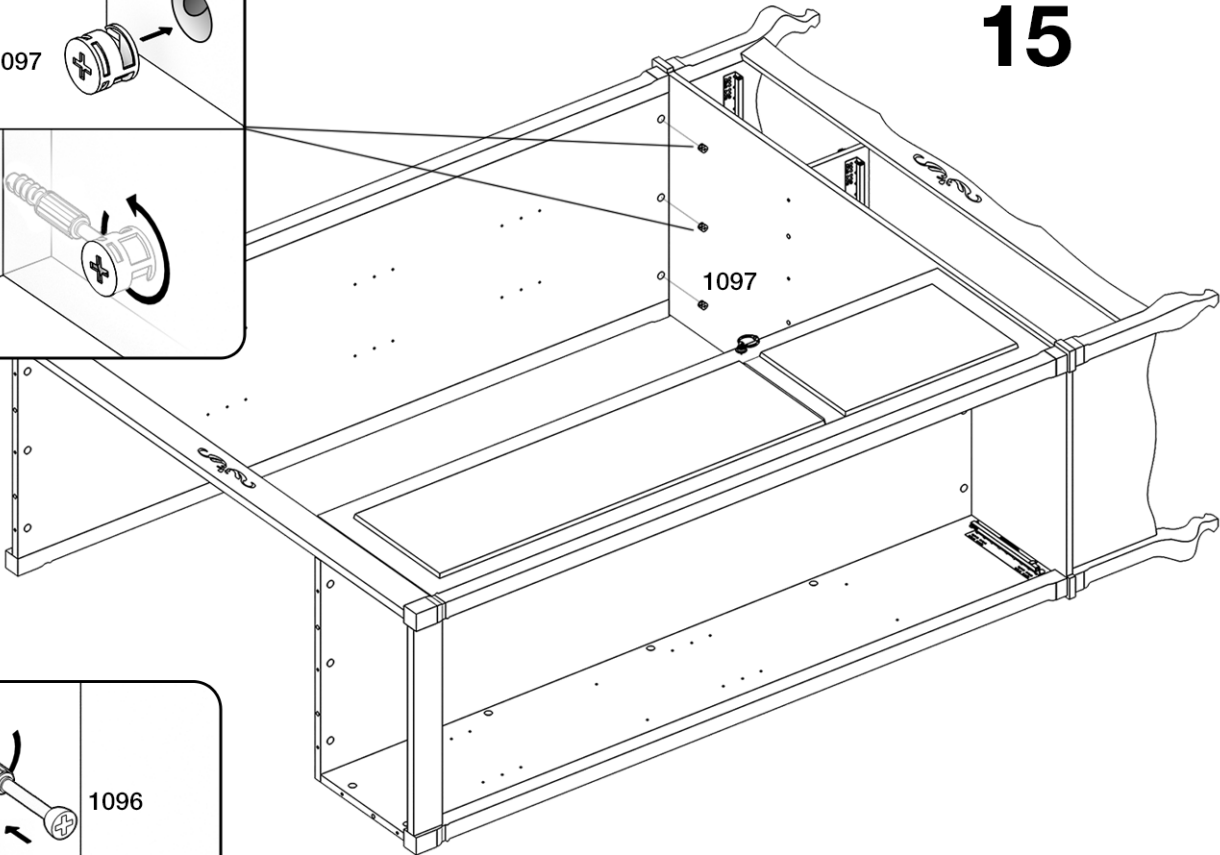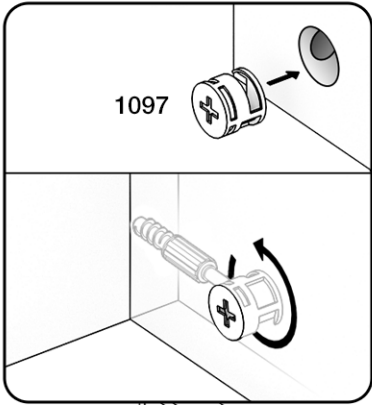

16

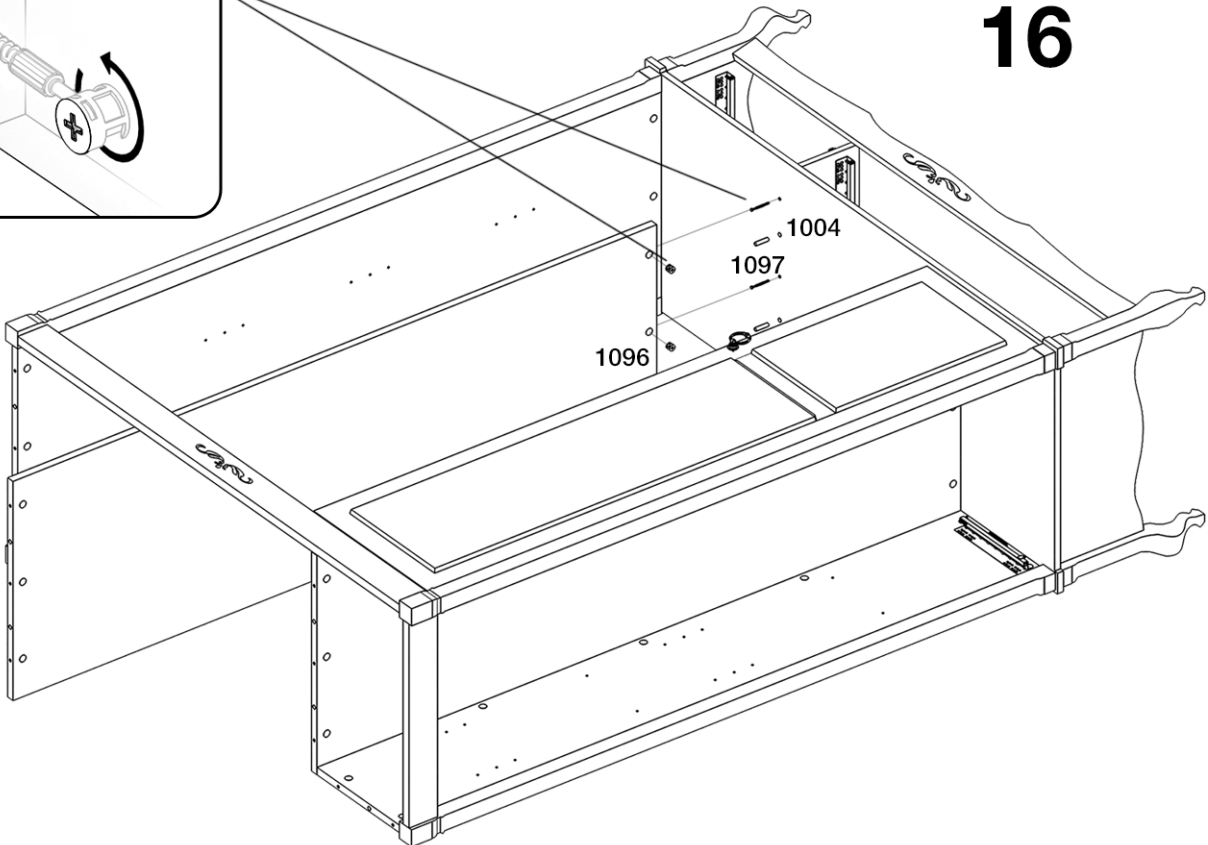

17

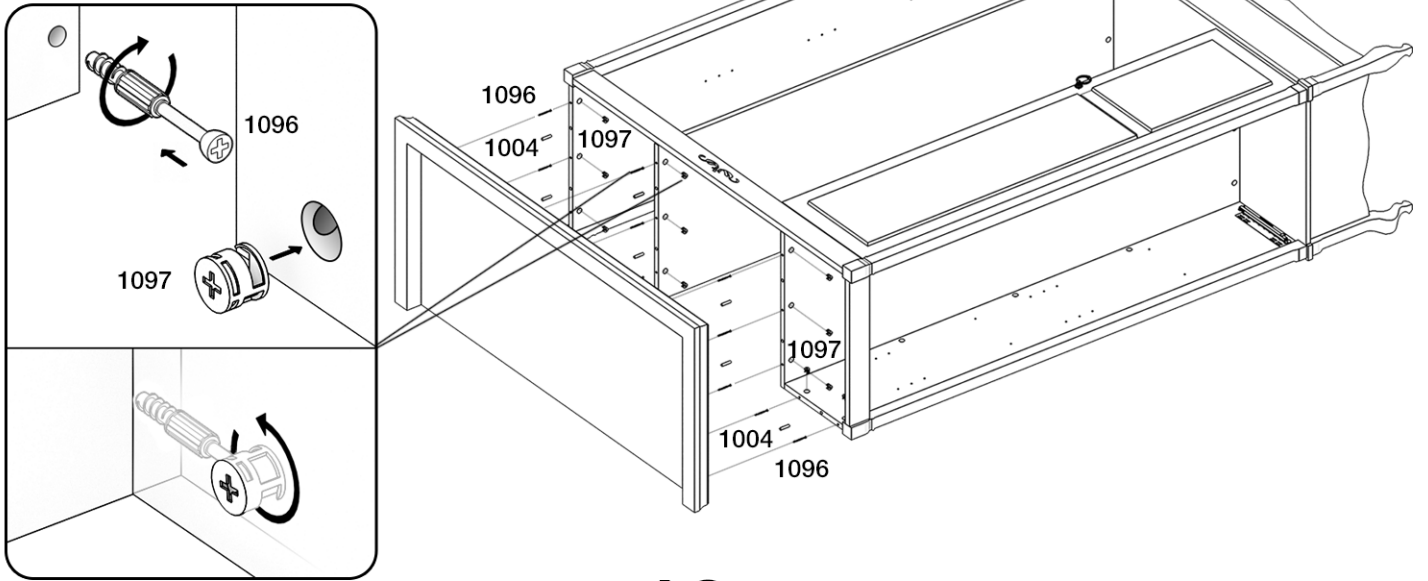

18

