

ДАНИЯ

Комод №6




 **TIMBERICA**

RU Инструкция по сборке

EN Assembly instruction


FI Koontaohje




1006
36



1008
12




1004
8



1096
12



1097
12

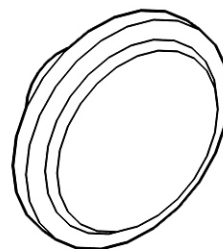

1074
6




1027
12




1028
12







1038
38

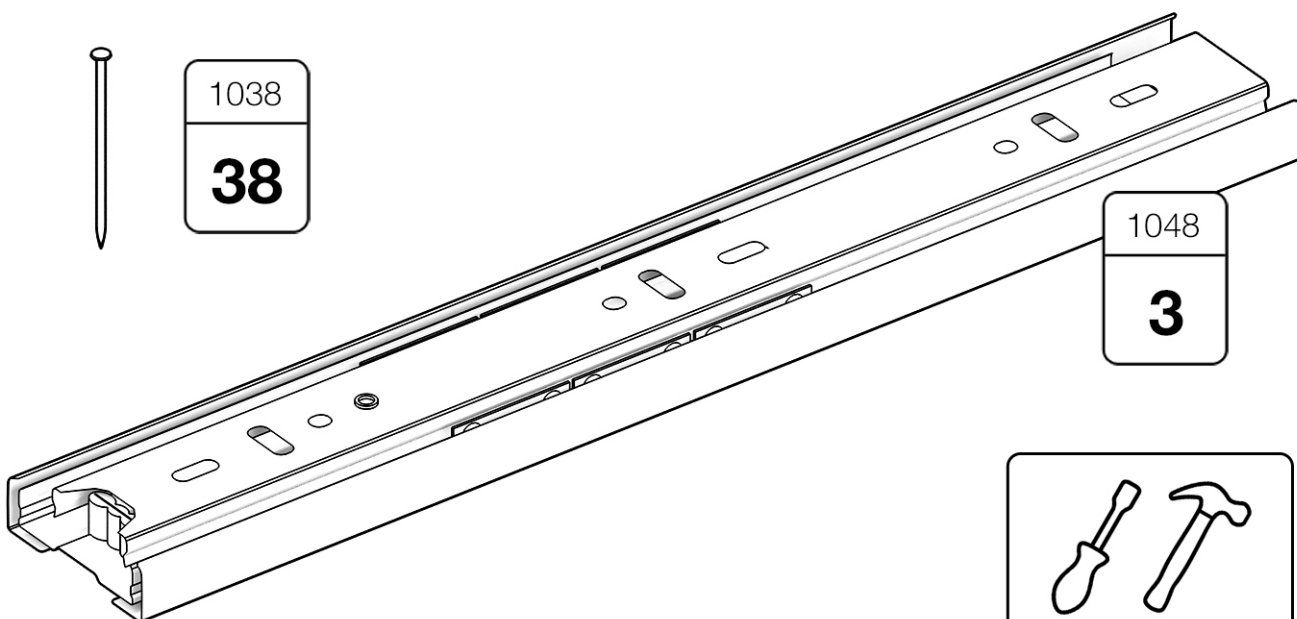



1048
3

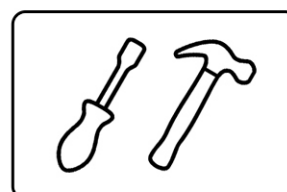

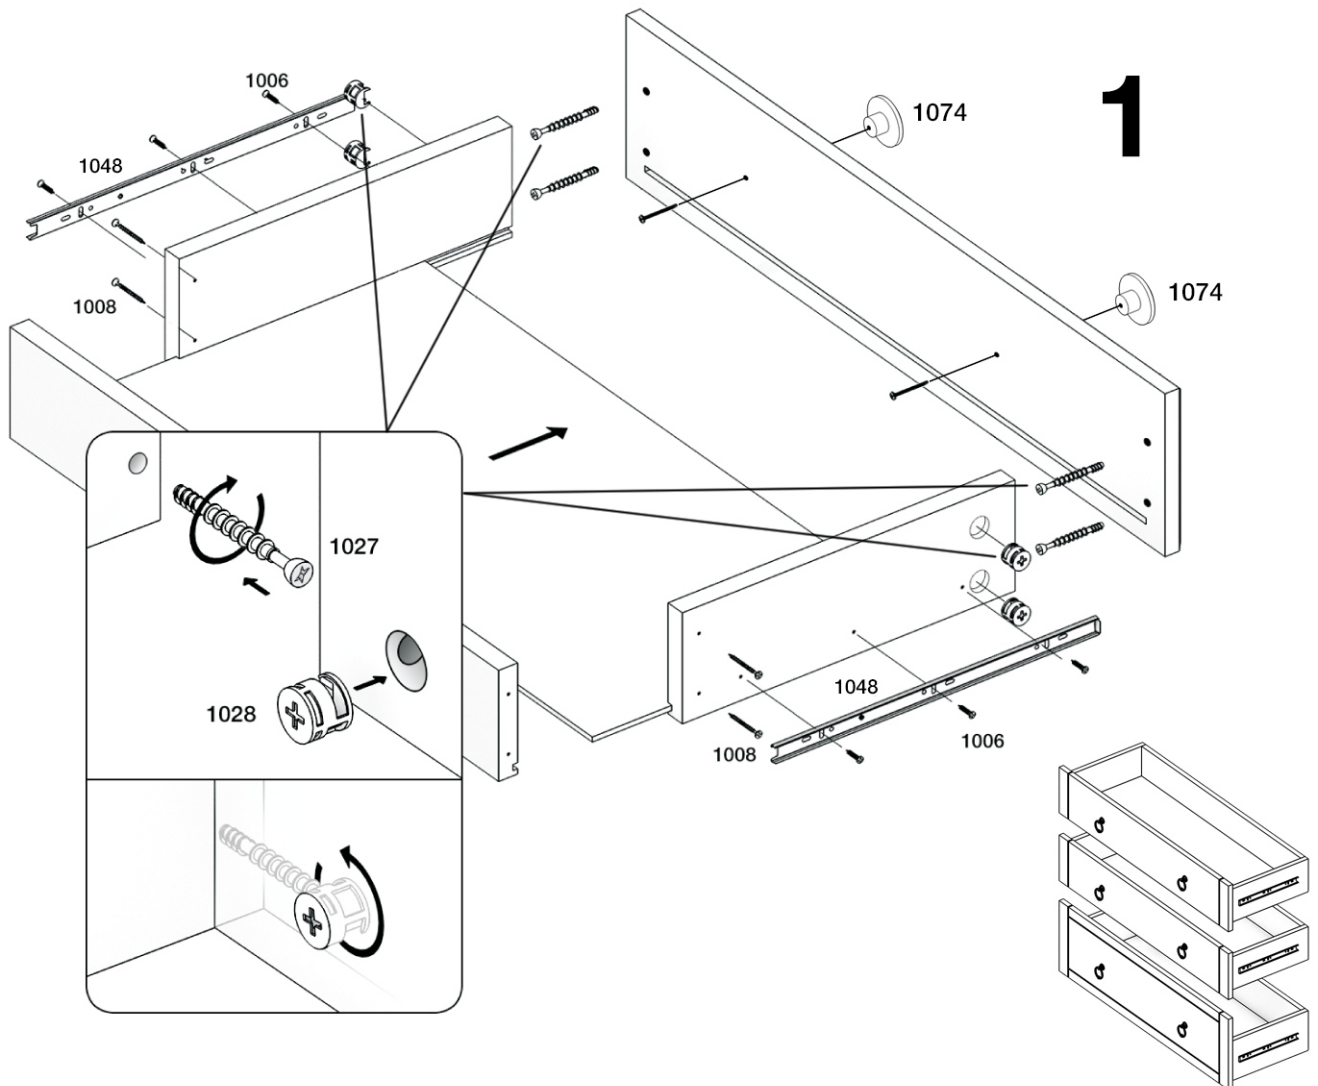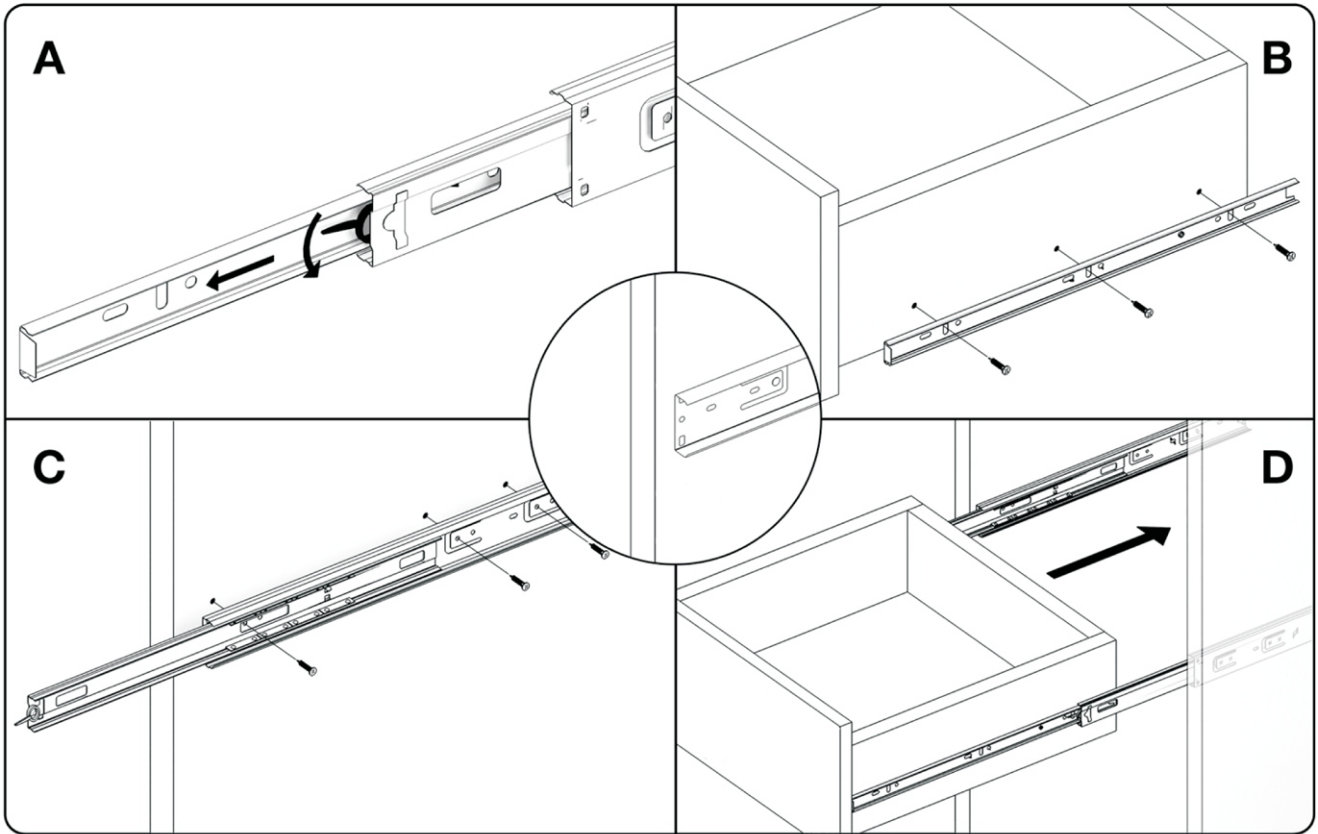

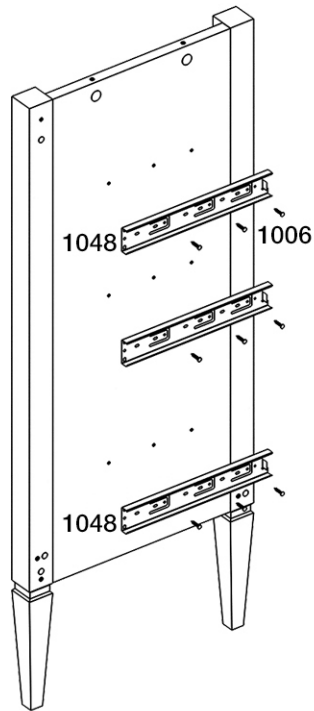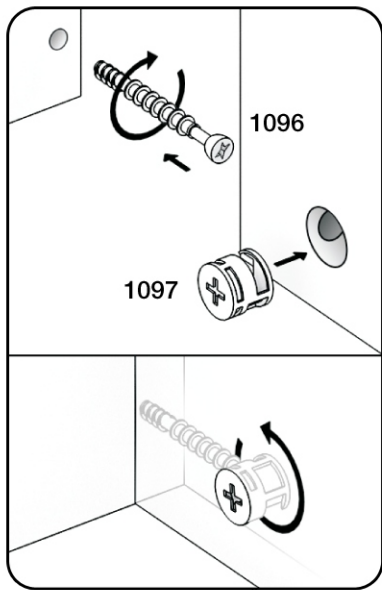

2

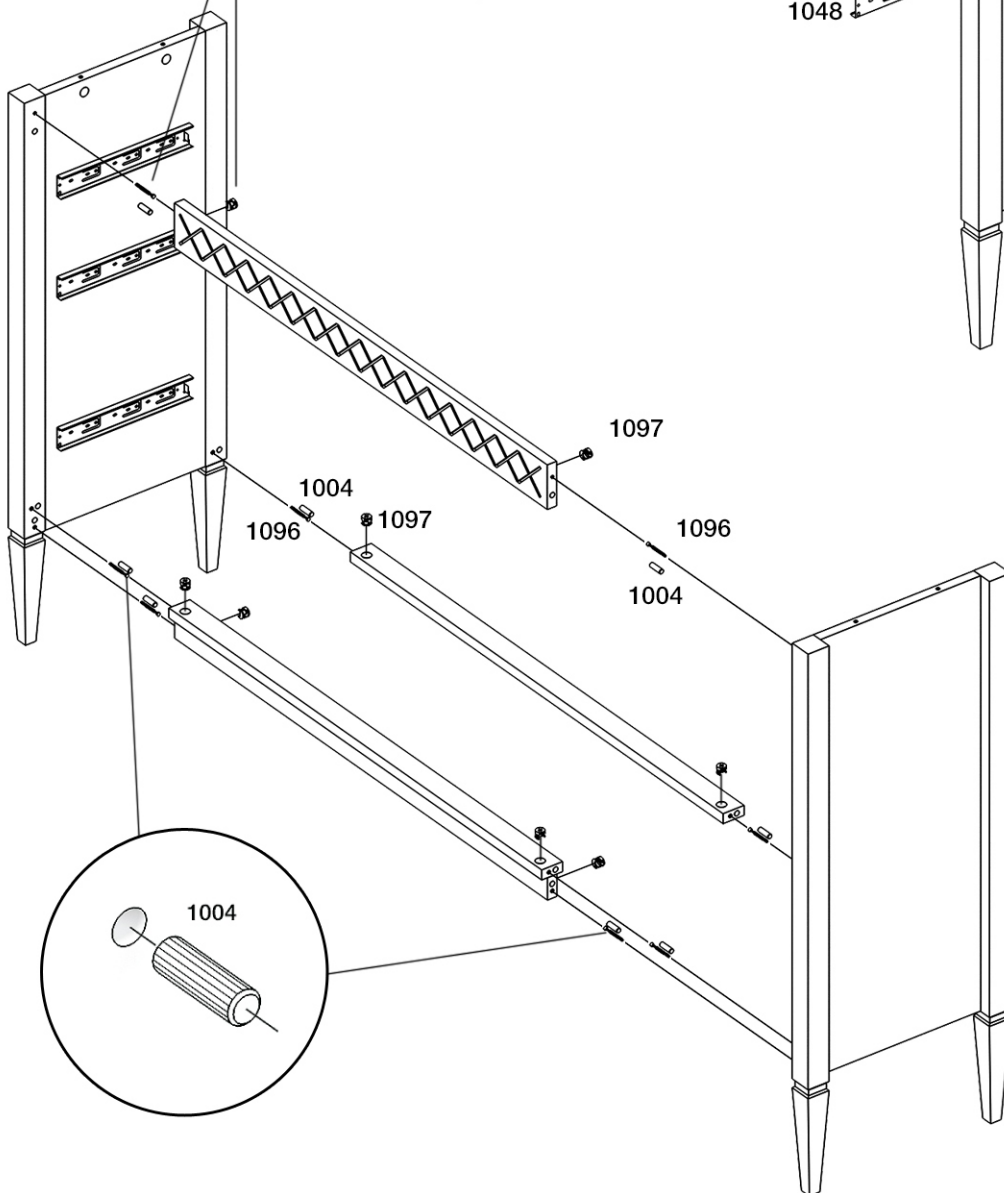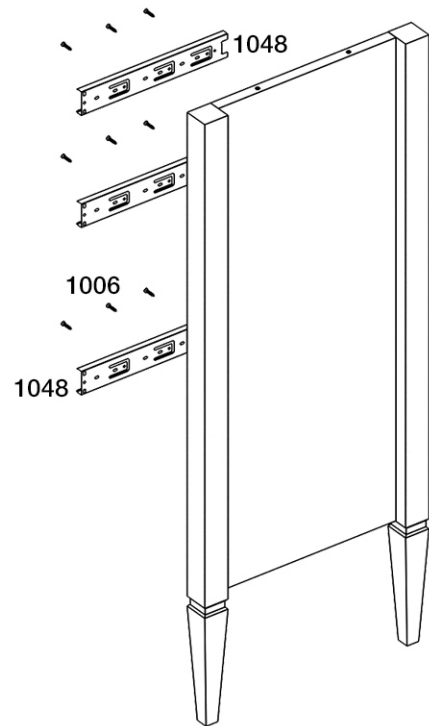

3

